

Ipega LH-9078

Ipega Lehuai Wireless Controller Instruction Manual

Model: LH-9078

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Ipega Lehuai Wireless Controller, Model LH-9078. This controller is designed for use with iOS, Android, and Windows devices, offering a versatile gaming experience.

Please read this manual carefully before using the product to ensure proper functionality and to prevent damage.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- Ipega Lehuai Wireless Controller (LH-9078)
- USB Charging Cable
- Adjustable Phone Holder
- Instruction Manual (this document)



Image 1: The Ipega Lehuai Wireless Controller, its retail box, an adjustable phone holder, and a USB charging cable. The controller is black with red accents, featuring dual analog sticks, a D-pad, action buttons (A, B, X, Y), and shoulder buttons. The phone holder is a separate black clip-on accessory.

3. PRODUCT OVERVIEW

Familiarize yourself with the controller's components:

- **Left Analog Stick:** For directional movement.
- **D-Pad:** Directional pad for precise input.
- **Right Analog Stick:** For camera control or secondary movement.
- **Action Buttons (A, B, X, Y):** For in-game actions.
- **Shoulder Buttons (L1, R1):** Top-mounted buttons.
- **Trigger Buttons (L2, R2):** Bottom-mounted buttons.
- **START Button:** Game start/pause.
- **SELECT Button:** Game menu/options.
- **HOME Button:** Power on/off, mode switching.
- **Charging Port:** Micro USB port for charging.
- **LED Indicators:** Display connection status and battery level.

4. SETUP

4.1. Charging the Controller

1. Connect the small end of the USB charging cable to the controller's charging port.
2. Connect the larger end of the USB cable to a USB power source (e.g., computer, USB wall adapter).
3. The LED indicator will show charging status. A full charge typically takes 2-3 hours.

4. Disconnect the cable once fully charged.

4.2. Pairing with Devices

The controller supports different pairing modes for various operating systems.

4.2.1. Android Pairing

1. Ensure the controller is off.
2. Press and hold the **HOME** button and the **X** button simultaneously until the LED indicator flashes rapidly. This puts the controller into Android pairing mode.
3. On your Android device, go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices. The controller should appear as "Lehuai Gamepad" or similar.
5. Select the controller to pair. The LED indicator will become solid once connected.

4.2.2. iOS Pairing (iCade Mode)

Note: iOS compatibility may vary with game titles. Some games require specific controller support.

1. Ensure the controller is off.
2. Press and hold the **HOME** button and the **B** button simultaneously until the LED indicator flashes rapidly. This puts the controller into iOS iCade pairing mode.
3. On your iOS device, go to Bluetooth settings and turn Bluetooth on.
4. Search for available devices. The controller should appear as "Lehuai Gamepad" or similar.
5. Select the controller to pair. The LED indicator will become solid once connected.

4.2.3. Windows PC Pairing

1. Ensure the controller is off.
2. Press and hold the **HOME** button and the **A** button simultaneously until the LED indicator flashes rapidly. This puts the controller into Windows pairing mode.
3. On your Windows PC, go to Bluetooth settings (Settings > Devices > Bluetooth & other devices).
4. Click "Add Bluetooth or other device" and select "Bluetooth".
5. Select "Lehuai Gamepad" or similar from the list of devices.
6. Follow any on-screen prompts to complete pairing. The LED indicator will become solid once connected.

4.3. Attaching the Phone Holder

1. Locate the slot on the top of the controller designed for the phone holder.
2. Align the phone holder with the slot and gently push it into place until it clicks securely.
3. Adjust the phone holder's angle and extend its clamps to securely hold your smartphone. Ensure the phone is centered and stable.

5. OPERATING THE CONTROLLER

5.1. Power On/Off

- **To Power On:** Press the **HOME** button briefly. The controller will attempt to connect to the last paired device.
- **To Power Off:** Press and hold the **HOME** button for approximately 5 seconds until the LED indicators turn off. The controller will also power off automatically after a period of inactivity.

5.2. Game Compatibility

The Lehuai Wireless Controller is compatible with a wide range of games that support external gamepads on iOS,

Android, and Windows platforms. Game compatibility may vary. For optimal performance, ensure your games are updated to their latest versions.

5.3. LED Indicator Status

LED Status	Meaning
Rapid Flashing	Pairing Mode
Solid On	Connected / Fully Charged
Slow Flashing	Low Battery

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

Problem	Solution
Controller does not power on.	Ensure the controller is charged. Connect it to a power source using the USB cable.
Cannot pair with device.	<ul style="list-style-type: none">◦ Ensure the controller is in the correct pairing mode for your device (Android, iOS, Windows).◦ Make sure Bluetooth is enabled on your device.◦ Forget previous pairings on your device and try again.◦ Restart both the controller and your device.
Buttons or analog sticks are unresponsive.	<ul style="list-style-type: none">◦ Re-pair the controller with your device.◦ Ensure the controller is fully charged.◦ Test with a different game or application to rule out software issues.
Controller disconnects frequently.	<ul style="list-style-type: none">◦ Ensure the controller is within range of your device.◦ Check for interference from other wireless devices.◦ Ensure the controller is fully charged.

8. SPECIFICATIONS

Feature	Detail
Model	LH-9078

Feature	Detail
Connectivity	Bluetooth Wireless
Compatibility	iOS, Android, Windows PC
Power Source	Rechargeable Lithium Battery
Charging Interface	Micro USB
Operating Range	Up to 8 meters (approx. 26 feet)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question