

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Disney](#) /
- › [Disney Frozen II Kids Smart Watch FZN4672AZ User Manual](#)

Disney FZN4672AZ

Disney Frozen II Kids Smart Watch FZN4672AZ User Manual

MODEL: FZN4672AZ

Introduction

This manual provides essential information for the safe and effective use of your Disney Frozen II Kids Smart Watch, model FZN4672AZ. Please read these instructions carefully before operating the device and retain them for future reference.

Product Overview

The Disney Frozen II Kids Smart Watch is designed for children, offering a range of interactive and practical features. It includes a touchscreen interface, a camera, games, and essential timekeeping functions, all within a durable and themed design.



Image: Front view of the Disney Frozen II Kids Smart Watch. The watch features a purple casing and a silicone strap adorned with characters from Frozen II, including Elsa, Anna, and Olaf. The screen displays a digital time and date.

Key Features:

- Touchscreen display for easy navigation.
- Integrated camera for photos and videos.
- Six interactive games for entertainment.
- Activity tracker (pedometer) to encourage movement.
- Alarm, timer, and calculator functions.
- Voice recorder.
- Ten changeable watch faces featuring Frozen II characters.

Setup

1. Charging the Smart Watch:

Before first use, fully charge the smart watch. Connect the provided USB charging cable to the USB port on the side of the watch and to a compatible USB power source (e.g., computer USB port, USB wall adapter). The charging indicator will show the charging status. A full charge typically takes approximately

2-3 hours.



Image: Side view of the Disney Frozen II Kids Smart Watch, showing the USB port for charging and data transfer. The watch has a purple casing and a patterned silicone strap.

2. Powering On/Off:

- To power on: Press and hold the power button (usually located on the side) until the screen illuminates.
- To power off: Press and hold the power button until the power-off option appears on the screen, then confirm.

3. Initial Time and Date Setting:

Upon first power-on or after a factory reset, you may need to set the correct time and date. Navigate to the "Settings" menu on the watch, then select "Time" or "Date" to adjust. Follow the on-screen prompts to set the current time and date.

Operating Instructions

The smart watch features a responsive touchscreen for navigation. Swipe left or right to browse through applications and tap an icon to select it.

1. Changing Watch Faces:

From the home screen, tap and hold the watch face. Swipe left or right to preview the available 10 Frozen II themed watch faces. Tap to select your preferred design.





Image: The watch screen displaying one of the 10 changeable watch faces, featuring Elsa and Anna. Surrounding the main image are smaller previews of other available watch faces, including Olaf, Kristoff, and Sven.

2. Using the Camera:

Tap the "Camera" icon from the main menu. The watch will display a live preview. Tap the screen to take a photo. Photos are saved to the watch's internal memory.

3. Recording Videos:

Tap the "Video" icon. Tap the record button to start and stop recording. Videos are saved to the watch's internal memory.

4. Playing Games:

Select the "Games" icon to access the six pre-loaded interactive games. Choose a game from the list and follow the on-screen instructions to play.

5. Step Counter (Pedometer):

Access the "Activity Tracker" or "Pedometer" application. The watch will automatically count steps when worn. Note: This feature is designed for recreational use and may not provide professional-grade accuracy.

6. Alarm, Timer, and Calculator:

- **Alarm:** Tap the "Alarm" icon, then tap '+' to set a new alarm. Adjust the time and select desired days.
- **Timer:** Tap the "Timer" icon to start a countdown. You can set custom durations.
- **Calculator:** Tap the "Calculator" icon to perform basic arithmetic operations.

7. Voice Recorder:

Tap the "Voice Recorder" icon to record audio. Tap to start and stop recording. Recordings are saved and can be played back from the watch.

Instructional Videos:

Frozen 2 Smartwatch Overview

Your browser does not support the video tag.

Video: A brief overview of the Disney Frozen II Smartwatch, showcasing its design and some of its interactive features. This video is provided by Accutime Watch Corp.

Disney Touchscreen Smart Watch Features (Model: FZN4672AZ)

Your browser does not support the video tag.

Video: Demonstrates the touchscreen functionality and various applications of the Disney Smart Watch, model FZN4672AZ. This video is provided by Amazon Product Imaging.

Maintenance

Proper care ensures the longevity of your smart watch.

- **Cleaning:** Wipe the watch screen and strap with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The watch is not waterproof. Avoid submerging it in water or exposing it to heavy rain.
- **Battery Care:** To maintain battery health, avoid extreme temperatures. Charge the watch regularly and do not allow the battery to fully deplete for extended periods.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight when not in use.

Troubleshooting

If you encounter issues with your smart watch, refer to the following common solutions:

Problem	Solution
Watch does not turn on.	Ensure the watch is fully charged. Connect it to a power source for at least 30 minutes.
Screen is unresponsive.	Restart the watch by holding the power button. If unresponsive, allow the battery to drain completely, then recharge and restart.
Battery drains quickly.	Reduce screen brightness, limit game usage, and ensure no applications are running in the background unnecessarily.
Cannot save photos/videos.	Check the available storage space on the watch. Delete old files if necessary.

Specifications

Feature	Detail
Model Number	FZN4672AZ
Product Dimensions	6.1 x 3.58 x 3.31 inches
Item Weight	1.4 ounces
Recommended Age	6 years
Battery Type	1 Lithium Polymer battery (included)
Display Type	Digital
Band Material	Silicone
Special Features	Camera, Pedometer, Audio Recording, Alarm Clock, Time Display

Warranty and Support

For detailed warranty information regarding your Disney Frozen II Kids Smart Watch, please refer to the official warranty document. A PDF version of the warranty information is typically available through the manufacturer or retailer's support channels.

For further assistance or technical support, please contact the manufacturer, Accutime Watch Corp., or refer to their official website for contact details and additional resources.

Note: Warranty information is subject to change. Always refer to the most current documentation provided by the

manufacturer.