

Timex TW2U71500

Timex Easy Reader 38mm Watch (Model TW2U71500) Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Timex Easy Reader 38mm Watch, Model TW2U71500. Please read this guide thoroughly to ensure proper use and longevity of your timepiece.





Image 1.1: Front view of the Timex Easy Reader 38mm watch, featuring a gold-tone case, white dial with bold black Arabic numerals, and a brown leather strap.

2. SETUP

2.1 Initial Activation and Time Setting

Your Timex watch is shipped with a crown guard to preserve battery life. Follow these steps to activate your watch and set the time:

- 1. Remove the Crown Guard:** Gently pull out and remove the small plastic spacer (crown guard) located between the watch crown and the case.
- 2. Set the Time:** Pull the crown out to the time-setting position. Rotate the crown in either direction until the hour and minute hands display the correct time.
- 3. Activate the Watch:** Push the crown back into its original position against the watch case. The second hand should begin to move, indicating the watch is now active.

Your browser does not support the video tag.

Video 2.1: Official Timex video demonstrating the removal of the crown guard and activation of the watch to begin ticking.

2.2 Adjusting the Leather Strap

The genuine leather strap is adjustable to fit wrist circumferences up to 8 inches. Locate the buckle and the

series of holes on the strap. Insert the pin of the buckle into the hole that provides a comfortable and secure fit on your wrist.



Image 2.2: Side profile of the watch, highlighting the crown and the adjustable brown leather strap with its gold-tone buckle.

3. OPERATING FEATURES

3.1 Indiglo Night-Light

Your Timex Easy Reader watch features the Indiglo night-light. To activate the Indiglo, press and hold the crown. The entire dial will illuminate for easy reading in low-light conditions.

3.2 Water Resistance

This watch is water resistant to 30 meters (100 feet). This means it is suitable for splashes or brief immersion in water. It is **not** recommended for swimming, bathing, or diving. To maintain water resistance, do not operate the crown while the watch is wet or submerged.

DEGREE OF WATER RESISTANCE OF TIMEX® WATCHES

	Rain Resistant	Light Swimming	Snorkeling	Poolside Diving	Surfing	Recreational Scuba Diving
30 METERS 98 FEET 60 ATMS	⊕					
50 METERS 164 FEET 86 ATMS	⊕	⊕	⊕	⊕		
100 METERS 328 FEET 160 ATMS	⊕	⊕	⊕	⊕	⊕	
200 METERS 656 FEET 284 ATMS	⊕	⊕	⊕	⊕	⊕	⊕

Watches labeled water-resistant without a depth indicated can withstand splashes and rain, but should not be submerged. To maintain water resistance, do not press any buttons under water unless your watch is indicated as 200 meter water resistant.

Image 3.1: A chart illustrating the degree of water resistance for Timex watches, indicating that 30 meters is suitable for rain and splashes but not swimming or diving.

Your browser does not support the video tag.

Video 3.2: Official Timex video showcasing the Easy Reader watch, including its design and the Indiglo backlight feature.

4. MAINTENANCE

4.1 Battery Replacement

Your watch is powered by one Lithium Metal battery (included). When the watch stops running, it indicates that the battery needs to be replaced. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

4.2 Strap Care

The genuine leather strap should be kept dry and clean. Avoid prolonged exposure to direct sunlight, extreme temperatures, and moisture, as these can cause the leather to crack, fade, or deteriorate. Clean the strap with a soft, damp cloth and allow it to air dry completely.

4.3 Case Care

To clean the watch case and crystal, use a soft, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, which can damage the finish.





Image 4.1: Rear view of the watch, displaying the stainless steel case back with Timex branding and water resistance markings.

5. TROUBLESHOOTING

- **Watch Not Running:** Ensure the crown guard has been removed and the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Time Inaccuracy:** If the watch is consistently fast or slow, the battery may be low, or the movement may require servicing.
- **Indiglo Not Working:** Check if the crown is fully pushed in. If the Indiglo still does not illuminate, the battery may be depleted.

For issues not resolved by these steps, please refer to the Warranty and Support section.

6. SPECIFICATIONS

Feature	Detail
Model Number	TW2U71500
Case Diameter	38mm
Case Material	Low Lead Brass
Strap Material	Genuine Leather (20mm)
Dial	White, Easy-to-Read with Bold Arabic Numerals
Backlight	Indiglo Night-Light
Water Resistance	30 meters (100 feet)
Battery Type	1 Lithium Metal battery (included)

7. WARRANTY AND SUPPORT

Your Timex watch is covered by a manufacturer's warranty. For detailed warranty information, service, or support, please visit the official Timex website or contact Timex customer service directly. Keep your proof of purchase for warranty claims.