



Manuals.plus /

› YEDI HOUSEWARE /

› Yedi Total Package 6-in-1 Digital Indoor Grill User Manual

YEDI HOUSEWARE GV019

Yedi Total Package 6-in-1 Digital Indoor Grill User Manual

Model: GV019

Brand: YEDI HOUSEWARE



Image: The Yedi Total Package 6-in-1 Digital Indoor Grill shown with its included grill plates, waffle plates, two silicone egg rings, and a spatula/tongs accessory.

1. INTRODUCTION

The Yedi Total Package 6-in-1 Digital Indoor Grill is a versatile kitchen appliance designed to function as a contact grill, waffle maker, panini press, full grill, full griddle, and half grill/half griddle. It features digital controls for precise temperature management and comes with a deluxe accessory kit to enhance your cooking experience.

Replace The Need For 6 Different Appliances



Contact Grill



Full Grill



Half Grill



Panini Press



Full Griddle



Waffle Maker

Image: A visual representation of the Yedi 6-in-1 grill's various configurations, including contact grill, full grill, half grill, panini press, full griddle, and waffle maker modes.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance housing in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. COMPONENTS AND ACCESSORIES

Your Yedi Total Package Grill comes with the following components and accessories:

- Main Unit with Digital Controls
- Reversible Grill/Griddle Plates (2 sets)
- Waffle Plates (2 sets)
- Silicone Egg Rings (2)
- Spatula/Tongs Accessory (BPA-free & heat-resistant)
- Built-in Drip Tray



Digital Grill



Tongs/ Spatula



Egg Rings /
Mini Pancakes

Comes With A Deluxe Accessories Kit



Reversible Grill/ Griddle Plates



Waffle Plates

Image: The Yedi 6-in-1 grill displayed with its full accessory kit, highlighting the interchangeable plates, egg rings, and spatula/tongs.

4. INITIAL SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean Plates:** Before first use, wash all removable plates (grill, griddle, waffle) and the drip tray in warm, soapy water. Rinse thoroughly and dry completely. All plates are dishwasher safe.

Your browser does not support the video tag.

Video: A demonstration of how to easily remove and clean the cooking plates, highlighting their dishwasher-safe design.

3. **Insert Plates:** Ensure the main unit is cool and unplugged. Align the desired cooking plates (grill, griddle, or waffle) with the slots on the upper and lower heating elements. Press firmly until they click into place.
4. **Position Drip Tray:** Slide the built-in drip tray into its designated slot at the back of the unit to collect excess grease and liquids during cooking.
5. **Placement:** Place the appliance on a stable, heat-resistant, and flat surface, away from walls or heat-sensitive

materials.

5. OPERATING INSTRUCTIONS

The Yedi Total Package Grill features an intuitive digital LCD screen and control panel for easy operation.



Image: A detailed view of the digital LCD screen displaying temperature and time, along with the control buttons for various grill settings.

5.1. Basic Operation

1. **Power On:** Plug the appliance into a 120V electrical outlet. The digital display will illuminate.
2. **Select Mode:** Use the "Both Grill", "Upper Grill", or "Lower Grill" buttons to select which heating elements to activate. This allows for contact grilling, open grilling, or griddle use.
3. **Set Temperature:** Use the temperature up/down arrows to adjust the desired cooking temperature, ranging from 175°F to 450°F (or Celsius if changed in settings). The unit heats up quickly.
4. **Set Timer (Optional):** Use the timer up/down arrows to set a cooking duration. The unit will alert you when the time is complete.

5. **Start Cooking:** Press the "Start" button to begin preheating. Once the set temperature is reached, the unit will beep, indicating it's ready for cooking.

Your browser does not support the video tag.

Video: An overview of the Yedi Total Package 6-in-1 Digital Grill, demonstrating its features and ease of use for various cooking tasks.

6. **Cancel/Off:** Press the "Cancel" button to stop cooking or turn off the unit.

5.2. Specific Cooking Modes

- **Contact Grill / Panini Press:** Use the grill plates. Close the lid for even cooking on both sides. Ideal for sandwiches, burgers, chicken breasts, and vegetables.
- **Full Grill / Full Griddle:** Open the unit flat by pushing the handle back until it locks into the open position. This provides a larger cooking surface. Use grill plates for full grill or griddle plates for full griddle. Excellent for breakfast items like pancakes, bacon, and eggs.
- **Half Grill / Half Griddle:** Insert one grill plate and one griddle plate. Open the unit flat to cook different items simultaneously.
- **Waffle Maker:** Ensure waffle plates are installed. Preheat the unit. Pour waffle batter onto the lower plate and close the lid. Cook until golden brown. The included silicone egg rings can be used for perfectly shaped eggs or mini pancakes on the griddle plates.

Your browser does not support the video tag.

Video: A demonstration of making waffles using the Yedi grill, showcasing the ease of use and the quality of the results.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Yedi Total Package Grill.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Remove Plates and Drip Tray:** Press the plate release buttons to remove the cooking plates. Remove the drip tray from the back of the unit.
3. **Wash Plates and Drip Tray:** All cooking plates and the drip tray are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reattaching.
4. **Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
5. **Storage:** Store the clean and dry appliance in a cool, dry place. You can store the plates attached to the unit or separately.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working electrical outlet.
Plates are not heating.	Unit not turned on; temperature not set; plates not properly installed.	Press "Start" after setting temperature. Ensure plates are clicked into place.
Food is sticking to plates.	Insufficient preheating; no cooking spray/oil used.	Allow unit to fully preheat. Lightly coat plates with cooking spray or oil before adding food.
Uneven cooking.	Improper food placement; unit not fully preheated.	Ensure food is evenly distributed. Allow unit to reach set temperature before cooking.

8. PRODUCT SPECIFICATIONS

Model: GV019

Brand: YEDI HOUSEWARE

Color: Stainless Steel

Material: Stainless Steel (PFOA Free, BPA Free plates)

Product Dimensions: 2"D x 12.7"W x 8.8"H

Plate Dimensions: 12.7 inches x 8.8 inches

Wattage: 1600 watts

Voltage: 120 Volts

Temperature Range: 175°F - 450°F

Included Components: Main unit, 2 sets of reversible grill/griddle plates, 2 sets of waffle plates, 2 silicone egg rings, spatula/tongs.

9. WARRANTY AND SUPPORT

The Yedi Total Package 6-in-1 Digital Indoor Grill comes with a **2-year limited manufacturer replacement warranty**. For warranty claims, technical support, or any inquiries, please contact YEDI HOUSEWARE customer service.

Contact Information:

Website: www.yedishouseware.com

Email: support@yedishouseware.com (Example, actual email not provided)

Phone: 1-800-XXX-XXXX (Example, actual phone not provided)

Please have your model number (GV019) and proof of purchase ready when contacting support.

