

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GYMAX](#) /

› [GYMAX Aluminum Portable Camping Kitchen Table \(Model CA-GM0855\) Instruction Manual](#)

GYMAX CA-GM0855

GYMAX Aluminum Portable Camping Kitchen Table (Model CA-GM0855) Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your GYMAX Aluminum Portable Camping Kitchen Table, Model CA-GM0855. Please read this manual thoroughly before use to ensure safe and efficient operation.

SAFETY INFORMATION

Always assemble and disassemble the table with care to avoid injury. Do not exceed the maximum weight recommendation of 44 pounds to prevent tipping or damage. Always ensure the table is stable and secure before use.

SETUP INSTRUCTIONS

The GYMAX Portable Camping Kitchen Table is designed for quick and easy assembly without the need for additional tools or screws. Follow these steps for proper setup:

- 1. Unfold the Legs:** Carefully unfold the main frame of the table until the legs are fully extended and locked into place.
- 2. Straighten Connections:** Ensure all support arms and connections for the side tables are straightened and securely locked.
- 3. Install Accessories:** Attach the grid shelf to the main frame. Place the main tabletop and side tabletops into their designated positions, securing them with the integrated buckles. Install the detachable windscreen onto the main tabletop.
- 4. Attach Storage Bags:** Hook the removable storage bags onto the side frames. Unzip the bags and insert the two provided boards to create shelves within the storage compartments.

For a visual guide, please refer to the installation video below:

Your browser does not support the video tag.

Video: Installation guide for the GYMAX Folding Camping Table Kitchen Station with Windscreen. This video demonstrates the step-by-step assembly process, including unfolding the frame, attaching tabletops, installing the windscreen, and setting up the storage bags.



Image: Visual representation of the assembly process, detailing how to unfold the frame, expand side tables, install the countertop and windscreen, and attach the grid shelf and zippered bag.

OPERATING INSTRUCTIONS

Your GYMAX camping kitchen table offers multiple features for an organized outdoor cooking experience:

- **Main Tabletop:** The central 26-inch tabletop is ideal for placing your grill or cooking stove.
- **Side Tabletops:** Two additional tabletops provide extra space for food preparation, utensils, or serving.
- **Detachable Windscreen:** The included windscreen can be installed on the main tabletop to protect your cooking flame from wind, ensuring more efficient cooking.
- **Grid Shelf:** A mesh shelf located beneath the main tabletop offers convenient storage for cooking essentials, dishes, or food items.
- **Removable Storage Bags:** Two zippered storage bags provide enclosed space to protect food and

supplies from dust and insects. These bags feature two-tier shelving for organization and side pockets for smaller items.

Optimal Storage



Spacious Countertop



Sturdy Grid Shelf



Large Zippered Bag



Convenient Side Pocket

Image: The camping kitchen table showcasing its optimal storage features, including the spacious countertop, sturdy grid shelf, large zippered bag, and convenient side pockets.

Optimal Storage



1. Unfold the main frame & expand the side table



4. Assemble the zippered bag



3. Install the countertop and the windscreen



2. Attach the grid shelf to the main frame

Image: The table in use outdoors, highlighting the detachable steel windscreen and the detachable zipper bag for varied storage needs.

MAINTENANCE

Proper care will extend the life of your camping kitchen table:

- **Cleaning:** The table's smooth surfaces can be cleaned with a damp towel.
- **Storage Bags:** The two zipped storage bags are removable and washable. After use, detach and wash them as needed.
- **Rust Prevention:** The aluminum tubes and steel components are rustproof. However, it is recommended to keep the table dry when not in use and store it in a dry environment.

TROUBLESHOOTING

No specific troubleshooting steps are provided for this product. If you encounter issues, please ensure all components are correctly assembled and secured according to the setup instructions. Verify that the table is placed on a stable, level surface.

SPECIFICATIONS

Feature	Detail
Model Number	CA-GM0855
Material	Aluminum, Iron, Metal, Oxford fabric
Product Dimensions	18.11 x 57.48 x 44.09 inches (46 cm x 146 cm x 112 cm)
Item Weight	21 pounds
Number of Shelves	1 (grid shelf) + 2 (within storage bags)
Special Features	Easy Assembly, Ergonomic, Foldable, Portable, Storage, Detachable Windscreen
Product Care	Hand Wash, Wipe with Damp Cloth

STORAGE

The GYMAX Portable Camping Kitchen Table is designed for easy portability and compact storage. Once disassembled, all components fit into the included carrying bag.

Product Dimension



Image: The product dimensions, including the table in its assembled state and the compact carrying bag for storage.

WARRANTY AND SUPPORT

Specific warranty details and direct support contact information are not provided in the product data. Please refer to your purchase documentation or contact the retailer for warranty claims and customer support inquiries.