

[Manuals.plus](#) /

› [SURKER](#) /

› SURKER Mens Electric Shaver Rotary Shaver Grooming Kit User Manual

SURKER 6-in-1 Rotary Shaver Grooming Kit

SURKER Mens Electric Shaver Rotary Shaver Grooming Kit

Model: 6-in-1 Multifunctional Grooming Kit

Brand: SURKER

PRODUCT OVERVIEW

The SURKER 6-in-1 Multifunctional Electric Shaver and Grooming Kit is designed for comprehensive facial and head grooming. This versatile kit includes multiple interchangeable heads to cater to various shaving, trimming, and cleansing needs.



The SURKER 6-in-1 Electric Shaver and Grooming Kit, showcasing the main shaver unit with its rotary head, along with the various interchangeable attachments including the nose trimmer, hair clipper, sideburns trimmer, facial cleansing brush, and facial massager. Water splashes around the unit, highlighting its waterproof design.

Key Features:

- **6-in-1 Multifunctionality:** Includes shaver head, hair trimmer with guide combs (3, 6, 9, 12mm), sideburn trimmer, nose trimmer, facial cleansing brush, and face massager.
- **Wet & Dry Shave:** Fully washable design allows for comfortable dry shaves or refreshing wet shaves with cream or gel.
- **5D Floating Shaving Head:** Flexes 360 degrees to contour to facial curves for a close and smooth shave.
- **USB Rechargeable:** Provides 60 minutes of cordless runtime after approximately 2 hours of charging.
- **LED Display:** Shows battery capacity in percentage.



An illustrative diagram detailing each component of the SURKER grooming kit: Electrical Shaver, Hair Clipper with Guide Combs, Nose Hair Trimmer, Sideburns Trimmer, Facial Cleansing Brush, and Facial Massaging Brush, demonstrating their application on different parts of the face and head.

IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the SURKER Electric Shaver. Failure to follow these instructions may result in injury or damage to the device.

- Avoid using the shaver in the shower or while charging to prevent electrical hazards.
- Always clean the shaver after use and allow it to dry completely before storing.
- Keep the device away from water when not in use or when charging.
- Do not disassemble or attempt to repair the shaver yourself. Contact qualified personnel for service.
- Keep out of reach of children.

SETUP AND CHARGING

Initial Charge:

1. Before first use, ensure the shaver is fully charged.
2. Connect the USB charging cable to the shaver's charging port and plug the other end into a compatible USB power adapter (not included) or a computer USB port.
3. The LED display will show the battery percentage, indicating the charging status.
4. A full charge takes approximately 2 hours and provides up to 60 minutes of cordless runtime.
5. Do not charge the shaver in wet conditions.

Attaching/Detaching Heads:

To change the attachment heads, gently twist and pull the current head off the main unit. Align the desired head with the main unit and push it firmly until it clicks into place.




The complete SURKER 6-in-1 grooming kit, displaying the main shaver unit, the rotary shaver head, hair clipper with four guide combs, sideburns trimmer, nose trimmer, facial cleansing brush, facial massager, and the USB charging cable.

OPERATING INSTRUCTIONS

Using the Rotary Shaver Head:

- **For Dry Shaving:** Ensure your skin is clean and dry. Turn on the shaver and move it in small, circular motions over your face or head.
- **For Wet Shaving:** Apply shaving foam or gel to your skin. Turn on the shaver and glide it gently over the area to be shaved. Rinse the shaver head under running water during and after use.
- The 5D floating head adapts to the contours of your face and head for an efficient and comfortable shave.

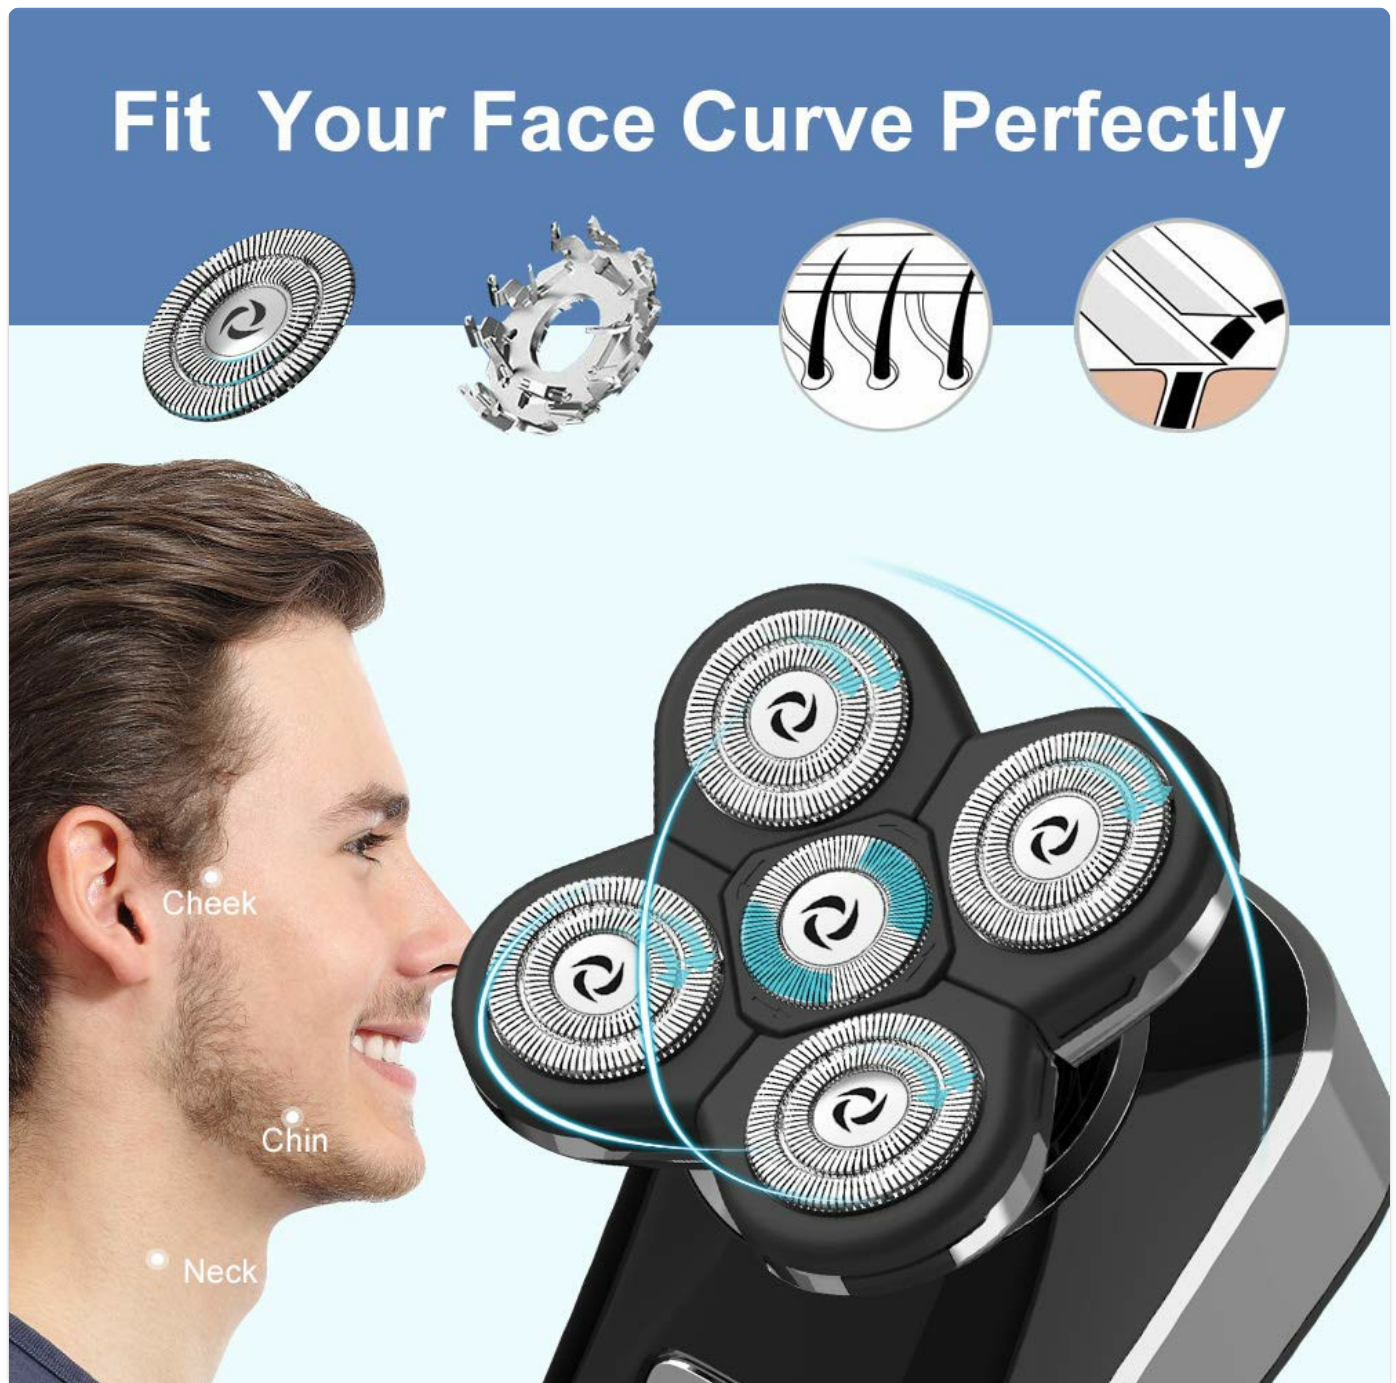

A man demonstrating the use of the SURKER electric shaver on his cheek, highlighting its ability to perfectly fit the curves of the face for an effective shave. Diagrams show the shaver head adapting to hair follicles.

Using the Hair Trimmer and Guide Combs:

- Attach the hair trimmer head to the main unit.
- Select the desired guide comb (3mm, 6mm, 9mm, or 12mm) and attach it firmly to the trimmer head.
- Turn on the trimmer and move it against the direction of hair growth for an even cut.
- **For Bald Head Shaving:** For best results, it is recommended to first cut hair to approximately 3mm using the hair clipper before using the rotary shaver head for a smooth finish.

CAN BE USED FOR BALD HEAD



A visual guide demonstrating the use of the SURKER shaver for bald head shaving. A note advises users to first cut their hair to about 3mm using the hair clipper attachment for optimal results before using the rotary shaver.

Using Other Attachments:

- **Nose Trimmer:** Gently insert the nose trimmer head into your nostril or ear canal. Move it slowly to trim unwanted hair.
- **Sideburn Trimmer:** Use the precision trimmer for shaping sideburns, beard lines, or detailing.
- **Facial Cleansing Brush:** Attach the brush head. Apply your favorite facial cleanser to your face or the brush. Gently move the brush in circular motions to cleanse your skin.

- **Facial Massager:** Attach the massager head. Gently glide it over your face to stimulate blood circulation and relax facial muscles.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your SURKER Electric Shaver.

Cleaning the Shaver Head:

1. After each use, turn off the shaver.
2. Press the release button (if applicable) or gently pry open the rotary shaver head to expose the blades.
3. Rinse the shaver head and the main unit under running water. The shaver is fully washable.
4. Use the included cleaning brush to remove any stubborn hair clippings from the blades and inside the head.
5. Allow all parts to air dry completely before reassembling or storing.



A hand holding the SURKER electric shaver under running water, demonstrating its "Whole Body Washable" feature. The rotary shaver

head is open, allowing water to rinse the blades and interior thoroughly.

Cleaning Other Attachments:

- Rinse the hair trimmer, nose trimmer, facial cleansing brush, and facial massager heads under running water.
- Use the cleaning brush for hair trimmer blades if necessary.
- Ensure all attachments are completely dry before storing.

Storage:

Store the shaver and its attachments in a cool, dry place, away from direct sunlight and moisture. Ensure the shaver is fully charged before long-term storage to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver not turning on.	Low battery; device malfunction.	Charge the shaver for at least 2 hours. If problem persists, contact customer support.
Poor shaving performance / pulling hair.	Blades are dull or clogged with hair; insufficient charge.	Clean the shaver head thoroughly. Ensure the shaver is fully charged. If blades are dull, consider replacement (if available) or contact support.
LED display not working correctly.	Internal electrical issue.	Ensure the device is fully charged. If the issue persists, contact customer support.
Shaver not charging.	Faulty cable/adapter; charging port issue.	Try a different USB cable and power adapter. Ensure the charging port is clean and dry. If corrosion is visible, discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SURKER
Model	6-in-1 Multifunctional Grooming Kit (ASIN: B08FBWC33M)
Power Source	Battery Powered (USB Rechargeable)
Battery Type	Built-in Rechargeable
Charging Time	Approx. 2 hours
Runtime	Up to 60 minutes (cordless)
Special Features	Rechargeable, LED Display, Cordless, Waterproof (Wet & Dry Use)
Recommended Uses	Beard, Nose Hair, Face, Head

Feature	Detail
Included Components	Shaver, Hair Trimmer, Nose Trimmer, Sideburn Trimmer, Facial Cleansing Brush, Facial Massager, Guide Combs (3,6,9,12mm), Cleaning Brush, USB Charger Cable, Battery
Package Dimensions	9.96 x 7.64 x 3.39 inches; 15.84 ounces

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact SURKER customer service directly. Refer to the packaging or the official SURKER website for contact details.

Please retain your proof of purchase for any warranty claims.

© 2024 SURKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question