

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Baby Einstein](#) /
- › [Baby Einstein Musical Mix 'N Roll 4-in-1 Push Walker Instruction Manual](#)

## Baby Einstein 12045

# Baby Einstein Musical Mix 'N Roll 4-in-1 Push Walker Instruction Manual

Model: 12045

[Introduction](#)   [Safety Information](#)   [Assembly](#)   [Modes of Use](#)  
[Operation](#)   [Maintenance](#)   [Specifications](#)

## 1. INTRODUCTION

---

The Baby Einstein Musical Mix 'N Roll 4-in-1 Push Walker is a versatile activity center designed to grow with your child from 6 to 36 months. It transforms into four different modes of play: a Floor Toy Station, a Push Walker, a DJ Music Activity Table, and a Creative Play Table. This manual provides detailed instructions for assembly, operation, and maintenance to ensure safe and enjoyable use of the product.

# Modes of Use

Grows with baby from sitting to learning to stand and walking



Figure 1: The Baby Einstein Musical Mix 'N Roll 4-in-1 Push Walker.

## 2. SAFETY INFORMATION

Please read and understand all safety warnings and instructions before using this product. Failure to follow these instructions could result in serious injury.

- **Adult Supervision Required:** Always supervise your child when using this product.
- **Age Range:** Suitable for children aged 6 to 36 months.
- **Weight Limit:** Do not exceed the recommended weight limit (if specified on packaging, otherwise assume for typical toddler use).
- **Surface Use:** Ensure the product is used on a flat, level surface. Avoid stairs, uneven terrain, or slippery floors.
- **Wheel Locks:** Always engage wheel locks when using the product in stationary modes (e.g., activity table) to prevent unintended movement.
- **Battery Safety:** Use only the specified battery type (3 AA batteries). Do not mix old and new batteries or different types of batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly.
- **Choking Hazard:** Keep small parts away from children. Regularly inspect the product for loose or damaged components.

- **Cleaning:** Refer to the maintenance section for proper cleaning instructions. Do not immerse electronic components in water.

### 3. ASSEMBLY INSTRUCTIONS

The Baby Einstein Musical Mix 'N Roll requires minimal assembly. Follow these steps to set up your product:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present according to the packing list.
2. **Install Batteries:** Locate the battery compartment, typically on the underside of the activity panel. Insert 3 AA batteries, ensuring correct polarity. Close the battery compartment securely.
3. **Attach Activity Panel to Walker Base:** Align the activity panel with the walker base. Press firmly until you hear a click, indicating it is securely attached.
4. **Adjust Legs (if applicable):** The walker features collapsible legs for storage and mode changes. To extend the legs for walker or table mode, press the side buttons and pull the legs into position until they lock. To fold, press the side buttons and push the legs inwards.



Figure 2: Pressing side buttons to fold the legs for storage.

## 4. MODES OF USE

This 4-in-1 activity center adapts to your child's developmental stages:

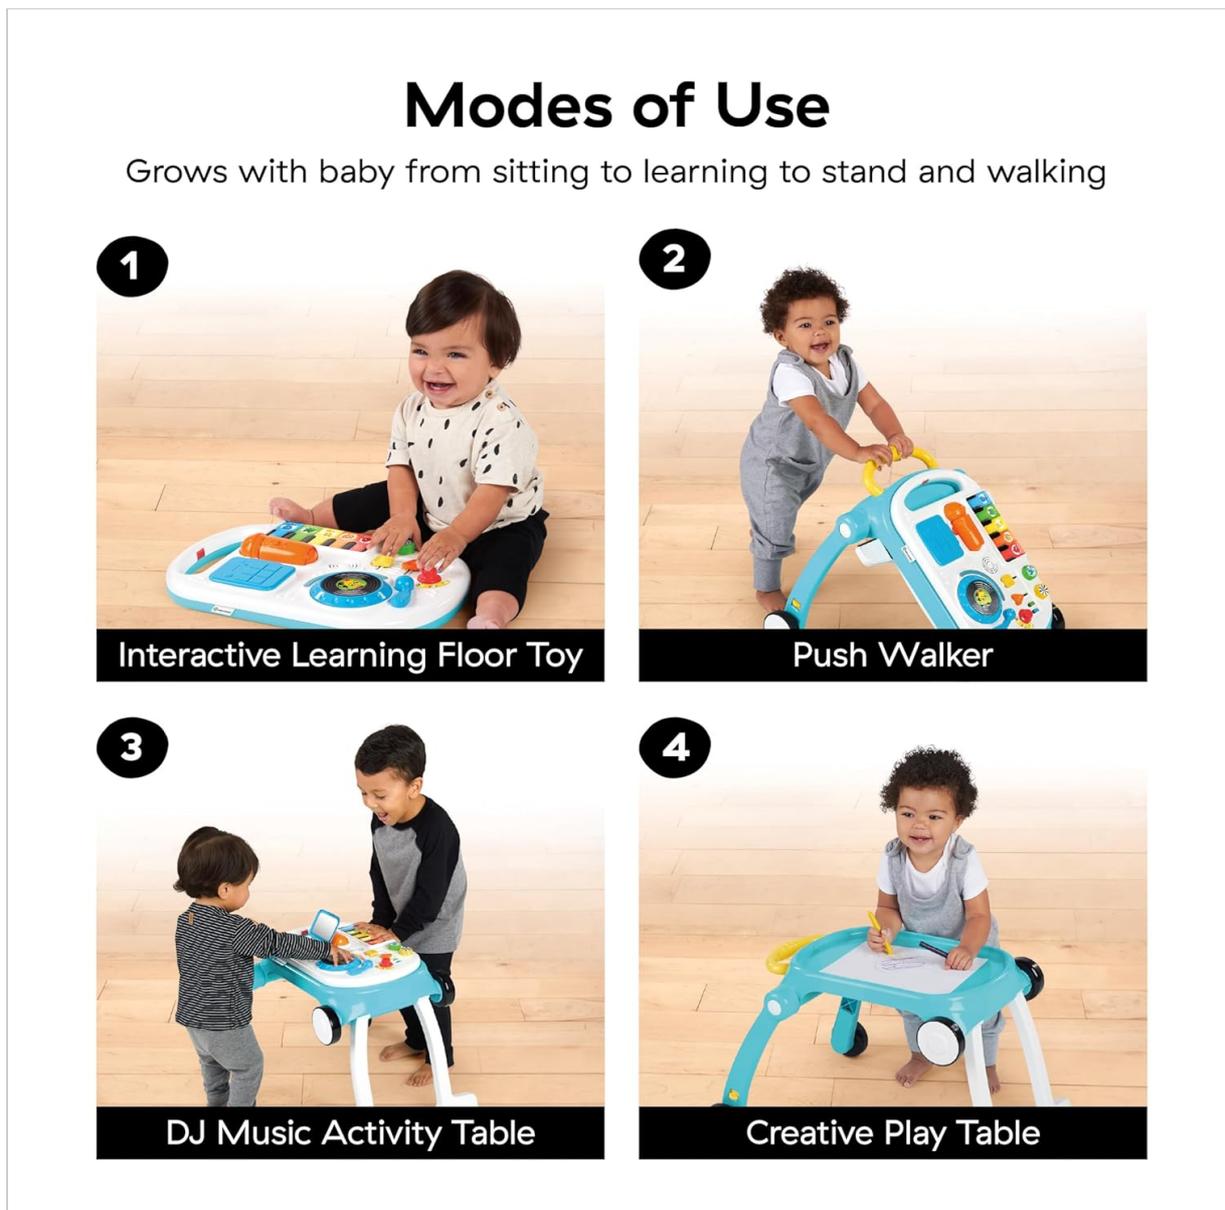


Figure 3: Overview of the four modes of use.

### 4.1. Interactive Learning Floor Toy (6+ Months)

For younger babies, the activity panel detaches from the walker base to become a floor toy. This mode allows seated babies to explore the lights, sounds, music, and various textures and shapes on the panel.



Figure 4: Baby engaging with the activity panel as a floor toy.

## 4.2. Push Walker (9+ Months)

As your baby begins to stand and take their first steps, the product transforms into a push walker. The wide base and easy-grip handle provide stability, while the wheels are designed to move smoothly on various indoor surfaces. The activity panel remains attached, providing engaging sounds and lights as your child pushes it along.



Figure 5: Baby using the product as a push walker.

### **4.3. DJ Music Activity Table (12+ Months)**

Once your child is more stable, the walker can be converted into an upright activity table. The activity panel becomes a DJ station where children can experiment with tempo, sound, and music. This mode encourages creative play and fine motor skill development.



Figure 6: Child playing with the DJ Music Activity Table.

#### **4.4. Creative Play Table (18+ Months)**

The product can also function as a creative play table. The flat surface is suitable for various activities such as coloring, drawing, or playing with other toys. This mode supports imaginative play and social interaction.



Figure 7: Children engaging with the Creative Play Table.

## 5. OPERATING INSTRUCTIONS

The activity panel features various interactive elements:

- **DJ Turntable:** Spin the turntable for scratching sounds and flashing lights.
- **Piano Keys:** Press the colorful piano keys to play melodies and learn about colors and animals.
- **Microphone:** The removable microphone allows for sing-along fun.
- **Sliders and Knobs:** Manipulate the sliders and knobs to create different sound effects and rhythms.
- **Language Selector:** Switch between 4 languages: English, Spanish, French, and German.
- **Volume Control:** Adjust the volume to a comfortable level using the dedicated control.

## TEACHES



Cause & Effect



Fine Motor Skills




Pretend Play



Listening

Spin the turntable  
like a DJ!

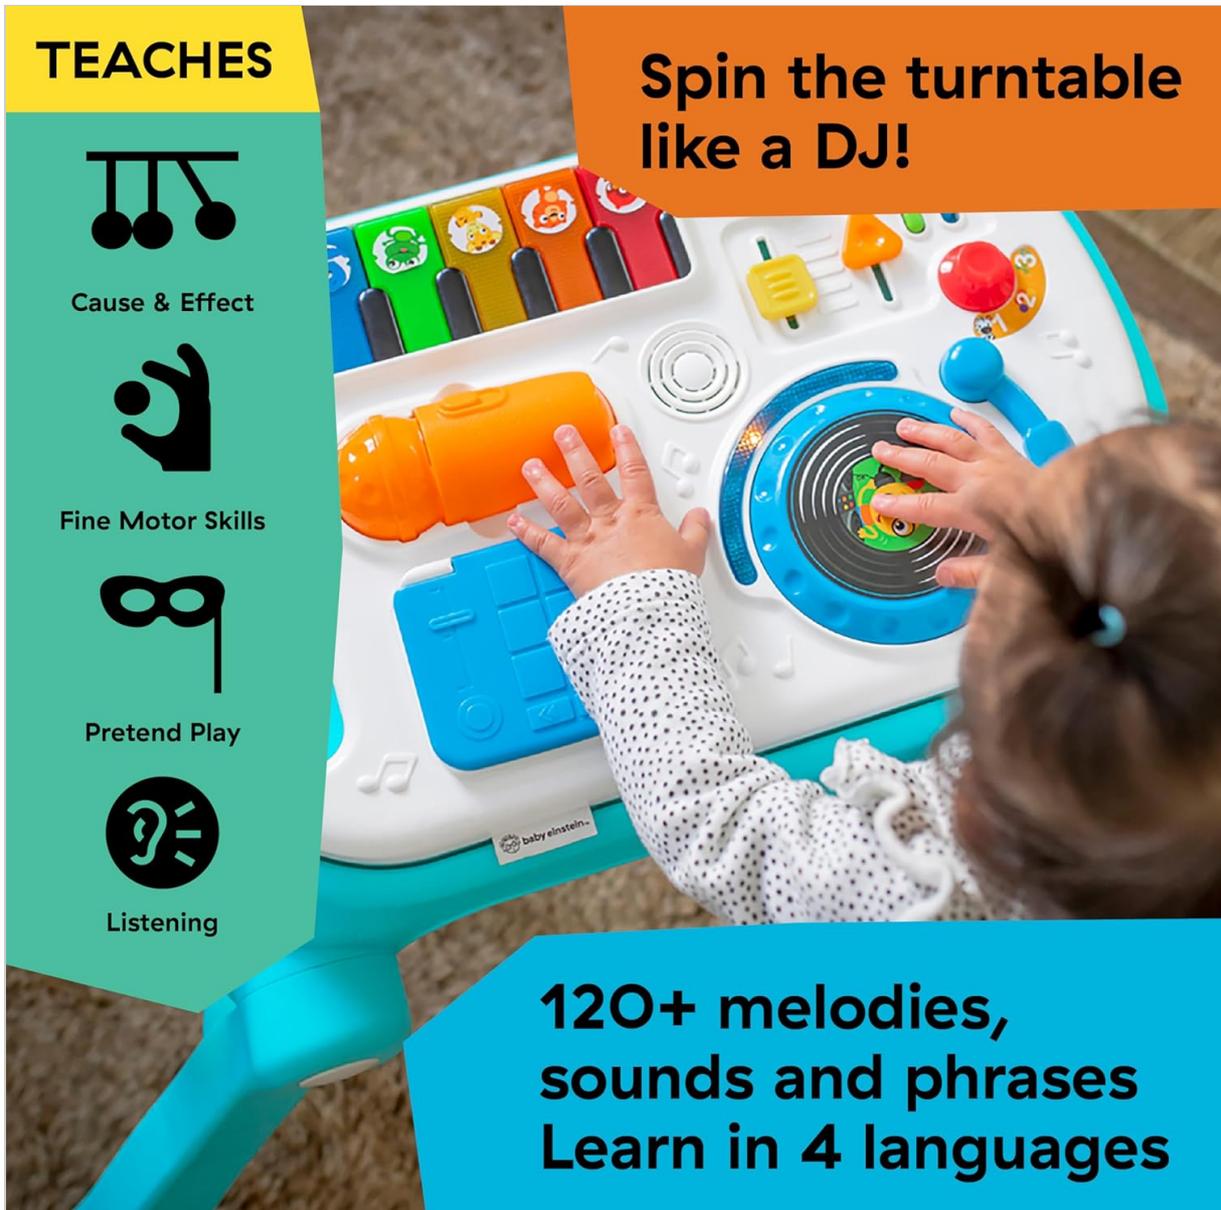

120+ melodies,  
sounds and phrases  
Learn in 4 languages

Figure 8: Interactive elements on the activity panel.

## Video Demonstration



Video 1: A detailed demonstration of the Baby Einstein Musical Mix 'N Roll 4-in-1 Push Walker's features and modes of play, including the DJ station, piano, and language options.

## 6. MAINTENANCE

Proper care will extend the life of your product:

- **Cleaning:** Clean the product before use with a damp cloth and mild soap. Air dry thoroughly. Do not immerse the electronic activity panel in water.
- **Storage:** When not in use, the product can be collapsed for convenient storage. Store in a cool, dry place away from direct sunlight.
- **Battery Replacement:** Replace batteries when sounds become distorted or lights dim.

## 7. TROUBLESHOOTING

If you encounter issues with your Musical Mix 'N Roll, try the following:

- **No Sound/Lights:**

- Check if the batteries are correctly installed and not depleted. Replace if necessary.
- Ensure the power switch is in the 'ON' position.
- Adjust the volume control.

- **Walker Not Moving Smoothly:**

- Ensure the wheel locks are disengaged for push walker mode.
- Check for any obstructions around the wheels.

- **Activity Panel Not Attaching Securely:**

- Ensure the panel is correctly aligned with the base and pressed firmly until it clicks into place.
- Inspect connection points for any damage or debris.

## 8. SPECIFICATIONS

Feature	Detail
Product Dimensions	19.49 x 28.94 x 16.65 inches (49.5 x 73.51 x 42.49 cm)
Item Model Number	12045
Batteries Required	3 AA batteries (included)
Target Gender	Unisex
Material Type	Plastic (90% Plastic, 5% EVA)
Additional Features	100+ Melodies and Phrases, 4 Modes of Play, 4 Languages (English, Spanish, French, German)
Item Weight	3.5 pounds
Color	Blue

## 9. WARRANTY & SUPPORT

For warranty information or customer support, please refer to the product packaging or visit the official Baby Einstein website. Keep your purchase receipt for proof of purchase.