

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Vibrapower](#) /

› [Vibrapower Wave Oscillating Vibration Plate User Manual](#)

Vibrapower Wave

Vibrapower Wave Oscillating Vibration Plate User Manual

Model: Wave

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Vibrapower Wave Oscillating Vibration Plate. Retain this manual for future reference.

- Consult your doctor before starting any new exercise program, especially if you have pre-existing medical conditions.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep children and pets away from the device during operation.
- Use the device only on a flat, stable surface.
- Do not use the device if it is damaged or malfunctioning. Contact customer support immediately.
- Unplug the device from the power outlet when not in use or before cleaning.
- Do not immerse the device in water or other liquids.
- Ensure hands are dry when plugging or unplugging the power cord.

2. PACKAGE CONTENTS

Carefully unpack your Vibrapower Wave Oscillating Vibration Plate and check that all items are present and in good condition:

- 1 x Vibrapower Wave Oscillating Plate
- 1 x Controller (Remote Control)
- 1 x Adaptor (Power Cord)
- 1 x Instruction Manual (This document)

3. PRODUCT OVERVIEW

The Vibrapower Wave is an intelligent vibration plate designed to deliver both massage and oscillating vibration. It aims to enhance general exercise, improve circulation, and aid muscle relaxation. Its compact design allows for versatile use in various home settings.



Figure 3.1: Top-down view of the Vibrapower Wave Oscillating Vibration Plate, showcasing its sleek black design and textured footpads.



Figure 3.2: A user's feet positioned on the Vibrapower Wave, demonstrating typical usage while holding the remote control for

easy operation.



Figure 3.3: A detailed view of the Vibrapower Wave's digital display, showing program indicators and the central control button.



Figure 3.4: The remote control for the Vibrapower Wave, featuring clearly labeled buttons for power, start/stop, mode, program selection, speed adjustment, and time control.



Figure 3.5: A woman comfortably seated on a sofa, demonstrating the convenient use of the Vibrapower Wave in a home environment.

4. SETUP

1. **Placement:** Place the Vibrapower Wave on a firm, level surface. Ensure there is enough clear space around the device for safe operation.
2. **Power Connection:** Connect the adaptor to the power input port on the device. Plug the other end of the adaptor into a standard electrical outlet (Input Voltage: 100-240V, Frequency: 50/60Hz).
3. **Remote Control:** Ensure the remote control has working batteries. The device is primarily controlled via this remote.

5. OPERATING INSTRUCTIONS

The Vibrapower Wave offers various settings to customize your experience. All functions are controlled via the provided remote control.

5.1. Getting Started

1. **Power On:** Press the **POWER** button on the remote control to turn on the device. The display will illuminate.
2. **Positioning:** Sit comfortably and place your feet on the textured footpads of the Vibrapower Wave. You can also roll your feet back and forth from the soles to the outside edge for an enhanced massage experience.

3. **Start Operation:** Press the **START/STOP** button to begin the vibration.

5.2. Modes and Programs

The device features three pre-set programmes for varied workout and massage experiences.

- **MODE Button:** Press the **MODE** button to cycle through different operational modes (e.g., manual, automatic programs).
- **PROGRAM Button:** Press the **PROGRAM** button to select one of the three pre-set programmes. Each program offers a unique combination of vibration intensity and duration.

5.3. Adjusting Settings

- **Speed Adjustment:** Use the **SPEED+** and **SPEED-** buttons to increase or decrease the vibration intensity.
- **Time Adjustment:** Use the **TIME+** and **TIME-** buttons to adjust the duration of your session.

5.4. Ending a Session

- **Stop Operation:** Press the **START/STOP** button to pause or stop the vibration.
- **Power Off:** Press the **POWER** button to turn off the device.
- **Unplug:** For safety and to conserve energy, unplug the device from the power outlet when not in use.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your Vibrapower Wave.

- **Cleaning:**
 - Always unplug the device before cleaning.
 - Wipe the surface of the device with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - Ensure no liquid enters the internal components.
- **Storage:**
 - Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
 - Keep the device away from moisture and dust.

7. TROUBLESHOOTING

If you encounter any issues with your Vibrapower Wave, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not power on.	Not plugged in; power outlet issue; faulty adaptor.	Ensure power cord is securely plugged into both the device and a working wall outlet. Try a different outlet. Check adaptor for damage.
Remote control not responding.	Dead batteries; remote out of range; obstruction.	Replace batteries in the remote control. Ensure you are within range and there are no obstructions between the remote and the device's sensor.
Vibration is weak or inconsistent.	Incorrect program/speed setting; device overloaded.	Adjust speed setting using the remote. Ensure the device is on a flat, stable surface. Verify user weight is within specified limits (if applicable).

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model	Wave
Brand	Vibrapower
Controls Type	Remote
Operation Mode	Manual
Power Source	Corded Electric
Input Voltage	100-240V
Frequency	50/60Hz
Color	Black
Material	Plastic, Rubber
Item Weight	5.6 kg
Maximum Weight Recommendation	30 Kilograms

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Vibrapower website or contact their customer service department.



© 2023 Vibrapower. All rights reserved.