
[Manuals.plus](#) /

› [Armitron](#) /

› Armitron Sport Digital Chronograph Watch 40/8470BLK User Manual

Armitron 40/8470

Armitron Sport Digital Chronograph Watch 40/8470BLK User Manual

Model: 40/8470BLK

INTRODUCTION

Thank you for choosing the Armitron Sport Digital Chronograph Watch, model 40/8470BLK. This manual provides comprehensive instructions to help you understand and utilize all the features of your new timepiece. Please read this manual carefully to ensure proper operation and maintenance.



Image: The Armitron Sport Digital Chronograph Watch 40/8470BLK displayed on a wrist, showing its black resin case and digital display.

PRODUCT FEATURES

The Armitron Sport Digital Chronograph Watch 40/8470BLK is designed for active lifestyles, offering a range of practical functions:

- **Durable Construction:** Black resin case and top ring for enhanced durability.
- **Clear Display:** LCD display showing time, seconds, day, and date.
- **Multiple Functions:** Includes chronograph, lap time, alarm, dual time zone, military time (24-hour format), and a backlight with a 3-second delay for visibility in low light.
- **Comfortable Strap:** Black resin strap with a secure buckle closure.
- **Water Resistance:** Water resistant up to 100 meters (330 feet).



Image: A close-up view of the Armitron Sport Digital Chronograph Watch face, highlighting the digital display and function buttons.

SETUP

Before using your watch, it is important to set the correct time and date.

Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **START/STOP** button to adjust the flashing digit (e.g., hours, minutes).
3. Press the **RESET** button to move to the next digit or setting (e.g., from hours to minutes, then to year, month, day).
4. Repeat steps 2 and 3 until all desired settings (hours, minutes, AM/PM, year, month, day) are correctly set.
5. Press the **MODE** button to exit the setting mode and return to normal time display.

Setting the Alarm

1. Press the **MODE** button until the alarm time is displayed.
2. Press the **RESET** button to select the hour or minute digits.
3. Use the **START/STOP** button to adjust the flashing digits to your desired alarm time.
4. Press the **MODE** button to confirm and exit.
5. To activate/deactivate the alarm, press the **START/STOP** button while in alarm mode. An alarm icon will appear/disappear on the display.

Setting Dual Time

This feature allows you to track a second time zone.

1. Press the **MODE** button until the dual time display appears.

2. Press the **RESET** button to select the hour or minute digits.
3. Use the **START/STOP** button to adjust the flashing digits to the desired second time zone.
4. Press the **MODE** button to confirm and exit.

OPERATING FUNCTIONS

Using the Chronograph (Stopwatch)

1. Press the **MODE** button until the chronograph display (usually 00:00:00) appears.
2. Press the **START/STOP** button to start the chronograph.
3. Press the **START/STOP** button again to pause the chronograph.
4. To record a lap time while the chronograph is running, press the **RESET** button. The lap time will display briefly, and the chronograph will continue running in the background.
5. To reset the chronograph to zero, ensure it is paused, then press the **RESET** button.

Using the Backlight

To illuminate the display in low-light conditions, press the **LIGHT** button. The backlight will remain active for approximately 3 seconds.

Switching Between 12/24-Hour Format (Military Time)

While in normal time display mode, press the **RESET** button to toggle between 12-hour (AM/PM) and 24-hour (military time) formats.

MAINTENANCE

Water Resistance

Your Armitron Sport watch is water resistant up to 100 meters (330 feet). This means it is suitable for swimming and snorkeling. However, it is **not** suitable for scuba diving.

- Do not operate buttons while the watch is submerged in water.
- Avoid exposing the watch to extreme temperature changes (e.g., hot showers followed by cold water).
- After exposure to saltwater, rinse the watch with fresh water and dry thoroughly.

WATER RESISTANT CHART	
 NOT WATER RESISTANT	NOT WATER RESISTANT
 ACCIDENTAL SPLASHES	WATER RESISTANT TO 30M (100FT): In general, withstands splashes or brief immersion in water, but not suitable for swimming or bathing
 SWIMMING	WATER RESISTANT TO 50M (165FT): In general, suitable for short periods of recreational swimming, but not diving or snorkeling
 SNORKELING	WATER RESISTANT TO 100 M (330 FT): In general, suitable for swimming and snorkeling, but not scuba diving

Image: A chart illustrating different levels of water resistance for watches, indicating that 100m (330ft) is suitable for swimming and snorkeling but not scuba diving.

Cleaning Your Watch

To maintain the appearance of your watch, wipe it regularly with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The watch uses 1 Lithium-ion battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

If you encounter issues with your watch, please refer to the following common solutions:

- **Blank Display:** Check if the battery needs replacement. If recently replaced, ensure it is installed correctly.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature a lock). Try pressing buttons firmly. If submerged, ensure it is dry before operating buttons.
- **Incorrect Time/Date:** Refer to the "Setting Time and Date" section to reset.
- **Water Inside Watch:** If moisture appears inside the watch, stop using it immediately and seek professional service. This indicates a breach in water resistance.

SPECIFICATIONS

Feature	Specification
---------	---------------

Model Number	40/8470BLK
ASIN	B08FCV44ZM
Brand	Armitron
Item Weight	100 Grams
Case Material	Resin
Band Material	Resin
Band Color	Black
Clasp Type	Buckle
Case Diameter	48 Millimeters
Case Thickness	16 Millimeters
Band Width	20 Millimeters
Water Resistance Depth	100 Meters (330 Feet)
Battery Type	1 Lithium-ion (included)
Special Features	Alarm, Chronograph, Dual Time, Backlight, Water Resistant

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation included with your purchase or visit the official Armitron website. Keep your proof of purchase for warranty claims.



Image: The packaging box for the Armitron Sport watch, which typically contains warranty information and additional documentation.