

PDP 049-004-NA

PDP Universal Gaming Media Remote for Xbox Series X|S and Xbox One

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your PDP Universal Gaming Media Remote. Designed for seamless integration with Xbox Series X|S and Xbox One consoles, this remote offers convenient control over your media applications and console functions.



Image: Front view of the PDP Universal Gaming Media Remote, showcasing its compact design and button layout.



Image: Packaging of the PDP Media Remote, highlighting its official Xbox licensing.

SETUP

1. Battery Installation

The PDP Universal Gaming Media Remote requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the cover back into place until it clicks securely.

MOTION ACTIVATED BACKLIT BUTTONS

For dark environments



Image: Rear view of the remote, indicating the location of the battery compartment.

2. Initial Connection

The PDP Universal Gaming Media Remote is designed for immediate use with your Xbox Series X|S or Xbox One console. No complex pairing process is typically required. Simply ensure your console is powered on and the remote has fresh batteries. The remote communicates with your Xbox console via infrared (IR) signals.

For optimal performance, ensure a clear line of sight between the remote's IR emitter (located at the top of the remote) and your Xbox console's IR receiver.

OPERATING INSTRUCTIONS

The remote provides intuitive controls for navigating your Xbox media and system menus.

Basic Navigation

- **Directional Pad (D-Pad):** Use the up, down, left, and right arrows to navigate menus and select items. The central button acts as a confirmation or 'A' button.
- **A, B, X, Y Buttons:** These colored buttons correspond to the standard Xbox controller buttons for in-app

actions and menu selections.

- **Xbox Button:** Press this button to turn on your Xbox console (if Instant-On power mode is enabled) or to access the Xbox Guide menu.
- **View Button (Two squares icon):** Access additional information or options within certain apps.
- **Menu Button (Three lines icon):** Open context-sensitive menus or options.
- **Back Button (Left arrow):** Return to the previous screen or menu.



Image: A hand holding the PDP Media Remote, demonstrating smooth navigation on an Xbox dashboard displaying media apps like Netflix.

Media Playback Controls

- **Play/Pause:** Start or pause media playback.
- **Fast Forward/Rewind:** Skip forward or backward through media content.
- **Volume Up/Down:** Adjust the volume of your television or audio system.
- **Mute:** Mute or unmute audio.

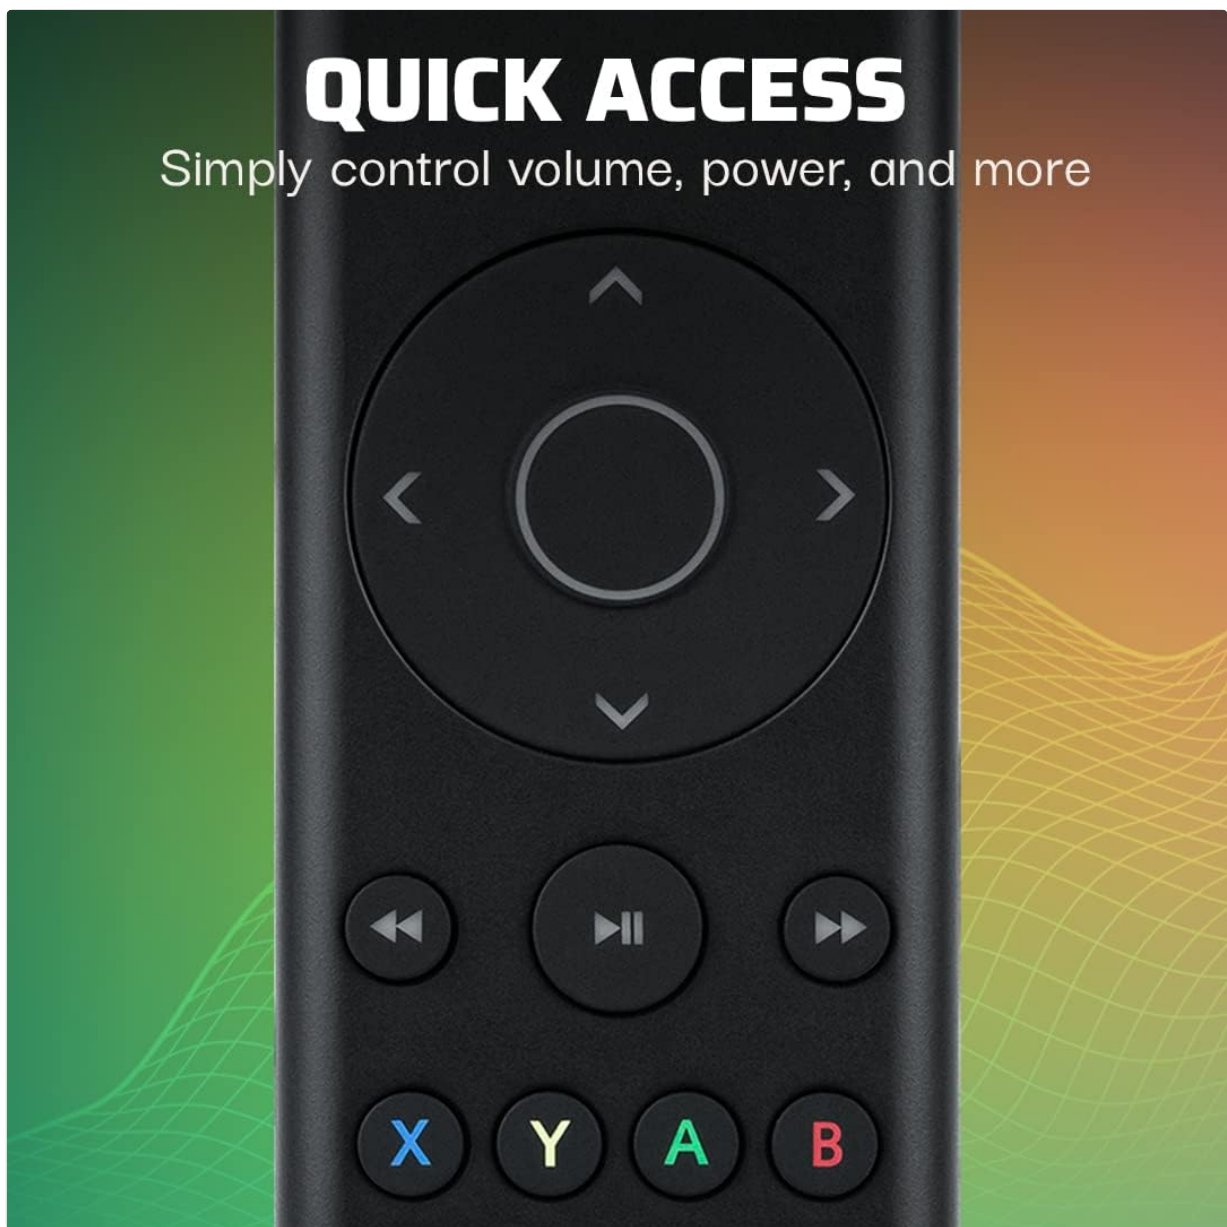


Image: Close-up of the remote's central section, highlighting the media playback and navigation buttons for quick access.

Motion-Activated Backlight

The remote features motion-activated backlit buttons. When the remote is picked up or moved in a low-light environment, the buttons will illuminate, making it easier to use in the dark. The backlight will automatically turn off after a short period of inactivity to conserve battery life.





Image: The PDP Media Remote with its motion-activated backlit buttons glowing in a dimly lit room, enhancing visibility.

MAINTENANCE

Battery Replacement

When the remote's performance diminishes or the backlight becomes dim, it is time to replace the AAA batteries. Refer to the 'Battery Installation' section under Setup for instructions.

Cleaning

To clean your remote, use a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the remote's finish or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed and not depleted. Replace with fresh AAA batteries if necessary.
 - Verify there is a clear line of sight between the remote and the Xbox console's IR receiver. Obstructions can block the signal.
 - Confirm your Xbox console is powered on and not in a sleep state that disables IR input.
- **Backlight not activating:**
 - The backlight is motion-activated. Gently pick up or move the remote to activate it.
 - Ensure batteries have sufficient charge. Low battery power can affect backlight functionality.
- **Volume control not working with TV:**
 - The remote's volume controls are primarily designed to control the Xbox console's system volume or compatible media apps. Direct TV volume control functionality may vary depending on your TV model and Xbox settings. Some TV brands (e.g., Sony, Vizio) may not fully support direct volume control via the Xbox media remote.
 - Check your Xbox console's settings for external device control options.

SPECIFICATIONS

Feature	Detail
Product Dimensions	0.35 x 0.83 x 0.12 inches
Item Weight	3.52 ounces
Item Model Number	049-004-NA
Batteries Required	2 AAA batteries
Compatible Devices	Xbox Series X S, Xbox One
Special Features	Backlit, Ergonomic, Lightweight, No Programming Required
Color	Black

WARRANTY INFORMATION






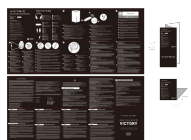
This product is covered by a manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation included with your purchase or visit the official PDP website. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting beyond this manual, or general inquiries, please contact PDP customer support. Contact information can typically be found on the product packaging, the official PDP website, or through your retailer.

© 2023 PDP. All rights reserved. Xbox, Xbox Series X|S, and Xbox One are trademarks of Microsoft Corporation.

Related Documents - 049-004-NA

	<p>PDP Gaming Media Remote for Xbox Series X/S and Xbox One Quick Start Guide</p> <p>This guide provides instructions for setting up and using the PDP Gaming Media Remote with Xbox Series X, Xbox One X, and Xbox One S consoles. It covers button functions, setup steps, and important safety information regarding battery usage and product handling.</p>
	<p>PDP Wired Controller for Xbox Quick Start Guide and Warranty Information</p> <p>Get started with your PDP Wired Controller for Xbox. This guide provides quick setup instructions, details on volume and microphone control, and comprehensive limited warranty information.</p>
	<p>PDP Wired Controller for Xbox Quick Start Guide</p> <p>Get started quickly with your PDP Wired Controller for Xbox. This guide provides setup instructions, button functions, and warranty information.</p>
	<p>PDP Wired Controller for Xbox Quick Start Guide</p> <p>A quick start guide for the PDP Wired Controller for Xbox, covering initial setup, volume control, microphone muting, game/chat balance, and customization via the PDP Control Hub app. Includes warranty information in multiple languages.</p>
	<p>PDP Wired Controller for Xbox Quick Start Guide</p> <p>A quick start guide for the PDP Wired Controller for Xbox, detailing setup, volume control, microphone muting, chat balance, and customization options via the PDP Control Hub App.</p>
	<p>Victrix Gambit Wireless Gaming Headset Quick Start Guide</p> <p>Get started quickly with the Victrix Gambit Wireless Stereo Gaming Headset for Xbox Series X S, Xbox One, and Windows 10. This guide covers setup, controls, charging, and Dolby Atmos activation.</p>