

PDP 500-202-NA-CMPK

PDP Gaming Faceoff Deluxe Wireless Switch Pro Controller Instruction Manual

Model: 500-202-NA-CMPK

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your PDP Gaming Faceoff Deluxe Wireless Switch Pro Controller. Designed for Nintendo Switch, Switch Lite, and Switch OLED, this controller offers wireless freedom, customizable features, and motion control capabilities to enhance your gaming experience.



Figure 1: Front view of the PDP Gaming Faceoff Deluxe Wireless Switch Pro Controller, highlighting its wireless capability.

SETUP

Charging the Controller

Before initial use, ensure your controller is fully charged. The controller features a built-in rechargeable battery designed for up to 40 hours of gameplay on a single charge.

- Locate the USB charging port on the top edge of the controller.
- Connect the provided USB charging cable to the controller's port and the other end to a USB power source (e.g., Nintendo Switch dock, USB wall adapter, computer USB port).
- The LED indicators on the front of the controller will illuminate to show charging status. They will turn off or change color when fully charged.



Figure 2: The top of the controller, indicating the USB charging port for power input.

Pairing with Nintendo Switch

Follow these steps to wirelessly connect your controller to your Nintendo Switch console:

1. Ensure your Nintendo Switch console is powered on and updated to the latest system software.
2. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
3. On your PDP Gaming Faceoff Deluxe Wireless Switch Pro Controller, press and hold the **Sync Button** (located on the top edge, near the charging port) for a few seconds until the player LEDs begin to flash.
4. Once the controller is successfully paired, the player LED(s) corresponding to its assigned player number will remain lit.
5. The controller has a wireless range of 30 feet. Ensure you are within this range for optimal performance.

OPERATING INSTRUCTIONS

Controller Layout and Functions

The PDP Gaming Faceoff Deluxe Wireless Switch Pro Controller features a standard layout with additional customizable elements.

- **Analog Sticks:** Two precision analog sticks for movement and camera control. An additional precision analog stick is included for replacement or preference.
- **D-Pad:** Directional pad for precise input.
- **Face Buttons (A, B, X, Y):** Standard action buttons.
- **Shoulder Buttons (L, R) & Triggers (ZL, ZR):** Located on the top of the controller for various in-game actions.
- **Plus (+) and Minus (-) Buttons:** System menu navigation.
- **Home Button:** Returns to the Nintendo Switch HOME Menu.
- **Capture Button:** Takes screenshots or video clips.



Figure 3: Overview of the controller's front buttons and analog sticks.

Customizable Features

This controller allows for personalization to suit your gaming style.

- **Interchangeable Faceplate:** The unique design allows you to swap out the front faceplate for a different look. Gently lift the existing faceplate from the edges to remove it, and snap a new one into place.
- **Interchangeable Joysticks/Thumbsticks:** The analog stick caps can be removed and replaced with different styles or heights for improved comfort and precision.
- **Programmable Back Buttons (Paddles):** Two programmable back buttons are located on the underside of the controller. These can be assigned to replicate any other button on the controller for quick access during gameplay. Refer to the specific programming instructions provided with the controller or on the manufacturer's website for detailed steps.



Figure 4: The controller's interchangeable faceplate feature.



Figure 5: The underside of the controller, featuring the programmable back paddles.

Motion Control

The controller supports motion control features, allowing for immersive gameplay in compatible titles such as Mario Kart 8, Mario Party, Arms, Splatoon 2, and Zelda Breath of the Wild. Ensure the game supports motion controls and that the feature is enabled in the game's settings if applicable.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your controller:

- Use a soft, dry cloth to wipe down the controller's surface.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the controller.
- Clean around buttons and analog sticks carefully to prevent debris buildup.

Storage and Battery Care

- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the controller to strong impacts.
- To prolong battery life, avoid fully discharging the battery frequently. Charge the controller regularly, even if not in constant use.
- If storing for an extended period, charge the battery to approximately 50% before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not connect/pair.	Out of range, low battery, pairing issue, console software outdated.	Ensure controller is charged. Move closer to the Nintendo Switch console. Repeat the pairing process (press and hold Sync Button). Check for Nintendo Switch system updates.
Buttons or analog sticks are unresponsive.	Debris under buttons, software glitch, physical damage.	Clean the controller (refer to Maintenance section). Restart the Nintendo Switch console. Re-pair the controller. If issue persists, contact customer support.
Battery life is shorter than expected.	Aging battery, frequent full discharge, environmental factors.	Ensure full charge before use. Avoid extreme temperatures during use or charging. If significantly degraded, battery may need replacement (contact support).

SPECIFICATIONS

Model Number: 500-202-NA-CMPK

Connectivity: Wireless

Compatibility: Nintendo Switch, Nintendo Switch Lite, Nintendo Switch OLED

Battery: 1 Lithium Polymer battery (included)

Battery Life: Up to 40 hours per charge (approximate)

Wireless Range: Up to 30 feet (approximate)

Dimensions (L x W x H): 0.28 x 0.63 x 0.63 inches (Controller only, approximate)

Weight: 14.1 ounces (approximate)

Motion Control: Supported

Customization: Interchangeable faceplate, interchangeable joysticks, programmable back paddles

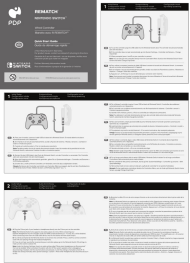



WARRANTY INFORMATION

This product is covered by a limited manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product packaging or visit the official PDP website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact PDP customer support through their official website or the contact information provided in your product documentation. You can visit the [PDP Store on Amazon](#) for more product information.

Related Documents

	<p>REMATCH Wired Controller for Nintendo Switch Quick Start Guide</p> <p>A quick start guide for the REMATCH Wired Controller for Nintendo Switch, detailing setup, audio configuration, volume controls, back button programming, and interchangeable parts.</p>
	<p>Afterglow Wireless Deluxe Controller for Nintendo Switch: Quick Start Guide & Setup</p> <p>Learn how to set up, pair, charge, program back buttons, and customize lighting for your Afterglow Wireless Deluxe Controller for Nintendo Switch. Includes warranty and safety information.</p>
	<p>REMATCH Wireless Controller Quick Start Guide for Nintendo Switch</p> <p>Get started quickly with the REMATCH Wireless Controller for Nintendo Switch. This guide covers pairing, charging, and programming the back buttons for your gaming experience.</p>
	<p>PDP REALMz Wireless Plus Controller Quick Start Guide</p> <p>A quick start guide for the PDP REALMz Wireless Plus Controller for Nintendo Switch, covering pairing, reconnecting, charging, LED lighting modes, and programming back buttons.</p>

