

PDP 049-012-EU-WH

PDP Wired Game Controller User Manual

Model: 049-012-EU-WH

INTRODUCTION

This manual provides instructions for setting up and operating your PDP Wired Game Controller. This controller is officially licensed for Xbox Series X|S, Xbox One, and is compatible with Windows 10 PC and Steam via USB connection. Please read this manual thoroughly before use to ensure proper functionality and to maximize your gaming experience.

PACKAGE CONTENTS

- PDP Wired Game Controller (Model: 049-012-EU-WH)
- Detachable USB Cable (10-foot)

CONTROLLER LAYOUT AND FEATURES

Familiarize yourself with the various buttons and components of your PDP Wired Game Controller.



Image: Front view of the PDP Wired Game Controller in Arctic White. It features two analog sticks, a D-pad, A/B/X/Y buttons, Menu, View, Share buttons, and the Xbox button. A wired USB connection port is visible at the top.

1. **Left Analog Stick:** For movement and camera control.
2. **Right Analog Stick:** For camera control and aiming.
3. **D-Pad:** Directional input, also houses audio controls.
4. **A/B/X/Y Buttons:** Action buttons.
5. **Xbox Button:** Powers on/off the console/PC, opens system menus.
6. **View Button:** Accesses in-game maps, inventories, or other context-sensitive menus.
7. **Menu Button:** Accesses game menus or system settings.
8. **Share Button:** Captures screenshots and video clips.
9. **Left/Right Bumpers (LB/RB):** Shoulder buttons for various in-game actions.
10. **Left/Right Triggers (LT/RT):** Analog triggers for precise input, such as acceleration or firing.
11. **3.5mm Audio Jack:** For connecting a headset.
12. **USB Port:** For connecting the detachable USB cable.

SETUP INSTRUCTIONS

Connecting to Xbox Series X|S or Xbox One:

1. Ensure your Xbox console is powered on.
2. Connect the detachable USB cable to the USB port on the top of the controller.
3. Plug the other end of the USB cable into an available USB port on your Xbox console.
4. The controller will automatically connect and the Xbox button will illuminate, indicating it is ready for use.

Connecting to PC (Windows 10/Steam):

1. Ensure your PC is powered on.
2. Connect the detachable USB cable to the USB port on the top of the controller.
3. Plug the other end of the USB cable into an available USB port on your PC.
4. Windows will automatically detect and install the necessary drivers. This may take a few moments.
5. Once drivers are installed, the Xbox button on the controller will illuminate, indicating it is ready for use with compatible PC games and Steam.

OPERATION

The PDP Wired Game Controller functions similarly to standard Xbox controllers. Refer to your game's instructions for specific button assignments.

Basic Controls:

- **Analog Sticks:** Control character movement, camera, or aiming.
- **D-Pad:** Navigate menus, select items, or provide directional input.
- **A/B/X/Y Buttons:** Perform in-game actions such as jumping, interacting, or attacking.
- **Triggers (LT/RT):** Often used for actions requiring variable input, like accelerating in racing games or firing weapons.
- **Bumpers (LB/RB):** Typically used for quick actions or menu navigation.
- **Xbox Button:** Press to open the Xbox Guide on console or the Xbox Game Bar on PC. Hold to power off the console or controller.
- **Share Button:** Press to capture a screenshot or hold to record a video clip (functionality depends on system settings).

ADVANCED AUDIO CONTROLS

The controller features integrated audio controls for convenient adjustment of game and chat audio when a headset is connected to the 3.5mm audio jack.

- **Function Button:** Located near the D-pad. This button is used in conjunction with the D-pad for audio adjustments.
- **Adjusting Game Volume:** Hold the *Function Button* and press *D-Pad Up/Down* to increase/decrease game volume.
- **Adjusting Chat Volume:** Hold the *Function Button* and press *D-Pad Left/Right* to increase/decrease chat volume.
- **Muting Microphone:** Double-tap the *Function Button* to mute or unmute your microphone. The LED indicator on the controller may change color to show mute status (refer to controller's specific LED behavior).

CUSTOMIZATION WITH PDP CONTROL HUB APP

Enhance your gaming experience by customizing your controller settings using the free PDP Control Hub App. This application allows you to remap buttons, reconfigure triggers, adjust dual rumble motors, and more.

- **Download:** The PDP Control Hub App is available for download from the Microsoft Store on Xbox consoles and Windows PCs.
- **Features:**
 - Button remapping.
 - Trigger dead zone adjustment.
 - Vibration intensity control for dual rumble motors.
 - Stick sensitivity calibration.
- **Usage:** Connect your controller to your Xbox or PC, launch the PDP Control Hub App, and follow the on-screen instructions to personalize your settings.

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: An official overview of the PDP Gaming Wired Controller for Xbox Series X|S and Xbox One, demonstrating its features such as compatibility, audio controls, dedicated share button, and detachable cable.

TROUBLESHOOTING

Problem	Possible Solution
Controller not responding.	<ul style="list-style-type: none">• Ensure the USB cable is securely connected to both the controller and the console/PC.• Try a different USB port on your console/PC.• Restart your console/PC.• Check if the cable is damaged.
Audio issues (no sound/mic not working).	<ul style="list-style-type: none">• Ensure your headset is fully plugged into the 3.5mm audio jack.• Check audio settings on your console/PC and within the game.• Verify microphone mute status by double-tapping the Function button.• Adjust game/chat volume using the Function button and D-pad.• Test the headset with another device to confirm it is working.

Problem	Possible Solution
Buttons/sticks not working correctly (e.g., stick drift).	<ul style="list-style-type: none"> • Calibrate the controller using the PDP Control Hub App. • Ensure the controller firmware is up to date via the PDP Control Hub App. • Clean around the buttons/sticks to remove any debris.

SPECIFICATIONS

- **Model Number:** 049-012-EU-WH
- **Compatibility:** Xbox Series X|S, Xbox One, Windows 10 PC, Steam
- **Connectivity:** Wired USB
- **Cable Length:** 10 feet (detachable)
- **Audio:** 3.5mm headset jack with integrated audio controls
- **Vibration:** Dual rumble motors
- **Customization:** Via free PDP Control Hub App
- **Dimensions:** 0.31 x 0.83 x 0.43 inches (approximate)
- **Weight:** 10.5 ounces (approximate)




WARRANTY AND SUPPORT




For warranty information and technical support, please visit the official PDP Gaming website or contact their customer service. Keep your proof of purchase for warranty claims.

Online Resources: [PDP Gaming Support](#)

© 2023 PDP Gaming. All rights reserved.

Related Documents - 049-012-EU-WH

	PDP Wired Controller for Xbox Quick Start Guide A quick start guide for the PDP Wired Controller for Xbox, covering initial setup, volume control, microphone muting, game/chat balance, and customization via the PDP Control Hub app. Includes warranty information in multiple languages.
	PDP Wired Controller for Xbox Quick Start Guide and Warranty Information Get started with your PDP Wired Controller for Xbox. This guide provides quick setup instructions, details on volume and microphone control, and comprehensive limited warranty information.
	PDP Wired Controller for Xbox Quick Start Guide Get started quickly with your PDP Wired Controller for Xbox. This guide provides setup instructions, button functions, and warranty information.

	<p>PDP REMATCH Wired Controller for Xbox Quick Start Guide</p> <p>This guide provides instructions for setting up and using the PDP REMATCH Wired Controller for Xbox, including features like microphone muting, volume control, game/chat balance, back button programming, and hair trigger mode. It also details how to use the PDP Control Hub app for further customization.</p>
	<p>Afterglow Wired Controller for Xbox Quick Start Guide</p> <p>Concise guide to setting up and using the Afterglow Wired Controller for Xbox, covering features like microphone mute, volume control, LED lighting modes, and customization via the PDP Control Hub app.</p>
	<p>PDP REALMz Wireless Controller for Xbox Quick Start Guide</p> <p>A quick start guide for the PDP REALMz Wireless Controller for Xbox Series X S, Xbox One, and Windows 10/11, covering setup, features, and troubleshooting.</p>