

[Manuals.plus](#) /

› [Philips Kitchen Appliances](#) /

› Philips Kitchen Appliances Avance Pasta & noodle Maker 4-in-1 accessory, unique design, shape kit- Shells and Paccheri, Rigatoni, & Macaroni (HR2494/00) Accessory Kit 2 Instruction Manual

Philips Kitchen Appliances HR2494/00

Philips Avance Pasta Maker Accessory Kit 2 Instruction Manual

Model: HR2494/00

Brand: Philips Kitchen Appliances

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Philips Avance Pasta Maker Accessory Kit 2. This kit is designed to expand the versatility of your Philips Avance Pasta Maker by enabling the creation of various pasta shapes.

Please read this manual thoroughly before first use and keep it for future reference.

2. PRODUCT OVERVIEW

The Philips Avance Pasta Maker Accessory Kit 2 (Model HR2494/00) includes four unique shaping discs and a pasta cutting tool. These discs are engineered with specialized extrusion holes to ensure consistent and smooth pasta production.

2.1 Included Components

- Shells Shaping Disc
- Paccheri Shaping Disc
- Rigatoni Shaping Disc
- Macaroni Shaping Disc
- Pasta Cutting Tool



Figure 1: Overview of the four shaping discs and pasta cutting tool.

2.2 Pasta Shapes



Figure 2: The included pasta cutting tool.

2.3 Compatibility

This accessory kit is compatible with Philips Avance Pasta Maker models HR2357 and HR2375. It is not compatible with compact versions (HR2370, HR2371, HR2372).

3. SETUP

Before first use, ensure all components are clean. Wash the shaping discs and pasta cutting tool with warm soapy water or place them in the dishwasher. Ensure they are completely dry before assembly.

To attach a shaping disc: Remove the front panel of your Philips Avance Pasta Maker. Align the chosen shaping disc with the extrusion opening and press it firmly into place. Reattach the front panel, ensuring it is securely fastened to prevent dough leakage during operation.

4. OPERATING INSTRUCTIONS

This accessory kit is used in conjunction with your Philips Avance Pasta Maker. Refer to your pasta maker's main instruction manual for detailed steps on preparing dough.

Once the dough is mixed and the extrusion process begins, the pasta will emerge from the selected shaping disc. Use the provided pasta cutting tool to cut the pasta to your desired length as it extrudes.



Figure 3: Example of Paccheri pasta produced by the maker.

The pasta maker automatically weighs ingredients and indicates liquid requirements. For optimal results, slowly pour the liquid (water, egg, etc.) into the designated opening while the machine mixes the dry ingredients.



Figure 4: Example of Rigatoni pasta.

5. MAINTENANCE AND CLEANING

5.1 Cleaning

All shaping discs and the pasta cutting tool are dishwasher safe for convenient cleaning. For manual cleaning, soak the components in warm water to loosen any remaining dough, then scrub with a brush or sponge. Ensure all dough residue is removed from the extrusion holes to maintain optimal performance.

5.2 Storage

The Philips Avance Pasta Maker features an integrated storage drawer for all shaping discs and the pasta cutting tool, keeping them organized and easily accessible.

6. TROUBLESHOOTING

If you encounter issues with your accessory kit, please refer to the following common solutions:

- **Pasta not extruding properly:** Ensure the shaping disc is correctly aligned and securely fastened. Verify that the dough consistency is appropriate as per your pasta maker's main manual (too dry or too wet dough can hinder extrusion). Clean any blockages in the disc's extrusion holes.
- **Machine not starting:** Check that the front panel is fully secured and the power button is pressed. The machine has safety features that prevent operation if components are not correctly assembled.

For further assistance, consult your Philips Avance Pasta Maker's main instruction manual or contact Philips customer support.

7. SPECIFICATIONS

- **Brand:** Philips Kitchen Appliances
- **Model Number:** HR2494/00
- **Material:** Plastic
- **Included Components:** 4 Shaping Discs (Shells, Paccheri, Rigatoni, Macaroni), 1 Pasta Cutting Tool
- **Number of Discs:** 4
- **Operation Mode:** Manual (accessory used with electric pasta maker)
- **Dishwasher Safe:** Yes
- **Item Weight:** Approximately 0.61 Kilograms (1.34 pounds)
- **Package Dimensions:** 9.13 x 8.23 x 1.93 inches
- **Country of Origin:** China
- **UPC:** 075020090539

8. WARRANTY AND SUPPORT

For warranty information and customer support regarding your Philips Avance Pasta Maker Accessory Kit 2, please refer to the documentation provided with your main Philips Avance Pasta Maker unit or visit the official Philips Kitchen Appliances website.