

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ceenwes](#) /

› [Ceenwes Adjustable Beard Trimmer User Manual](#)

Ceenwes CWS-035

Ceenwes Adjustable Beard Trimmer User Manual

Model: CWS-035

1. INTRODUCTION

Thank you for choosing the Ceenwes Adjustable Beard Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read it thoroughly before first use and keep it for future reference.



Image: The Ceenwes Adjustable Beard Trimmer, showcasing its sleek design, on/off switch, and the detachable adjustable comb.

2. PACKAGE CONTENTS

Upon opening the package, please ensure all items listed below are present and in good condition:

- 1 x Hair Clipper
- 1 x Comb for Hair Length Setting (Adjustable)
- 1 x USB Cable
- 1 x Lubricating Oil for Head of Machine

- 1 x User Manual (this document)
- 1 x Cleaning Brush

3. KEY FEATURES

3.1 Adjustable Precision Dial

The trimmer features 19 precision length settings, adjustable in 0.5 mm steps. This provides ultimate control and precision for various beard lengths and styles, allowing you to achieve your desired look with ease.

Perfect Adjustable Precision Dial

Provides 19 built-in precision length allows precise control of 0.5mm

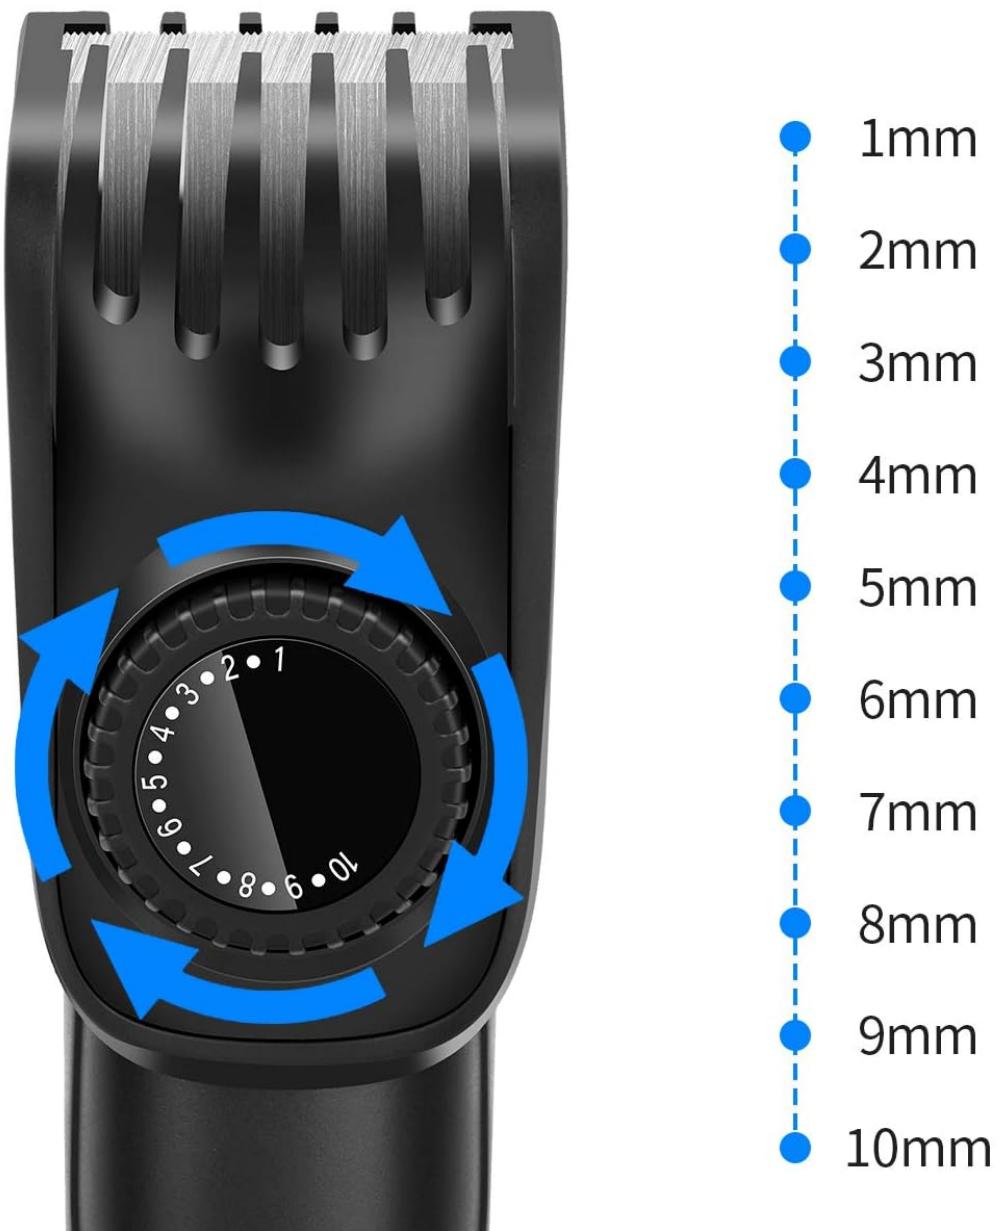


Image: Detailed view of the adjustable precision dial, indicating length settings from 1mm to 10mm.

3.2 Easy to Clean Design

The detachable blade cutter allows for easy and fast cleaning. Simply remove the blade head and rinse it under running

water. This design saves time and ensures hygienic use.



Easy Clean



Image: Demonstrates the ease of cleaning by rinsing the trimmer head under water and showing the detachable blade.

3.3 Full-Metal Titanium Blades

Equipped with superior titanium-coated blades, this trimmer offers excellent cutting performance while generating low heat to protect your skin. The R-shaped edge design significantly reduces the risk of nicks and cuts, providing a gentle and smooth hair-cutting experience.



Quick charging



2 hours
charging time



90 minutes
running time

Image: A close-up view of the titanium blade, highlighting its precision and design.

3.4 USB Fast Charging

The cordless hair clipper comes with a USB power cord for convenient charging. A full charge takes approximately 2 hours and provides around 90 minutes of running time, making it ideal for both home and travel use.



Image: The trimmer being charged via USB, illustrating its quick charging capability (2 hours charge for 90 minutes running time).

4. SETUP

- 1. Initial Charge:** Before first use, fully charge the trimmer. Connect the USB cable to the trimmer's charging port and plug the other end into a compatible USB power source (e.g., computer, wall adapter). The charging light will indicate charging status. A full charge takes approximately 2 hours.
- 2. Attach Comb:** Ensure the adjustable comb is securely attached to the trimmer head. Align the comb with the grooves on the trimmer and push until it clicks into place.
- 3. Lubricate Blades:** Apply a few drops of the provided lubricating oil to the blades before first use and periodically thereafter. This ensures smooth operation and extends blade life. Turn the trimmer on for a few seconds after oiling to distribute the oil evenly.

Titanium Blade

Titanium blades to effectively cut each hair preventing skin irritation and will not wear down



Image: An exploded view diagram highlighting key components such as the adjustable precision dial, on/off button, charging indicator light, and USB charging port.

5. OPERATING INSTRUCTIONS

- Power On/Off:** Press the On/Off button to turn the trimmer on or off.
- Adjust Length Setting:** Rotate the adjustable precision dial on the comb to select your desired hair length. The settings range from 1mm to 10mm, with 0.5mm increments.
- Trimming:** Hold the trimmer with the blades facing the area you wish to trim. Move the trimmer against the direction of hair growth for best results. Use smooth, even strokes.
- Cordless Operation:** The trimmer is designed for cordless use, providing flexibility and convenience. It can also be used while plugged in if the battery is low.



Image: A user demonstrating the application of the Ceenwes beard trimmer for grooming.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your trimmer.

1. After Each Use:

- Ensure the hair clipper is turned off.
- Remove the adjustable comb.
- Detach the blade head by gently pushing it off the trimmer body.
- Use the provided cleaning brush to remove any trapped hairs from the blades and the trimmer body.
- Rinse the detachable blade head under running water. The trimmer body can also be cleaned with a wet cloth, but ensure it is wiped dry immediately after cleaning.
- Allow the blade head to air dry completely before reattaching it to the trimmer body.

2. **Lubrication:** After cleaning the hair clipper, add a few drops of the lubricating oil onto the blades. This ensures the

machine works smoothly for subsequent uses.

3. **Storage:** Store the trimmer in a cool, dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

If you encounter any issues with your Ceenwes Beard Trimmer, please refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is low or depleted.	Charge the trimmer fully (approx. 2 hours). Ensure the USB cable is properly connected.
Blades are pulling hair or cutting poorly.	Blades are dirty, dull, or not lubricated.	Clean the blades thoroughly and apply lubricating oil. If issues persist, blades may need replacement (contact support).
Trimmer makes unusual noise.	Blades are not properly aligned or lubricated.	Ensure blades are clean and well-oiled. Check if the blade head is securely attached.
Charging light not working.	Faulty USB cable or power source.	Try a different USB cable or power adapter. Ensure the connection is secure.

If the problem persists after trying these solutions, please contact Ceenwes customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Ceenwes
Model Number	CWS-035
Power Source	Battery Powered (USB Rechargeable)
Blade Material	Titanium
Special Features	Cordless, USB Rechargeable, Waterproof (for cleaning blades)
Charging Time	Approx. 2 hours
Running Time	Approx. 90 minutes
Package Dimensions	18.8 x 14.2 x 5.7 cm
Item Weight	260 g
ASIN	B08FD73LN2
Date First Available	7 August 2020

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your Ceenwes Adjustable Beard Trimmer, please contact Ceenwes customer service directly. Refer to the product packaging or the official Ceenwes website for contact details.

Please retain your proof of purchase for any warranty claims.

© 2023 Ceenwes. All rights reserved.
This manual is subject to change without notice.