

Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control Instruction Manual for Sencor TV Models SLE-1902M4, SLE-2202M4, SLE-2402M4, SLT-24F66DVD, SLE-2443D, SLE-2401T

## Easytry123 Replacement Remote Control B08FD84NWK

# Easytry123 Replacement Remote Control Instruction Manual

For Sencor TV Models: SLE-1902M4, SLE-2202M4, SLE-2402M4, SLT-24F66DVD, SLE-2443D, SLE-2401T

## 1. INTRODUCTION

---

This manual provides instructions for the setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with various Sencor TV models, including SLE-1902M4, SLE-2202M4, SLE-2402M4, SLT-24F66DVD, SLE-2443D, and SLE-2401T. Please read this manual thoroughly before using the remote control to ensure proper functionality.

While this replacement remote is designed to replicate the functions of your original Sencor TV remote, some advanced or specific functions may vary or not be fully supported. Refer to your television's original manual for detailed TV-specific operations.

## 2. SAFETY INFORMATION

---

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping the remote control or subjecting it to strong impacts.
- Do not immerse the remote control in water or any other liquid.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations. Do not incinerate batteries.
- Keep batteries out of reach of children.

## 3. PRODUCT OVERVIEW

---

The Easytry123 replacement remote control features a standard layout for easy navigation and control of your Sencor television. Below is an image illustrating the front of the remote control.







Figure 1: Front view of the Easytry123 replacement remote control. This image displays the full button layout, including power, mute, number keys, navigation, volume, channel, and various function buttons.

## Button Functions

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV audio.
- **FAV:** Accesses favorite channels.
- **P.mode:** Picture mode selection.
- **S.mode:** Sound mode selection.
- **Sleep:** Sets the sleep timer.
- **Scaler:** Adjusts screen scaling.
- **GOTO:** Jumps to a specific time in media playback.
- **Number Keys (0-9):** Direct channel selection.
- **A-B:** Repeats a section of media.
- **REPEAT:** Repeats current track/chapter.
- **ANGLE:** Changes camera angle (for compatible media).
- **RECALL:** Returns to the previous channel.
- **-/--:** Toggles between single and double-digit channel input.
- **SETUP:** Accesses the TV setup menu.
- **EXIT:** Exits the current menu or function.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **CH+/CH-:** Changes channels up or down.
- **VOL+/VOL-:** Adjusts volume up or down.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Previous, Next):** Controls media playback.
- **TEXT:** Accesses Teletext.
- **MIX:** Mixes Teletext with TV picture.
- **INDEX:** Accesses Teletext index.
- **SOURCE:** Selects input source (HDMI, AV, etc.).
- **CANCEL:** Cancels current action.
- **REVEAL:** Reveals hidden Teletext information.
- **HOLD:** Holds Teletext page.
- **SIZE:** Changes Teletext display size.
- **DVD-MENU:** Accesses DVD menu.
- **TITLE:** Accesses DVD title menu.
- **PBC:** Playback Control (for VCD/SVCD).
- **AUDIO:** Selects audio track.

- **S.PAGE:** Sub-page selection for Teletext.
- **ZOOM- / ZOOM+:** Zooms in or out.
- **PAGE- / PAGE+:** Navigates pages.
- **I/II:** Selects stereo/mono or dual audio.
- **DISPLAY:** Displays information about the current program.
- **RADIO:** Switches to radio mode (if supported by TV).
- **EPG:** Electronic Program Guide.
- **SUBTITLE:** Toggles subtitles.
- **STITLE:** Unknown/Specific subtitle function.

## 4. SETUP

---

### Battery Installation

The remote control requires two (2) AA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



*Figure 2: Back view of the Easytry123 replacement remote control, highlighting the battery compartment.*

*Note:* The remote control does not require programming for the listed Sencor TV models. It is designed to work directly upon battery installation.

## 5. OPERATING INSTRUCTIONS

---

Point the remote control directly at the infrared receiver on your Sencor TV. Ensure there are no obstructions between the remote and the TV.

- **Power On/Off:** Press the **POWER** button once to turn the TV on or off.
- **Volume Adjustment:** Use the **VOL+** and **VOL-** buttons to increase or decrease the volume.
- **Channel Selection:** Use the **CH+** and **CH-** buttons to change channels sequentially. For direct channel input, use the **Number Keys (0-9)**.
- **Input Source:** Press the **SOURCE** button to cycle through available input sources (e.g., HDMI 1, AV, USB).
- **Menu Navigation:** Use the **Navigation Pad** (Up, Down, Left, Right) to move through menus and the **OK** button to confirm selections.
- **Exit Menu:** Press the **EXIT** button to close the current menu or return to live TV.

## 6. MAINTENANCE

---

- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the remote control becomes unresponsive, first check the batteries. Replace them if they are low or depleted.
- Ensure the infrared emitter on the front of the remote and the receiver on the TV are clean and unobstructed.

## 7. TROUBLESHOOTING

---

If you experience issues with your remote control, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Remote not working at all.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the TV.
Some buttons not responding.	Button malfunction. Specific function not supported by replacement remote.	Clean the remote. Confirm the function is supported by your TV model and this replacement remote.
TV responds intermittently.	Low batteries. Weak signal due to distance or interference.	Replace batteries. Reduce distance to TV. Ensure no strong light sources are interfering with the IR signal.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	Easytry123
Compatible Devices	Sencor Televisions (Models: SLE-1902M4, SLE-2202M4, SLE-2402M4, SLT-24F66DVD, SLE-2443D, SLE-2401T)
Controller Type	Button Control
Special Feature	Ergonomic design
Batteries Required	2 x AA (not included)
ASIN	B08FD84NWK

## 9. WARRANTY AND SUPPORT

---

Information regarding specific warranty terms for this Easytry123 replacement remote control is not provided in the product details. For any issues or support inquiries, please refer to the seller or retailer from whom the product was purchased.