

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LASER X](#) /

› [Laser X Revolution 4 Players Set Instruction Manual](#)

## LASER X 1427699

# Laser X Revolution 4 Players Set Instruction Manual

Model: 1427699 | Brand: LASER X

## INTRODUCTION

Welcome to the world of Laser X Revolution! This instruction manual provides essential information for setting up, operating, and maintaining your Laser X Revolution 4 Players Set. Please read this manual thoroughly before use to ensure a safe and enjoyable experience. This set allows for real-life laser gaming, enabling players to engage in exciting laser tag battles.

## SAFETY INFORMATION

- Do not aim blasters directly at eyes or face.
- Use only as intended for laser tag play.
- Keep away from small children due to small parts.
- Adult supervision is recommended for younger players.
- Do not modify the product in any way.

## WHAT'S INCLUDED

Your Laser X Revolution 4 Players Set typically includes:

- 4 Laser X Revolution Blasters
- 4 Arm Receivers
- Batteries (4 AA batteries per blaster, included)



Image: The complete Laser X Revolution 4 Players Set in action, featuring four blasters and arm receivers, demonstrating the multi-player experience.

## SETUP

### Battery Installation

Each Laser X Revolution Blaster requires 4 AA batteries. These batteries are included with your set.

1. Locate the battery compartment on the blaster (usually on the handle or underside).
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 4 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

### Initial Power-On and Pairing

Once batteries are installed, power on each blaster. The blasters and arm receivers are designed to pair automatically. Follow the on-screen or audio prompts from the blaster for initial setup.



Image: A detailed view of one Laser X Revolution blaster, highlighting its design and light-up elements during operation.



Image: A display of individual Laser X Revolution blasters and their arm receivers, showcasing the different color options available.

## OPERATING INSTRUCTIONS

### Game Modes

The Laser X Revolution set supports both team-based and individual play. Refer to the blaster's voice coach for instructions on selecting game modes and team assignments (e.g., Team Red or Team Blue).

### Blaster Operation

- **Blasting:** Aim your blaster at an opponent's arm receiver and pull the trigger to fire. The blasters have a range of up to 300 feet.
- **Reloading:** Utilize the quick-slide reload mechanism on your blaster to prepare for your next shot.
- **Hit Indicator:** When hit, your arm receiver will register the hit, and the blaster will indicate a hit through lights and sounds. The blaster will temporarily stop firing until the game round is over or reset.
- **Light-up Colors:** Blasters feature more than 20 different light-up colors, which can indicate team affiliation, health status, or other game-specific information.
- **Digital Light and Sound:** The blasters provide immersive digital light and sound effects to enhance the gaming experience.



Image: Children actively playing laser tag with the Laser X Revolution blasters, demonstrating the interactive nature of the game.

## Important Notes for Play

- Optimal performance is achieved in low-light conditions. Direct sunlight may affect blaster range and accuracy.
- Ensure clear line of sight between blasters and receivers for best results.

## MAINTENANCE

### Cleaning

To clean your Laser X Revolution blasters and receivers, wipe them with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Do not submerge in water.

### Storage

When not in use, store the set in a cool, dry place away from direct sunlight. Remove batteries if the product will not be used for an extended period to prevent leakage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster not powering on.	Dead or incorrectly installed batteries.	Check battery polarity or replace with fresh AA batteries.
Blaster not firing or registering hits.	Obstruction, out of range, or bright sunlight interference.	Ensure clear line of sight. Move closer to target. Play in shaded areas or indoors for best results.
Blaster sounds are distorted or low.	Low batteries.	Replace batteries.
Difficulty changing team colors.	Incorrect button sequence or timing.	Refer to the blaster's voice coach or quick start guide for specific instructions on team selection.

## SPECIFICATIONS

**Product Dimensions:** 22.5 x 18 x 3 inches

**Item Weight:** 3.53 pounds

**Model Number:** 1427699

**ASIN:** B08FD93BB9

**Manufacturer Recommended Age:** 6 months - 6 years (Note: This age range seems unusually broad for a laser tag)

product, but it's from the provided data. User discretion advised.)

**Batteries:** 4 AA batteries required per blaster (included)

**Range:** Up to 300 feet

**Manufacturer:** Laser X

**Release Date:** November 1, 2020

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the packaging or visit the official LASER X website. Keep your purchase receipt as proof of purchase.