

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VOBAGA](#) /

› [VOBAGA Coffee Mug Warmer V16006 User Manual](#)

VOBAGA V16006

VOBAGA Coffee Mug Warmer V16006 User Manual

Model: V16006



INTRODUCTION

This manual provides instructions for the safe and efficient operation of your VOBAGA Coffee Mug Warmer, Model V16006. Please read this manual thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, basic safety precautions should always be followed, including:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The heating plate is hot during operation and remains hot for a period after use. A blinking red light indicates the heating plate is hot.
- Use only flat-bottomed, thin-walled mugs for optimal heat transfer.

PRODUCT OVERVIEW

The VOBAGA Coffee Mug Warmer is designed to keep your beverages at an optimal drinking temperature. It features three temperature settings and an automatic shut-off function for safety.



Figure 1: VOBAGA Coffee Mug Warmer (Green model) with a mug of coffee.

The warmer consists of a heating plate and a single touch button for power and temperature control.

SETUP

1. Unpack the mug warmer and ensure all components are present and undamaged.
2. Place the mug warmer on a flat, stable, and heat-resistant surface.
3. Ensure the power cord is not obstructed and is away from water sources.
4. Plug the UL-certified power cord into a standard 110V electrical outlet.



Figure 2: Product dimensions and power cord length (59.06 inches / 150 cm) with UL plug.

OPERATING INSTRUCTIONS

The VOBAGA Coffee Mug Warmer features a single touch button for control and three temperature settings.

Power On/Off and Temperature Adjustment

- **To Power On:** Place your mug with a hot beverage on the heating plate. Tap the power button once. The indicator light will illuminate.
- **Temperature Settings:**
 - Tap once: Highest temperature (approximately 149°F / 65°C). Indicator light: Red.
 - Tap twice: Medium temperature (approximately 131°F / 55°C). Indicator light: Pink.
 - Tap three times: Lowest temperature (approximately 104°F / 40°C). Indicator light: Blue.
- **To Power Off:** Tap the power button a fourth time, or simply remove the mug from the heating plate. The device will automatically shut off after 4 hours of continuous operation.

Three Temperature Settings

NOTE: DON'T TOUCH the surface when the mug warmer is working!






Light colors:			
Drink temp:	149°F	131°F	104°F
Operating:	Touch once	Touch twice	Touch triple

Figure 3: Temperature settings and indicator light colors.

Automatic Shut-off and Residual Heating Reminder

- The mug warmer will automatically shut off after 4 hours of continuous operation as a safety feature.
- After the device is turned off, the indicator light may blink red. This signifies that the heating plate is still hot. The blinking will stop once the temperature drops below 97°F (36°C). Exercise caution when the light is blinking.



4 HOURS AUTO SHUT OFF

Automatic shut off after continually working 4 hours. Don't worry to forget shut down it. (NOTE: you also can touch the "Power" button to turn it off at anytime.)



REMINDE RESIDUAL HOT

The indicator light will keep flash red for several minutes before finally the residual temperature dissipates to prevent accidental scald.



2 IN 1 TOUCH BOTTON

One-button control switch and adjustment temperature. Super easy to use.

Tips: Mug is not included.

Figure 4: Key features: 4-hour auto shut-off and residual heat reminder.

Mug Compatibility

For optimal performance, use flat-bottomed, thin-walled mugs. The heating plate is designed to accommodate most standard mug sizes.



CAUTION-HOT SURFACE
VOBAGA

Large Cup Surface

Use Cups of Various Sizes at Will



Tips: Mug is not included.

Suitable for	 ✓ Flat-bottomed Glass	 ✓ Box-packed	 ✓ Feeding bottle	 ✓ Stainless Steel
Not Applicable fo	 ✗ Vacuum Cup	 ✗ Double Glass	 ✗ Bagged Drinks	 ✗ Plastic Cup

Figure 5: Mug compatibility guide. Suitable for flat-bottomed glass, box-packed drinks, feeding bottles, and stainless steel mugs. Not applicable for vacuum cups, double-walled glass, bagged drinks, or plastic cups.

MAINTENANCE

Regular cleaning ensures the longevity and proper function of your mug warmer.

- Always unplug the device and allow it to cool completely before cleaning.
- Wipe the heating plate and exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- Do not immerse the mug warmer in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your VOBAGA Coffee Mug Warmer, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Warmer does not turn on.	Not plugged in; power outlet malfunction; device malfunction.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet. If the issue persists, contact customer service.
Beverage is not warm enough.	Incorrect temperature setting; unsuitable mug type; liquid was cold initially.	Select a higher temperature setting. Use a flat-bottomed, thin-walled mug. The warmer is designed to maintain warmth, not rapidly heat cold liquids. Ensure the beverage is already hot when placed on the warmer.
Indicator light is blinking red after turning off.	Residual heat on the plate.	This is a normal safety feature. The light indicates the plate is still hot. Avoid touching the surface until the light stops blinking.
Warmer automatically shut off.	4-hour auto shut-off activated.	This is a safety feature. To resume warming, turn the device back on.

SPECIFICATIONS

Feature	Detail
Model Number	V16006
Brand	VOBAGA
Voltage	110 Volts
Wattage	20 watts
Maximum Temperature	149°F (65°C)
Product Dimensions	5.32 x 4.33 x 0.79 inches (13.5 x 11 x 2 cm)
Item Weight	10.2 ounces
Heating Plate Material	3.54 Inch Heating Plate with Sturdy Material
Cord Length	59.06 inches (150 cm)
Auto Shut-off	After 4 hours of continuous operation

WARRANTY AND SUPPORT

VOBAGA is committed to customer satisfaction. For any questions, concerns, or support needs regarding your VOBAGA Coffee Mug Warmer, please contact our customer service team. We aim to resolve any issues within 24 hours.

For more information or to access additional support resources, please refer to the official VOBAGA website or the contact information provided with your purchase.



