

[Manuals.plus](#) /

› [TOSHIBA](#) /

› Toshiba Dynabook Satellite Pro L50-G Business Computer User Manual

## TOSHIBA L50-G

# Toshiba Dynabook Satellite Pro L50-G User Manual

Model: L50-G

## INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Toshiba Dynabook Satellite Pro L50-G Business Computer. This high-performance laptop features a 10th Gen Intel Core i7-10510U Processor, 32GB DDR4 RAM, a 1TB PCIe SSD, and NVIDIA GeForce MX250 graphics, designed for business and professional use. It comes pre-installed with Windows 10 Pro and includes a BROAGE All-in-One Conference Camera for enhanced communication.



Figure 1: Toshiba Dynabook Satellite Pro L50-G laptop with the included BROAGE Conference Camera stylus.

# SETUP

---

## 1. Unpacking

Carefully remove all components from the packaging. Ensure the following items are present:

- Toshiba Dynabook Satellite Pro L50-G Laptop
- AC Adapter and Power Cord
- BROAGE All-in-One Conference Camera
- Documentation (this manual, warranty information)

## 2. Initial Power On

1. Connect the AC adapter to the laptop's power port and then to a power outlet.
2. Open the laptop lid.
3. Press the power button located on the keyboard deck.
4. Follow the on-screen instructions to complete the Windows 10 Pro setup, including language, region, network connection, and user account creation.

## 3. Connecting the BROAGE Conference Camera

The BROAGE All-in-One Conference Camera is designed for easy integration. Connect it to an available USB port on your laptop. Windows will typically install the necessary drivers automatically. For optimal performance, ensure the camera is positioned appropriately for video calls.

### 3 IN 1 DESIGN STYLUS STYLUS PEN + BALLPOINT PEN + USB FLASH DRIVE



Figure 2: The BROAGE Conference Camera, which also functions as a stylus and USB flash drive.

## OPERATING THE LAPTOP

### 1. Keyboard and Touchpad

The laptop features a premium raised-tile keyboard with a 10-key numeric pad for efficient data entry. The touchpad supports multi-touch gestures for navigation.



Figure 3: Keyboard and touchpad layout.

## 2. Ports and Connectivity

Your laptop offers a variety of ports for connecting external devices and networks.

- **USB 3.2 Gen 1 Type-C:** For data transfer, power delivery, and display output.
- **USB 3.2 Gen 1:** Three ports, one with USB Sleep and Charge functionality.
- **HDMI:** For connecting to external displays or projectors.
- **RJ-45 LAN:** For wired network connections.
- **SD Card Reader:** For reading SD memory cards.
- **Headset Jack:** For connecting headphones or a headset.

# COMPLETE CONNECTIVITY



SD Card



HDMI



USB 3.0



USB Type-C



DVD-RW



LAN



Figure 4: Complete connectivity options on the laptop.

## 3. Wireless Connectivity

The laptop supports Wireless-LAN (802.11ac+agn) and Bluetooth for wireless network and device connections. To enable or disable wireless features, use the Windows settings or function keys as appropriate.

## MAINTENANCE

### 1. Cleaning

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Keyboard and Casing:** Use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid harsh chemicals.

### 2. Battery Care

To prolong battery life:

- Avoid extreme temperatures.
- Do not leave the laptop plugged in constantly if not in use for extended periods.
- Periodically discharge and recharge the battery.

### 3. Software Updates

Regularly update your Windows operating system and drivers to ensure optimal performance and security. You can check for updates via Windows Update settings.

## TROUBLESHOOTING

### 1. Laptop Does Not Power On

- Ensure the AC adapter is securely connected to both the laptop and a working power outlet.
- Check if the power outlet is functional by plugging in another device.
- If using battery power, ensure the battery is charged.

### 2. No Display on Screen

- Ensure the laptop is powered on.
- Try adjusting the display brightness using the function keys.
- If an external monitor is connected, ensure it is properly connected and selected as the display output (often via Fn + F5 or similar key combination).

### 3. Wi-Fi Connectivity Issues

- Check if Wi-Fi is enabled in Windows settings.
- Restart your wireless router/modem.
- Ensure you are within range of the Wi-Fi network.
- Verify the Wi-Fi password is correct.

## SPECIFICATIONS

Feature	Specification
Processor	10th Gen Intel Core i7-10510U (1.8 GHz, 4 Cores, up to 4.90 GHz)
Operating System	Windows 10 Professional, 64-bit, English
Memory (RAM)	32GB DDR4
Storage	1TB M.2 PCIe NVMe SSD
Display	15.6" FHD (1920 x 1080) Non-Touch Display
Graphics	NVIDIA GeForce MX250 2GB GDDR5
Wireless	Wireless-LAN (802.11ac+agn) + Bluetooth
Ports	1x USB 3.2 Gen 1 Type-C, 3x USB 3.2 Gen 1 (1 w/ USB Sleep and Charge), 1x HDMI, 1x RJ-45 LAN, 1x SD, Headset
Camera	HD Webcam with Dual Array Microphones
Audio	Stereo Speakers; DTS Audio Processing
Keyboard	Premium raised-tile Non-Backlit Keyboard w/10 key numeric pad; U.S. English
Dimensions (L x W x H)	14.3" x 9.5" x 0.78"
Weight	3.75 lbs
Battery	40 Wh Lithium Ion battery pack

Feature	Specification
Power Adapter	65W USB-C Adapter (5v/9v/15v/20v)
Included Accessory	BROAGE All-in-One Conference Camera, Microphone & Speaker

## WARRANTY AND SUPPORT

Your Toshiba Dynabook Satellite Pro L50-G comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.

For technical support, driver downloads, or service inquiries, please visit the official Toshiba support website or contact their customer service. Keep your product model number (L50-G) and serial number ready when contacting support.