

## Cecotec 700 X-Treme ErgoFlex

# Cecotec Conga Rockstar 700 X-Treme Ergoflex Cordless 3-in-1 Vacuum Cleaner User Manual

Brand: Cecotec | Model: Conga Rockstar 700 X-Treme Ergoflex

## 1. INTRODUCTION

Thank you for choosing the Cecotec Conga Rockstar 700 X-Treme Ergoflex Cordless 3-in-1 Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

## 2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. This includes, but is not limited to:

- Do not use the appliance outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Turn off all controls before unplugging.
- Do not handle the charger or appliance with wet hands.
- Ensure the filter is correctly installed before use.

### 3. PACKAGE CONTENTS

Your Cecotec Conga Rockstar 700 X-Treme Ergoflex package should include the following items:

- Main vacuum unit (motor and dust tank)
- Extension tube with ErgoFlex system
- Motorized brush head (with soft brush for hard floors and bi-material brush for all surfaces)
- Crevice tool
- Upholstery brush
- Wall mount charging base
- Power adapter
- User manual

### 4. PRODUCT OVERVIEW

The Conga Rockstar 700 X-Treme Ergoflex is a versatile 3-in-1 cordless vacuum cleaner designed for comprehensive home cleaning. It functions as a vertical, broom, and handheld vacuum, featuring a digital brushless motor for high efficiency and durability.

Key features include:

- **Digital Brushless Motor:** Provides higher speed, lower noise, and extended vacuum lifespan.
- **ForceSonic Technology:** Max power of 430W and 24 kPa suction for effective dirt removal.
- **3-in-1 Functionality:** Easily converts between vertical, broom, and handheld modes.
- **ErgoFlex System:** Allows the tube to bend, reaching under furniture and into difficult areas without bending down.
- **Dual Motorized Brush:** Includes a soft brush for hard floors and a bi-material brush for all surface types.
- **Long Battery Life:** 2500mAh 25.9V Li-ion battery offers up to 65 minutes of runtime.
- **Multiple Power Modes:** Eco, Daily, and Turbo modes to adapt to different cleaning needs.



The Cecotec Conga Rockstar 700 X-Treme Ergoflex in its vertical configuration, ready for use.

## 5. SETUP

### 5.1 Assembly

1. **Connect the Extension Tube:** Insert the extension tube into the main vacuum unit until it clicks securely into place.
2. **Attach the Brush Head:** Connect the desired motorized brush head (or other accessory) to the other end of the extension tube, ensuring it locks firmly.
3. **Handheld Mode:** For handheld use, attach accessories directly to the main vacuum unit.



The vacuum cleaner stored on its wall mount, demonstrating its compact design.

## 5.2 Charging the Battery

Before first use, fully charge the vacuum cleaner's battery. The battery is a 25.9V Li-ion type.

1. Mount the charging base in a convenient location near a power outlet.
2. Place the vacuum cleaner onto the charging base.
3. Connect the power adapter to the charging base and then to a power outlet.
4. The charging indicator lights will illuminate, showing the charging status. A full charge typically takes several hours.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off and Mode Selection

Press the power button on the main unit to turn the vacuum cleaner on or off. Use the mode selection button to

cycle through the three power modes:

- **Eco Mode:** For light cleaning and maximum battery runtime.
- **Daily Mode:** Standard power for everyday cleaning tasks.
- **Turbo Mode:** Provides maximum suction power for stubborn dirt and carpets. This mode activates automatically on carpets.



A close-up view of the handheld unit, showing the power and mode selection buttons.

## 6.2 Using the ErgoFlex System

The ErgoFlex system allows the extension tube to bend, making it easy to clean under low furniture like tables and beds without excessive bending. Simply press the release button on the flexible joint to activate this feature.



A user demonstrating the ErgoFlex system to clean under a low table.

### 6.3 Versatile Cleaning

The 3-in-1 design allows for various cleaning scenarios:

- **Vertical Vacuum:** For floors, carpets, and large areas.
- **Broom Vacuum:** Similar to vertical, but often refers to the stick form factor for general floor cleaning.
- **Handheld Vacuum:** Ideal for cleaning upholstery, car interiors, shelves, and high-reach areas using the appropriate attachments.



A user demonstrating the versatility of the vacuum in vertical, handheld, and high-reach modes.

## 6.4 Official Product Video

Watch this video for a visual guide on the features and operation of the Cecotec Conga Rockstar 700 X-Treme Ergoflex.

Your browser does not support the video tag.

Video demonstrating the Cecotec Conga Rockstar 700 X-Treme Ergoflex vacuum cleaner's features and usage.

## 7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 7.1 Emptying the Dust Tank

Empty the dust tank after each use or when the MAX fill line is reached. To empty:

1. Ensure the vacuum is turned off.
2. Locate the dust tank release button, usually near the handle.
3. Press the button to detach the dust tank from the main unit.
4. Open the bottom lid of the dust tank over a waste bin to release collected debris.
5. Close the lid and reattach the dust tank to the main unit until it clicks.

## 7.2 Cleaning Filters

The vacuum cleaner uses a cartridge filter. Clean the filter regularly to maintain suction power.

1. Remove the dust tank as described above.
2. Twist or pull to remove the filter assembly from the dust tank.
3. Tap the filter gently over a waste bin to remove loose dust.
4. If necessary, rinse the filter under running water. Ensure it is completely dry before reassembling.
5. Reassemble the filter and dust tank.

## 7.3 Cleaning the Brush Head

Periodically check the motorized brush head for tangled hair or debris.

1. Turn off the vacuum and detach the brush head.
2. Locate the brush roll release mechanism (refer to diagrams in the full manual if needed).
3. Remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
5. Clean any debris from the brush head housing.
6. Reinsert the brush roll and secure it.

# 8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dust tank is full Filter is clogged Hose or nozzle is blocked	Empty the dust tank Clean or replace the filter Check and clear any blockages
Brush roll not spinning	Hair or debris tangled in brush Brush head attachment not properly connected	Clean the brush roll Ensure the brush head is securely attached

Problem	Possible Cause	Solution
Short battery runtime	Using Turbo mode excessively Battery not fully charged Aging battery	Use Eco or Daily mode for longer runtime Ensure battery is fully charged Contact support for battery replacement options

If the problem persists after trying these solutions, please contact Cecotec customer support.

## 9. SPECIFICATIONS

Feature	Specification
Product Dimensions	29.5 x 18.5 x 70.5 cm
Item Weight	4.2 Kilograms
Form Factor	Stick
Finish	Textured
Batteries Required	No (battery included)
Battery Type	Lithium-ion
Model Number	05490
Special Features	Bagless
Filter Type	Cartridge
Surface Recommendation	Hard floor, Carpet
Power Source	Battery
Voltage	25.9 Volts
Cordless	Yes
Capacity	800 Milliliters

## 10. WARRANTY AND SUPPORT

Your Cecotec Conga Rockstar 700 X-Treme Ergoflex comes with a manufacturer's warranty. Please refer to the

warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, spare parts, or any questions not covered in this manual, please contact Cecotec customer service. You can usually find contact information on the official Cecotec website or on your product packaging.

For more information, visit the [Cecotec Store on Amazon](#).