

## Cecotec 5706

# Cecotec Conga Rockstar 900 Ultimate Cordless 3-in-1 Vacuum Cleaner User Manual

Model: 5706

## 1. INTRODUCTION

The Cecotec Conga Rockstar 900 Ultimate is a versatile 3-in-1 cordless vacuum cleaner designed for efficient cleaning across various surfaces. It functions as a vertical, broom, and handheld vacuum, powered by a Brushless digital motor for strong suction and extended durability. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your appliance.

## 2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main components of your Conga Rockstar 900 Ultimate vacuum cleaner:

- Conga Rockstar 900 Vacuum Cleaner Unit
- 2-in-1 Wide Accessory for Furniture and Corners
- 2-in-1 Narrow Accessory for Furniture and Corners
- Charging Base
- Special BestFriend Care Pet Brush
- Motorized Upholstery Brush
- Special Fabric Brush
- Extendable Tube
- Elongated Brush
- Connecting Elbow
- Jalisco Brush (main floor brush)
- User Manual



Image: The Cecotec Conga Rockstar 900 Ultimate vacuum cleaner shown with its main body and several included accessories, highlighting its versatility.

### 3. SETUP

#### 3.1 Assembly

1. **Connect the Main Body:** Attach the main vacuum unit to the extendable tube. Ensure it clicks securely into place.
2. **Attach the Floor Brush:** Connect the Jalisco brush (or other desired floor brush) to the bottom of the extendable tube.
3. **Handheld Configuration:** For handheld use, detach the extendable tube and connect accessories directly to the main vacuum unit.

#### 3.2 Initial Charging

Before first use, fully charge the vacuum cleaner. It is recommended to charge the battery for 12 hours initially to optimize battery life. The digital display will show the charging progress.



Image: The vacuum cleaner is shown mounted on its wall-mounted charging base, indicating proper storage and charging position.

### 3.3 Mounting the Charging Base

Select a suitable location near a power outlet to mount the charging base. Use the provided screws and wall plugs to securely attach the base to the wall. Ensure the vacuum can be easily docked for charging and storage.

## 4. OPERATING INSTRUCTIONS

### 4.1 Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on or off.

### 4.2 Digital Display

The integrated digital display provides real-time information:

- **Battery Percentage:** Shows the remaining battery charge.
- **Operating Mode:** Indicates the current suction mode (Eco, Medium, Turbo, Auto).

- **Alerts/Recommendations:** Displays important notifications regarding maintenance or operation.



Image: A detailed view of the vacuum cleaner's digital display, showing the battery level and selected operating mode.

### 4.3 Operating Modes

The Conga Rockstar 900 Ultimate features four operating modes:

- **Eco Mode:** Maximizes battery life for lighter cleaning tasks.
- **Medium Mode:** Provides a balance between efficiency and suction power for everyday cleaning.
- **Turbo Mode:** Delivers maximum suction power for stubborn dirt and deep cleaning.
- **Smart Auto Mode:** Intelligently adjusts suction power based on the brush type, surface (hard floor or carpet), and amount of dirt detected by sensors.

### 4.4 Using Accessories

Select the appropriate accessory for your cleaning needs:

- **Jalisco Brush:** Ideal for hard floors and carpets, featuring a dual motorized brush (sponge for hard floors, bi-material for all surfaces).
- **2-in-1 Wide/Narrow Accessories:** Suitable for furniture, corners, and tight spaces.
- **BestFriend Care Pet Brush:** Specifically designed to effectively remove pet hair.

- **Motorized Upholstery Brush / Special Fabric Brush:**For cleaning sofas, mattresses, and other fabric surfaces.
- **Extendable Tube / Elongated Brush / Connecting Elbow:**For reaching high areas, ceilings, or under furniture.



Image: The vacuum cleaner used in handheld configuration with a brush attachment, demonstrating its use for cleaning elevated surfaces.

#### 4.5 3-in-1 Functionality

The vacuum can be easily transformed:

- **Vertical Vacuum:** For general floor cleaning.
- **Broom Vacuum:** Lightweight and maneuverable for quick floor clean-ups.
- **Handheld Vacuum:** For cleaning upholstery, car interiors, and hard-to-reach spots.



Image: A person using the vacuum cleaner in broom mode on a hard floor, illustrating its ease of use for daily cleaning.

Your browser does not support the video tag.

Video: This video demonstrates the various functionalities of the Cecotec Conga Rockstar 900 Ultimate, including its 3-in-1 modes, different attachments, and cleaning capabilities on various surfaces.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

### 5.1 Emptying the Dustbin

Empty the dustbin regularly, especially when it reaches the MAX fill line. Press the release button to detach the dustbin and dispose of the contents. Reattach securely.

### 5.2 Cleaning Filters

The vacuum features a double filtration system. Periodically remove and clean the filters. The filters can be washed with water; however, ensure they are completely dry before reinserting them into the vacuum. This may take 24-48 hours. Using wet filters can damage the motor.



Image: An illustration highlighting the double filtration system within the vacuum cleaner, indicating components that require regular cleaning.

### 5.3 Cleaning Brushes

Remove the main floor brush and other accessories to clean any tangled hair or debris. Use scissors to cut away stubborn hair from the brush roll. Ensure all parts are free of obstructions before reassembly.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Low battery; improper assembly	Charge the battery; ensure all parts are securely connected.
Low suction power	Full dustbin; clogged filter; obstructed brush roll	Empty dustbin; clean/dry filters; remove obstructions from brush.
Short battery life	Using Turbo mode excessively; battery not fully conditioned	Use Eco or Medium mode for longer runtime; ensure initial 12-hour charge and subsequent full discharge/recharge cycles.
Unusual noise	Obstruction in the brush or tube; motor issue	Check for and remove any blockages; if noise persists, contact customer support.

## 7. SPECIFICATIONS

- **Model:** Conga Rockstar 900 Ultimate (5706)
- **Type:** Cordless 3-in-1 Vacuum Cleaner
- **Power:** 600 W
- **Suction Power:** 200 aW
- **Suction Pressure:** 26 KPA
- **Motor:** Digital Brushless
- **Battery:** 29.6 V, 3000 mAh Li-Ion
- **Autonomy:** Up to 90 minutes (Eco Mode)
- **Charging Time:** Approximately 2 hours

- **Noise Level:** 88 dB
- **Dustbin Capacity:** Bagless
- **Filter Type:** Typhoon System (Cyclonic filtration)
- **Dimensions:** 71 x 29.15 x 18.5 cm
- **Weight:** 3 kg

## 8. WARRANTY AND SUPPORT

---

This product comes with a manufacturer's warranty. For detailed warranty information, claims, or technical support, please refer to the warranty card included in the packaging or visit the official Cecotec website. Keep your proof of purchase for warranty purposes.

---

© 2024 Cecotec. All rights reserved.