

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Wireless Gear](#) /
- › [Wireless Gear True Wireless Bluetooth 5.0 Mini Earbuds Instruction Manual](#)

Wireless Gear B08FF73J9X

Wireless Gear True Wireless Bluetooth 5.0 Mini Earbuds Instruction Manual

Model: B08FF73J9X | Brand: Wireless Gear

INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Wireless Gear True Wireless Bluetooth 5.0 Mini Earbuds. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

What's in the Box:

- True Wireless Mini Earbuds (Left and Right)
- USB Charging Base

SAFETY INFORMATION

- Do not expose the earbuds or charging base to extreme temperatures, moisture, or corrosive materials.
- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the product. This will void the warranty and may cause damage.
- Keep out of reach of children.
- Use only the provided charging base.
- Prolonged listening at high volume levels may cause hearing damage. Adjust volume to a safe level.

PRODUCT OVERVIEW

Familiarize yourself with the components of your True Wireless Mini Earbuds.

CORDLESS

Design

with built-in mic offers hands-free calling with intelligent noise reduction and lossless audio transmission



Convenient TOUCH CONTROL

allows you to change songs, answer and hang up calls, and voice prompt Siri on iOS devices with the quick touch of a button



Image: Close-up view of a single Wireless Gear earbud, highlighting the touch control button on its outer surface.

- **Earbuds:** Left and Right earbuds with built-in microphones and touch controls.
- **USB Charging Base:** Compact base for charging the earbuds, featuring an integrated USB plug.

SETUP

1. Charging the Earbuds

Before first use, fully charge the earbuds. The charging base provides additional hours of playback.

1. Insert both earbuds into the charging base. Ensure they are seated correctly.
2. Plug the integrated USB connector of the charging base into any standard USB power source (e.g., computer USB port, USB wall adapter).
3. The indicator lights on the earbuds will show charging status (refer to product packaging for specific light behavior if available).
4. A full charge provides approximately 1.5 hours of playtime from the earbuds, with the charging base offering an additional 8 hours.



Image: Wireless Gear earbuds placed in their USB charging base, which is plugged into a laptop's USB port.

2. Pairing with a Device

The earbuds feature auto-pair and auto-power on functionality for seamless connection.

1. Ensure the earbuds are charged.
2. Remove both earbuds from the charging base. They will automatically power on and enter pairing mode.
3. On your smartphone, MP3 player, tablet, or laptop, navigate to the Bluetooth settings.
4. Search for available devices and select "Wireless Gear Earbuds" (or similar name) from the list.
5. Once connected, you will hear an audible confirmation, and the indicator lights on the earbuds will change (refer to product packaging for specific light behavior if available).
6. The earbuds will automatically reconnect to the last paired device when removed from the charging base, if Bluetooth is enabled on the device.



Image: Wireless Gear earbuds positioned next to a smartphone, illustrating the pairing process.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Remove the earbuds from the charging base. They will automatically power on.
- **Power Off:** Place the earbuds back into the charging base. They will automatically power off and begin charging.

Touch Controls

Each earbud features a touch-sensitive area for controlling various functions. The specific functions may vary slightly between left and right earbuds or depend on the operating system of your connected device.

- **Play/Pause Music:** Single tap on either earbud.
- **Next Song:** Double tap on the right earbud (or specific earbud as per device).
- **Previous Song:** Double tap on the left earbud (or specific earbud as per device).
- **Answer/End Call:** Single tap on either earbud during an incoming call or active call.
- **Reject Call:** Press and hold on either earbud during an incoming call.
- **Activate Voice Assistant (Siri for iOS):** Triple tap on either earbud.

MINI TRUE WIRELESS BLUETOOTH EARBUDS

Advanced Bluetooth 5.0 and true wireless stereo technology provide rich sound quality and extreme bass



up to
1.5
HOURS
of playtime

Image: A woman smiling while wearing a Wireless Gear earbud, demonstrating comfortable fit and discreet design.

Making and Receiving Calls

The built-in microphone allows for hands-free calling. Intelligent noise reduction ensures clear communication.

- When a call comes in, tap either earbud once to answer.
- To end a call, tap either earbud once.
- To reject an incoming call, press and hold either earbud.

MAINTENANCE

Cleaning

Regular cleaning helps maintain sound quality and hygiene.

- Gently wipe the earbuds and charging base with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Periodically check the speaker mesh for debris. Use a soft brush or cotton swab to carefully remove any buildup.



Image: Close-up view of the speaker mesh on a Wireless Gear earbud, showing fine details.

Storage

- When not in use, store the earbuds in their charging base to protect them and keep them charged.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common solutions:

Problem	Possible Solution
Earbuds not powering on.	Ensure earbuds are charged. Place them in the charging base and connect to a USB power source for at least 30 minutes.

Problem	Possible Solution
Earbuds not pairing with device.	<ul style="list-style-type: none"> ◦ Ensure Bluetooth is enabled on your device. ◦ Make sure earbuds are removed from the charging base and are in pairing mode. ◦ Forget "Wireless Gear Earbuds" from your device's Bluetooth list and attempt to pair again. ◦ Ensure earbuds are within 10 meters (33 feet) of your device.
Only one earbud is working.	<ul style="list-style-type: none"> ◦ Place both earbuds back into the charging base for a few seconds, then remove them simultaneously. This can reset their connection. ◦ Ensure both earbuds are charged. ◦ Try unpairing and re-pairing the earbuds with your device.
Poor sound quality or intermittent connection.	<ul style="list-style-type: none"> ◦ Ensure earbuds are fully charged. ◦ Move closer to your paired device to reduce interference. ◦ Check for obstructions between the earbuds and your device. ◦ Clean the speaker mesh if there is any debris.

SPECIFICATIONS

Feature	Detail
Connectivity Technology	Bluetooth 5.0
Wireless Communication Technology	Bluetooth
Included Components	Headphones, Charger
Specific Uses For Product	Home, Sports and Exercise, Travel
Compatible Devices	Phones, MP3 players, Tablets, Laptops
Control Type	Touch Control
Cable Feature	Without Cable
Battery Life (Earbuds)	Up to 1.5 hours
Additional Battery Life (Charging Base)	8 hours
Total Battery Life	9.5 Hours (Earbuds + Charging Base)
Bluetooth Range	10 Meters (33 feet)

Feature	Detail
Earpiece Shape	Rounded Tip
Item Weight	1.44 ounces
Manufacturer	ESI Wireless Accessories
ASIN	B08FF73J9X
GTIN/UPC	680988106811

WARRANTY INFORMATION

No specific warranty information is provided in the product details. Please refer to the product packaging or contact the retailer/manufacturer directly for warranty terms and conditions.

SUPPORT

For further assistance or technical support, please contact Wireless Gear customer service. Contact details are typically found on the product packaging or the manufacturer's official website.