

BLAUPUNKT MP3030-133

Blaupunkt MP3030-133 Mini LED TWS Bluetooth Speakers User Manual

Model: MP3030-133

[Contents](#) [Safety](#) [Overview](#) [Setup](#) [Introduction](#) [Package](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Blaupunkt MP3030-133 Mini LED TWS Bluetooth Speakers. This set of two compact, powerful speakers delivers exceptional sound quality with 6W (3Wx2) output. Featuring True Wireless Stereo (TWS) technology, you can pair both speakers for a stereo experience or place them in different rooms for distributed audio. The integrated multi-color LED lights synchronize with your music, creating an engaging ambiance. Designed for portability and ease of use, these speakers enhance your audio experience anywhere.

2. PACKAGE CONTENTS

Please check that all items are present in your package:

- 2 x Blaupunkt MP3030-133 Mini LED TWS Bluetooth Speakers
- 1 x USB Charging Cable
- 1 x User Manual

3. SAFETY INFORMATION

To ensure safe operation and prevent damage, please read and follow these guidelines:

- Do not expose the speakers to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speakers to strong impacts.
- Do not attempt to disassemble, repair, or modify the speakers. This will void the warranty.
- Use only the provided charging cable or a certified 5V/1A adapter for charging.
- Keep the speakers away from heat sources, direct sunlight, and flammable materials.

- Clean the speakers with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Prolonged listening at high volumes may cause hearing damage. Adjust volume to a safe level.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Blaupunkt MP3030-133 speakers.



Figure 4.1: Two Blaupunkt MP3030-133 mini speakers shown with their multi-color LED lights active. The speakers are black with a mesh grille on top and a subtle Blaupunkt logo on the side of one speaker. A micro-USB charging port is visible on the side of one speaker.



Figure 4.2: The retail packaging for the Blaupunkt MP3030-133 speakers. The box highlights features such as '2 Stereo Speaker', 'Bluetooth Compatible', and 'LED Multicolors'. Images of the speakers are prominently displayed on the front.



Figure 4.3: An open view of the Blaupunkt MP3030-133 speaker packaging, showing the two speakers nestled inside. The box design emphasizes the '2 Ways to Listen' feature, illustrating both individual and stereo placement options.



Figure 4.4: Two Blaupunkt MP3030-133 speakers positioned on a clean white desk, flanking a computer monitor. Their LED lights are subtly glowing, demonstrating their use in a home office or workspace environment.



Figure 4.5: The Blaupunkt MP3030-133 speakers placed in a modern living room setting. One speaker is on a coffee table, and the other on a wooden cabinet, illustrating their versatility for distributed audio or stereo sound in a home environment.

Controls and Indicators:

- **Power Button:** Typically located on the bottom or side. Press and hold to power on/off.
- **Micro-USB Port:** For charging the speaker.
- **LED Indicator/Light Ring:** Displays charging status, pairing mode, and provides multi-color lighting effects.

5. SETUP

5.1 Charging the Speakers

1. Connect the supplied USB charging cable to the Micro-USB port on each speaker.
2. Connect the other end of the USB cable to a 5V/1A USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging.
4. Charging typically takes approximately 1.5 hours for a full charge. The LED indicator will change or turn off once charging is complete.

A full charge provides approximately 1-2 hours of playback time, depending on volume and LED usage.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button on each speaker for a few seconds until the LED lights activate and you hear an audible prompt.
- **To Power Off:** Press and hold the Power button on each speaker again for a few seconds until the LED lights turn off and you hear an audible prompt.

6. OPERATING INSTRUCTIONS

6.1 Bluetooth Pairing (Single Speaker Mode)

1. Ensure the speaker is charged and powered on. The LED light will flash, indicating it's in pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop), go to the Bluetooth settings.
3. Search for available devices and select "Blaupunkt MP3030-133" (or similar name).
4. Once paired, the speaker will emit a confirmation sound, and the LED light will stop flashing and remain solid or display its light effect.

6.2 True Wireless Stereo (TWS) Pairing (Two Speaker Mode)

TWS allows two MP3030-133 speakers to connect wirelessly to each other for a stereo sound experience.

1. Ensure both speakers are charged and powered off.
2. Power on both speakers simultaneously. They will enter Bluetooth pairing mode (LED flashing).
3. Wait a few seconds. The speakers will automatically attempt to pair with each other. You will hear a confirmation sound when TWS pairing is successful. One speaker will act as the master (left channel) and the other as the slave (right channel).
4. Once TWS paired, the master speaker will then be ready to connect to your Bluetooth device. Go to your device's Bluetooth settings and select "Blaupunkt MP3030-133".
5. After successful connection, both speakers will play audio in stereo.

6.3 LED Light Modes

The speakers feature multi-color LED lights that react to the rhythm of your music. The specific control for changing LED modes (if available) is typically integrated with the power button or a dedicated button. Refer to the quick start guide included in your package for precise instructions on cycling through light modes or turning them off.

7. MAINTENANCE

Proper care ensures the longevity of your speakers:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the speaker surfaces. Do not use liquid cleaners, sprays, or solvents.
- **Storage:** When not in use for extended periods, store the speakers in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Charge the speakers regularly, even if not in use, to prevent deep discharge.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speakers do not power on.	Low battery.	Charge the speakers fully.
Cannot pair with Bluetooth device.	Bluetooth is off on your device. Speakers are too far. Speakers are already paired to another device.	Ensure Bluetooth is enabled. Move device closer (within 10m). Disconnect from other devices or restart speakers.
TWS pairing fails.	Speakers not in TWS pairing mode. Speakers too far apart.	Ensure both speakers are powered on simultaneously and are close to each other. Restart both speakers.

Problem	Possible Cause	Solution
No sound or distorted sound.	Volume too low. Device not connected. Audio source issue.	Increase volume on both speaker and device. Re-pair Bluetooth. Test with a different audio source.

9. SPECIFICATIONS

Feature	Specification
Model	MP3030-133
Output Power	6W (3W x 2)
Bluetooth Version	5.0
Operating Range	Up to 10 meters (33 feet)
Frequency Response	80Hz - 18.5KHz
Battery Type	Li-Po 300mAh
Charging Input	DC 5V / 1A
Max Power Consumption	5W
Charging Time	Approx. 1.5 hours
Playback Time	Approx. 1-2 hours (at 50% volume)
Dimensions (each speaker)	75 x 75 x 50 mm
Color	Black

10. WARRANTY AND SUPPORT

Blaupunkt products are manufactured to the highest quality standards. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Blaupunkt website. If you encounter any issues or require technical assistance, please contact Blaupunkt customer support through their official channels.