

GHIA G32NTFXHD20

Ghia 32-inch LED Smart TV User Manual

Model: G32NTFXHD20

Brand: GHIA

1. INTRODUCTION

Thank you for purchasing the Ghia 32-inch LED Smart TV, model G32NTFXHD20. This television is designed to provide a high-definition entertainment experience with integrated Smart TV features, including the Netflix TV operating system. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new television. Please read this manual thoroughly before using the product and keep it for future reference.



Figure 1.1: Ghia 32-inch LED Smart TV with Netflix TV Interface

2. SAFETY INFORMATION

Always observe the following safety precautions to avoid electric shock, fire, or damage to the television.

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Use only the specified power supply.

3. PACKAGE CONTENTS

Before proceeding with the setup, please verify that all items are present in the package:

- Ghia 32-inch LED Smart TV (G32NTFXHD20)
- TV Base (Stand)
- Remote Control
- Batteries for Remote Control (AA or AAA, typically)
- Power Cable
- Operation Manual (this document)

4. SETUP

4.1 Attaching the Stand

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align the TV base (stand) with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Do not overtighten.
4. Carefully lift the TV to its upright position on a stable, flat surface.

4.2 Connecting Power

Connect the power cable to the TV's power input port, then plug the other end into a wall outlet. Ensure the power outlet is easily accessible.

4.3 Connecting External Devices

Your Ghia Smart TV offers various connectivity options for external devices:

- **HDMI Ports (x2):** Connect Blu-ray players, gaming consoles, cable/satellite boxes, or computers for high-definition audio and video.
- **USB Ports (x2):** Connect USB flash drives or external hard drives for media playback (music, photos, videos).
- **RCA (Composite) Input:** Connect older devices like VCRs or DVD players using composite video and stereo audio cables.
- **Optical Audio Output:** Connect to a soundbar or home theater system for digital audio output.
- **VGA Input:** Connect a computer for use as a monitor.



REPRODUCE MÚSICA, FOTOS Y VIDEOS
DESDE UNA MEMORIA USB



TRASMISIÓN DE AUDIO Y VIDEO
EN LA MÁS ALTA FIDELIDAD



TELEVISIÓN CON CONEXIÓN A INTERNET
INALÁMBRICO.



Figure 4.1: Connectivity Options on the Ghia Smart TV

4.4 Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process:

1. **Language Selection:** Choose your preferred language for the TV menu.
2. **Network Connection:** Select your Wi-Fi network and enter the password to connect to the internet. This is essential for Smart TV features.
3. **Time Zone and Date:** Set the correct time and date.
4. **Channel Scan (Optional):** If connecting an antenna, the TV can scan for available broadcast channels.
5. **Netflix Account Setup:** Follow the on-screen prompts to log in to your Netflix account or create a new one.

5. OPERATING THE TV

5.1 Remote Control Functions

Familiarize yourself with the remote control for easy navigation and control of your TV.

The logo for G+HIA, featuring the letters 'G+HIA' in a stylized, green, sans-serif font with a registered trademark symbol.The logo for Crizzonte SMART, with 'Crizzonte' in a grey, lowercase, sans-serif font and 'SMART' in a smaller, grey, uppercase, sans-serif font below it. To the right of the text is a colorful icon consisting of three overlapping circles in red, green, and blue.

» TECNOLOGÍA LED ALTA DEFINICIÓN

» SONIDO ESTÉREO

A woman with dark hair, wearing a grey sweater and black pants with a red stripe, is sitting on a white sofa. She is smiling and holding a black remote control in her right hand, pointing it towards the camera. In her left hand, she holds a large yellow and white popcorn bucket. In the foreground, there is a glass of water and a red cup on a coffee table. The background shows a framed abstract painting on the wall.

NETFLIX

Figure 5.1: Using the Remote Control

- **Power Button:** Turns the TV on or off.
- **Input/Source Button:** Switches between connected devices (HDMI, USB, TV).
- **Navigation Buttons (Arrows, OK):** Navigate menus and select options.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes TV channels (if applicable).
- **Netflix Button:** Direct access to the Netflix application.
- **Menu/Settings Button:** Accesses TV settings for picture, sound, network, etc.

5.2 Smart TV Features (Netflix TV OS)

Your TV runs on the Netflix TV operating system, providing a streamlined experience for accessing streaming content.

- **Home Screen:** Displays your favorite apps, recommended content, and input sources.

- **App Store:** Download and install additional streaming applications.
- **Content Recommendations:** The TV provides personalized content suggestions based on your viewing habits.

5.3 Media Playback via USB

To play media files from a USB device:

1. Insert your USB flash drive or external hard drive into one of the TV's USB ports.
2. The TV should automatically detect the device and prompt you to open the media player. If not, navigate to the 'Media' or 'USB' input source.
3. Browse your files and select the content you wish to play. The TV supports common formats for music, photos, and videos.

6. MAINTENANCE

6.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaning solution specifically designed for electronics, applied to the cloth, not directly to the screen.
- **Body:** Use a soft, dry cloth to wipe the TV's casing. Avoid using abrasive cleaners or solvents.
- Always unplug the TV before cleaning.

6.2 Software Updates

Your Smart TV may receive software updates to improve performance and add new features. Ensure your TV is connected to the internet. You can usually check for updates in the TV's settings menu under 'System' or 'About'.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No Power	Check if the power cable is securely plugged into the TV and the wall outlet. Try a different outlet. Ensure the power button on the remote or TV is pressed.
No Picture / Black Screen	Ensure the correct input source is selected. Check all video cable connections (HDMI, RCA). Try restarting the TV.
No Sound	Check the volume level and ensure the TV is not muted. Verify audio cable connections. If using external speakers, check their power and connections.
Wi-Fi Connection Issues	Ensure your router is on and working. Re-enter the Wi-Fi password. Try restarting both the TV and your router. Move the TV closer to the router if possible.
Apps Not Working / Slow Performance	Check your internet connection speed. Close and reopen the app. Try clearing the app's cache (if available in settings). Restart the TV.
Remote Control Not Responding	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Ghia 32-inch LED Smart TV (G32NTFXHD20):



Figure 8.1: Ghia 32-inch Smart TV Dimensions

Feature	Detail
Model Name	G32NTFXHD20
Display Technology	LED
Screen Size	32 Inches (82 cm visible diagonal)

Feature	Detail
Resolution	1366 x 768 Pixels (720p HD)
Refresh Rate	60 Hz
Operating System	Netflix TV
Connectivity	2 x HDMI, 2 x USB, RCA, Optical Audio, VGA, Wi-Fi
Aspect Ratio	16:9
Response Time	10 Milliseconds
Audio Output Mode	Surround
Power Consumption	32 Watts
Mounting Type	Table Mount (Stand included)
Product Dimensions (L x W x H)	100 x 10 x 70 cm (approx. 39.4 x 3.9 x 27.6 inches)
Weight	5.16 kg (approx. 11.38 lbs)

9. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official GHIA website. The warranty typically covers manufacturing defects for a specified period from the date of purchase.

If you require technical assistance, have questions about your product, or need to claim warranty service, please contact GHIA customer support. Contact details can usually be found on the GHIA website or in the documentation provided with your TV.

Note on Videos: No official product videos from the seller were found for this model at the time of manual creation.