

[Manuals.plus](#) /

› [UBay](#) /

› UBay RC280V10 Remote Control Instruction Manual for TCL Roku Smart TVs

UBay RC280V10

UBay RC280V10 Remote Control Instruction Manual for TCL Roku Smart TVs

INTRODUCTION

This manual provides essential information for the UBay RC280V10 replacement remote control. Designed for seamless compatibility with a wide range of TCL Roku Smart TV models, this remote offers straightforward operation without complex setup procedures. It features dedicated quick access buttons for popular streaming services, enhancing your viewing experience.

SETUP INSTRUCTIONS

The UBay RC280V10 remote control requires no programming or complex setup. Simply insert the batteries, and it will be ready for immediate use with your compatible TCL Roku Smart TV.

- 1. Open the Battery Compartment:** Locate the battery cover on the back of the remote control. Slide the cover downwards to open.
- 2. Insert Batteries:** Insert two AAA batteries (not included) into the compartment, ensuring correct polarity (+ and -) as indicated inside.
- 3. Close the Battery Compartment:** Slide the battery cover back into place until it clicks securely.
- 4. Begin Use:** The remote is now ready to operate your TCL Roku Smart TV. No pairing is required.



Image: Back of the UBay RC280V10 remote control with the battery compartment open, illustrating where to insert two AAA batteries.

OPERATING INSTRUCTIONS

The UBay RC280V10 remote control provides intuitive access to your TCL Roku Smart TV functions. Familiarize yourself with the key buttons:

- **Power Button (●):** Located at the top, press to turn your TV on or off.
- **Navigation Pad (Purple Cross):** Use the directional arrows (Up, Down, Left, Right) to navigate menus and select items. The 'OK' button in the center confirms selections.
- **Home Button (🏠):** Returns you to the Roku home screen.
- **Back Button (←):** Returns to the previous screen or menu.
- **Volume Control (Side Buttons):** Located on the side of the remote, these buttons allow you to increase, decrease, or mute the TV volume.
- **Playback Controls:** Includes buttons for Play/Pause, Fast Forward, and Rewind.
- **Quick Access Buttons:** Dedicated buttons for popular streaming services like Netflix, VUDU, and HULU provide instant access.



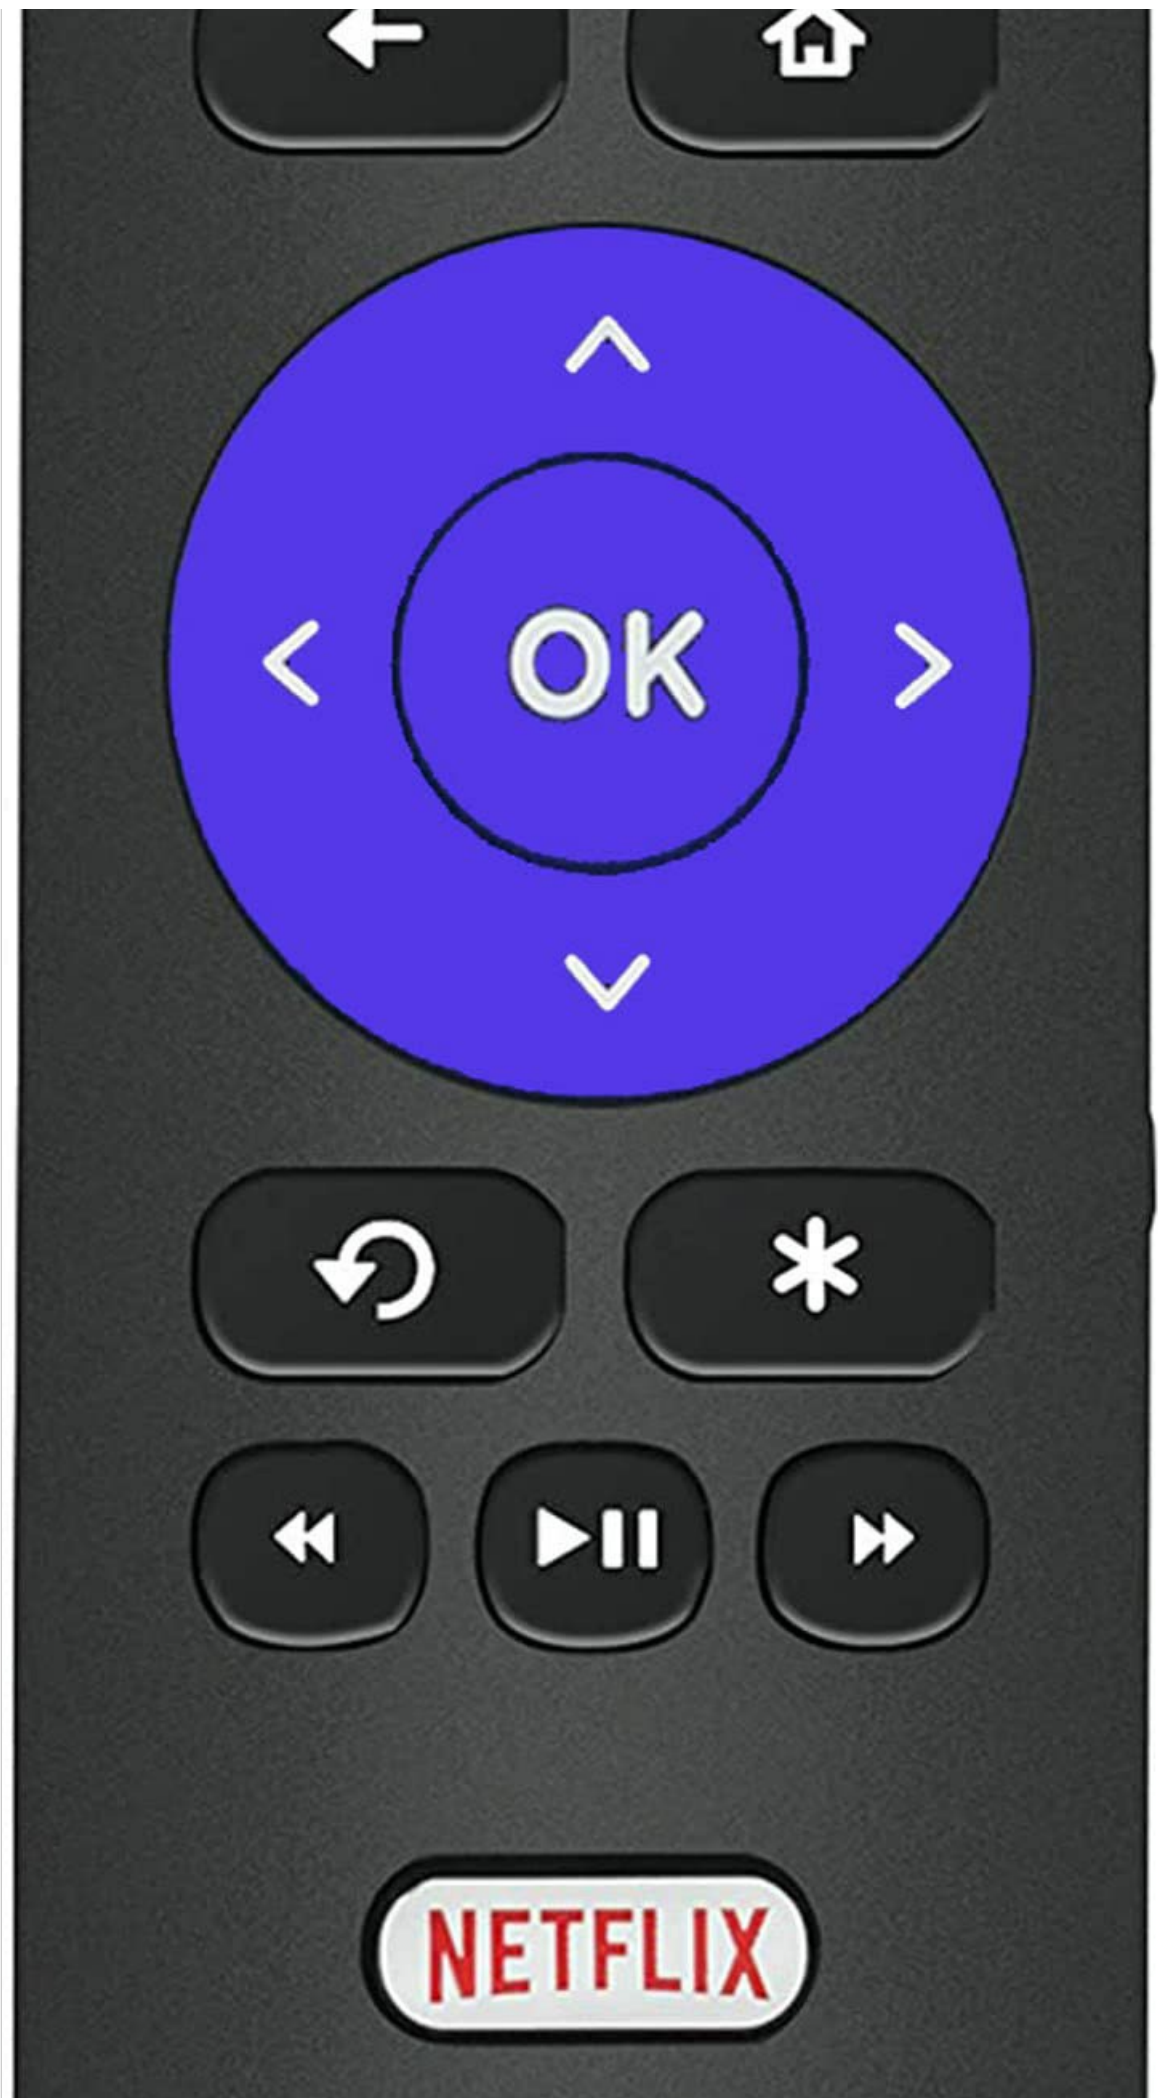




Image: Front view of the UBay RC280V10 remote control, highlighting the layout of all functional buttons.

PRODUCT FEATURES

- **Direct Replacement:** Functions as a direct replacement for your original TCL Roku Smart TV remote.
- **No Setup Required:** Operates immediately after battery insertion, no programming or pairing needed.
- **Ergonomic Design:** Comfortable to hold and use, fitting well in the palm of your hand.
- **Dedicated Streaming Buttons:** Features quick access buttons for Netflix, VUDU, and HULU.
- **Volume Control on Side:** Conveniently located volume up, down, and mute buttons on the side of the remote.
- **Broad Compatibility:** Works with numerous TCL Roku TV models including (but not limited to): 55S421, 70S42, 50S421, 32S321, 43S421, 65S421, 32D2900, 32S301, 55D2900U, 55S401, 65D2930U, 65S401, 65S4, 55UP13, 55US57, 28S3750, 32S3700, 32S3750, 32S3800, 32S3850, 43FP110, 43UP120, 43UP130, 49FP110, 50UP120, 50UP130, 55UP120, 55UP130, 32S3850A, 32S3850B, 32S3850P, 32S4610R, 40FS3750, 40FS3800, 40FS3850, 48FS3700, 48FS3750, 50FS3800, 50FS3850, 55FS3700, 55FS3750, 55FS3850, 55US5800, 65US5800, 32FS4610R, 40FS4610R, 48FS4610R, 55FS4610R, 32S3850(A/B/P), 32FS3700, 50FS3750, 32S800, 32S850, 55C803, 65C803, 75C803, 75C807, 55P605, 32S301, 28S303, 32S303, 40S303, 43S303, 49S303, 28S305, 32S305, 40S305, 43S305, 49S305, 32S321, 40S321, 32S325, 40S325, 43S325, 49S325, 32S327, 55S401, 65S401, 43S403, 49S403, 55S403, 65S403, 43S405, 49S405, 55S405, 65S405, 43S421, 50S421, 55S421, 65S421, 43S423, 50S423, 55S423, 65S423,

- 75S423, 43S425, 49S425, 50S425, 55S425, 65S425, 75S425, 43S515, 49S515, 55S515, 65S515, 43S525, 50S525, 55S525, 65S525, RC280, RC282.
- **No Headphone Jack or Voice Search:** This remote does not include a headphone jack or voice search functionality.



Image: This remote is designed for TCL Roku TVs, not for Roku Box or Roku Stick devices.

SPECIFICATIONS

Feature	Detail
Brand	UBay
Model Number	UBay RC280V10
Product Dimensions	5.5 x 1.5 x 0.6 inches
Item Weight	1.76 ounces
Color	Black, Blue
Special Feature	Ergonomic
Max Number of Supported Devices	1
Compatible Devices	Television (TCL Roku Smart TVs)
Batteries Required	2 x AAA (not included)

MAINTENANCE

To ensure the longevity and optimal performance of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.

- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always replace both batteries at the same time with new ones.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from drops and impacts to prevent internal damage.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Verify that the remote is compatible with your specific TCL Roku Smart TV model.
- **Buttons Not Working:**
 - Clean the remote's surface and buttons to remove any dirt or debris that might be interfering with button presses.
 - If individual buttons are unresponsive, the remote may be damaged and require replacement.
- **No Pairing Required:** This remote is designed for immediate use with compatible TCL Roku Smart TVs and does not require a pairing process. If your TV requires pairing, this remote may not be suitable.

WARRANTY AND SUPPORT

For warranty information or technical support regarding your UBay RC280V10 remote control, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

