



Manuals+



[Manuals.plus](#) /

› [Beati Faucet](#) /

› Beati Faucet 10-inch Shower System User Manual

## Beati Faucet BF-RB-10

# Beati Faucet 10-inch Shower System User Manual

Model: BF-RB-10

## INTRODUCTION

---

This user manual provides comprehensive instructions for the installation, operation, maintenance, and troubleshooting of your Beati Faucet 10-inch Shower System. Designed for durability and performance, this shower system features a 10-inch rain shower head, a handheld sprayer, and a rough-in valve for a complete and refreshing shower experience. Please read this manual thoroughly before installation and use to ensure proper function and safety.

## SAFETY INFORMATION

---

Always adhere to local plumbing codes and regulations during installation. If you are unsure about any part of the installation process, it is recommended to consult a qualified professional plumber. Ensure the main water supply is turned off before beginning any work. This shower system is equipped with anti-scalding protection to maintain a consistent water temperature and prevent sudden fluctuations, enhancing user safety.

- Turn off the main water supply before installation or maintenance.
- Wear appropriate personal protective equipment (PPE) during installation.
- Do not overtighten connections, which can cause damage.
- Ensure all connections are secure to prevent leaks.
- Keep small parts away from children.

## PACKAGE CONTENTS

---

Verify that all components are present and undamaged before beginning installation:

- Rough-in Valve
- 10-inch Rain Shower Head
- Handheld Sprayer

- Handheld Hose (70.8 inches)
- Mounting Hardware
- User Manual



Image: Complete Beati Faucet 10-inch Shower System, showing the rain shower head, handheld sprayer, and control valve.

## SETUP (INSTALLATION)

---

The Beati Faucet Shower System is designed for easy in-wall installation, suitable for both new construction and remodeling projects. A rough-in valve is included to simplify the setup process.

### Installation Steps:

1. **Prepare the Wall:** Ensure the wall cavity is ready for the rough-in valve. Mark the desired height for the shower head and control handle.
2. **Install the Rough-in Valve:** Secure the rough-in valve within the wall cavity according to the included detailed instructions. Ensure it is level and properly aligned with the hot and cold water lines. The valve features NPT1/2"

connectors for hot and cold water, and for the fixed shower head and hand shower head.

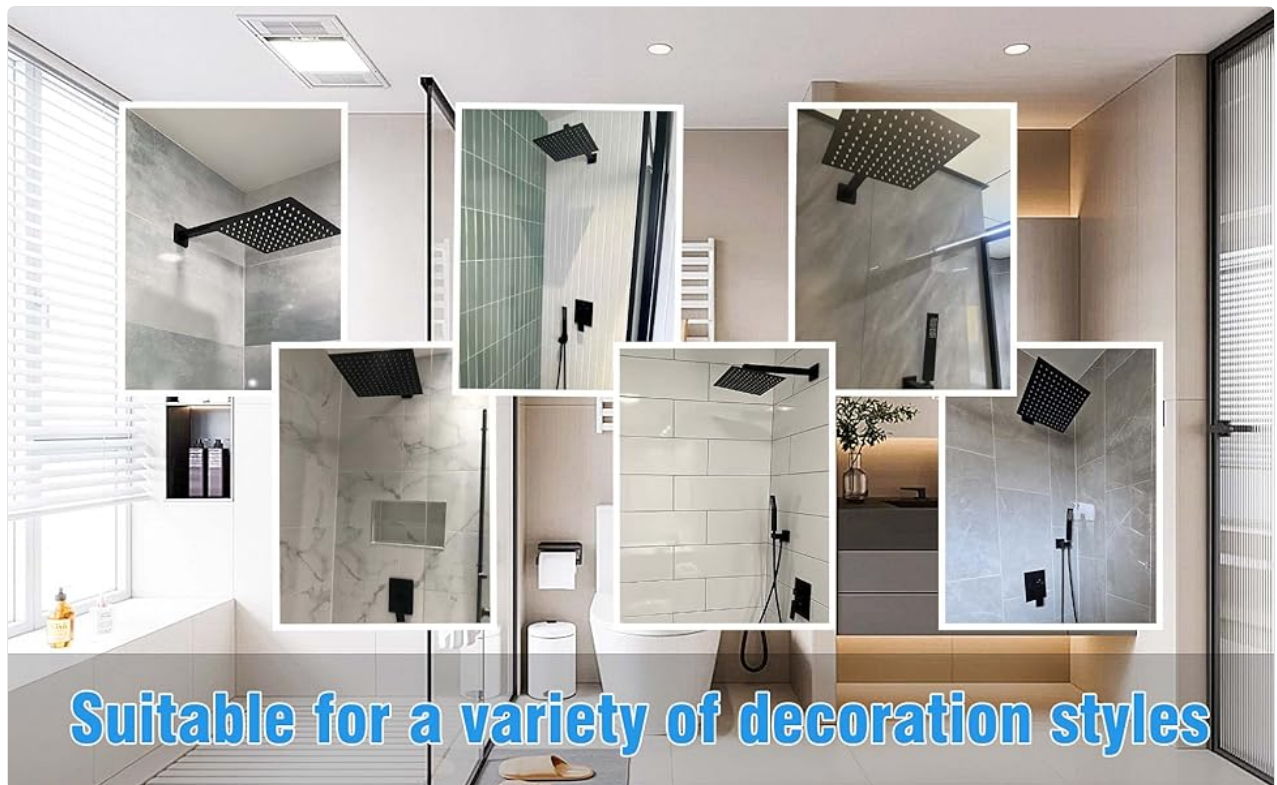


Image: Detailed diagram of the rough-in valve, showing hot water, cold water, fixed shower head, and hand shower head connectors, along with the brass water separator and ceramic valve core.

3. **Connect Plumbing:** Connect the hot and cold water supply lines to the corresponding inlets on the rough-in valve. Connect the outlets to the fixed shower head and handheld sprayer lines.
4. **Install Trim Plate and Handle:** Once the rough-in valve is secured and plumbing connected, install the decorative trim plate and the control handle.
5. **Install Shower Head and Handheld Sprayer:** Attach the 10-inch rain shower head to its arm and secure it to the wall connection. Connect the handheld sprayer hose to the valve outlet and attach the handheld sprayer to the hose.



Image: The Beati Faucet shower system installed in a contemporary bathroom setting, showcasing the matte black finish and sleek design.

6. **Test for Leaks:** Turn on the main water supply slowly and check all connections for leaks.

## OPERATING INSTRUCTIONS

---

Your Beati Faucet Shower System offers a versatile and comfortable showering experience with its dual functions and precise control.

### Using the Shower System:

- **Water Flow and Temperature Control:** The single handle controls both water flow and temperature. Rotate the handle to adjust the temperature from cold to hot. Pull the handle outwards to increase water flow.



Image: Illustration demonstrating the consistent temperature feature of the shower system, preventing sudden temperature changes.

- **Function Diverter:** A separate knob or lever on the valve allows you to switch between the 10-inch rain shower head and the handheld sprayer.
- **10-inch Rain Shower Head:** Provides a wide, full-body spray with high-pressure air technology for an enhanced, water-efficient experience. The ultra-thin design contributes to improved water efficiency.

**10" Ultra-thin Rain Showerhead**

**SWIVEL RAIN HEAD**

**HIGH-PRESSURE AIR TECHNOLOGY**

**R ANGLE DESIGN PREVENT BRUISING**

Image: Close-up of the 10-inch ultra-thin rain showerhead, illustrating the mixture of air and water for a powerful yet efficient spray.

- **Handheld Sprayer:** Offers targeted rinsing and flexibility. The sprayer is made of solid brass and the holder is 360° adjustable for optimal positioning.



Image: The handheld shower sprayer connected to its flexible hose, highlighting its solid brass construction and adjustable holder.

## MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your Beati Faucet Shower System. The matte black finish is peel-resistant and designed for easy cleaning.

### Cleaning Instructions:

- **Regular Cleaning:** Clean the shower system regularly with a soft cloth and mild soap or a non-abrasive liquid cleaner.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, ammonia-based cleaners, or bleach, as these can damage the finish and components.
- **Water Spots:** To prevent water spots, wipe the surfaces dry after each use, especially in hard water areas.
- **Shower Head Nozzles:** Periodically clean the silicone nozzles on the shower head and handheld sprayer by gently rubbing them to dislodge any mineral buildup.



Image: The shower system showcasing its peel-resistant matte black finish, emphasizing its durability and ease of maintenance.

## TROUBLESHOOTING

If you encounter any issues with your Beati Faucet Shower System, refer to the following common problems and their solutions:

Problem	Possible Cause	Solution
Low Water Pressure	Clogged shower head nozzles; partially closed shut-off valve; low household water pressure.	Clean shower head nozzles. Ensure shut-off valves are fully open. Consult a plumber if household pressure is consistently low.
Leaks from Connections	Loose connections; damaged O-rings or washers; improper thread sealant.	Tighten connections. Inspect and replace O-rings or washers if damaged. Reapply thread sealant if necessary.

Problem	Possible Cause	Solution
Inconsistent Water Temperature	Pressure balance cartridge issue; hot/cold water supply imbalance.	Ensure hot and cold water supplies are stable. If the issue persists, the pressure balance cartridge may need inspection or replacement by a professional.
Dripping Shower Head	Worn cartridge; debris in the valve.	The ceramic valve core may need to be inspected or replaced. Consult a professional.

## SPECIFICATIONS

Key technical specifications for the Beati Faucet 10-inch Shower System (Model: BF-RB-10):

Feature	Detail
Brand	Beati Faucet
Model Number	BF-RB-10
Color	Matte Black
Material	Brass, Ceramic, Stainless Steel
Finish Type	Painted
Number of Handles	1
Handle Material	Brass, Ceramic, Stainless Steel
Mounting Type	Wall Mount
Included Components	Valve, Shower Head, Handheld Hose, Mounting Hardware, User Manual
Head Size	10 inches
Item Weight	9.37 pounds
Package Dimensions	15.31 x 12.68 x 6.93 inches
Style	10" Shower Head
Shape	Square
Installation Method	Wall-Mounted
Certification	WaterSense
Batteries Required?	No

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Beati Faucet store. You can typically find contact details for support on the product packaging or the brand's website.

Visit the [Beati Faucet Store on Amazon](#) for more products and information.

