

BELLA 90088

Bella Pro Series 8qt Touchscreen Digital Air Fryer Instruction Manual

Model: 90088

INTRODUCTION

Welcome to the world of healthier cooking with your new Bella Pro Series 8-qt. Touchscreen Digital Air Fryer. This appliance is designed to cook up healthy meals with its built-in touchscreen, making settings fast and intuitive. Its large 8-quart capacity allows you to cook substantial meals efficiently. Crafted with durable stainless steel, the air fryer features High Performance Circular Heat Technology for even cooking, 9 preset cooking programs for convenience, and dishwasher-safe pan and tray for simple cleaning.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Bella Pro Series Air Fryer combines sleek design with powerful performance. Its stainless steel exterior and intuitive digital touchscreen make it a modern addition to any kitchen.



Figure 1: Front view of the Bella Pro Series 8qt Touchscreen Digital Air Fryer, showcasing its sleek black and stainless steel design with a digital display.



Figure 2: Internal view illustrating the High Performance Circular Heat Technology, showing hot air circulating around food for even cooking.



Figure 3: The air fryer basket pulled out, revealing a generous portion of crispy fries, demonstrating the 8-quart capacity.



Figure 4: A hand tilting the air fryer basket to easily pour out cooked food, highlighting the user-friendly design.

SETUP

1. **Unpack:** Carefully remove all packaging materials and promotional labels from your air fryer.
2. **Clean:** Wash the removable basket and crisper tray in warm, soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation.
4. **Power:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Your Bella Pro Series Air Fryer features an intuitive digital touchscreen for easy operation.

Controls:

- **Power Button:** Press to turn the unit on/off.
- **Temperature Control (+/-):** Adjust cooking temperature (180°F - 400°F).
- **Time Control (+/-):** Adjust cooking time (up to 60 minutes).
- **Preset Programs:** Select from 9 pre-programmed settings for common foods like fries, chicken, fish, and more. These automatically set optimal time and temperature.

Cooking Steps:

1. **Prepare Food:** Place your desired food into the air fryer basket. Do not overfill.
2. **Insert Basket:** Slide the basket firmly into the main unit.
3. **Power On:** Press the Power button.
4. **Select Settings:**
 - For manual cooking, use the Temperature and Time controls to set your desired values.
 - For pre-programmed cooking, select one of the 9 preset icons on the touchscreen.
5. **Start Cooking:** The air fryer will begin cooking automatically after settings are selected.
6. **Shake/Flip (Optional):** For even crisping, some foods may require shaking or flipping halfway through the cooking cycle. The air fryer may beep to remind you.
7. **Check Doneness:** Once the timer completes, carefully remove the basket and check if the food is cooked to your preference.

Note: No official product videos from the seller were available for embedding. Please refer to the detailed instructions above for operation.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your air fryer. The pan and tray are dishwasher-safe for convenient cleaning.



Figure 5: A hand easily removing the crisper plate from the air fryer basket, demonstrating the detachable design for cleaning.



Figure 6: The air fryer basket and crisper tray placed in a dishwasher, confirming their dishwasher-safe feature for easy cleanup.

Cleaning Steps:

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The non-stick coated pan and crisper tray can be washed in the dishwasher or by hand with warm, soapy water. Avoid abrasive cleaning tools.
3. **Wipe Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
4. **Clean Heating Element:** Use a soft brush to remove any food residue from the heating element inside the air fryer.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; Basket not inserted correctly.	Ensure plug is securely in outlet; Push basket firmly into place until it clicks.
Food not cooked evenly.	Basket overloaded; Food not shaken/flipped.	Cook in smaller batches; Shake or flip food halfway through cooking.
White smoke coming from appliance.	Grease from previous use; Fatty foods.	Clean basket and tray thoroughly after each use; Drain excess oil from fatty foods.
Food not crispy.	Not enough oil (for certain foods); Temperature too low.	Lightly spray or toss food with oil; Increase temperature or cooking time.

SPECIFICATIONS

Brand: BELLA
Model Name: 90088
Capacity: 8 Quarts
Wattage: 1700 Watts
Material: Stainless Steel
Control Method: Touch
Special Feature: Temperature Control
Color: Black
Has Nonstick Coating: Yes
Is Dishwasher Safe: Yes (Pan and Tray)
Item Weight: 17.06 pounds
Package Dimensions: 16.7 x 16 x 16 inches
Manufacturer: Bella Housewares
Manufacture Year: 2023
UPC: 829486900884

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official BELLA website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question