

[Manuals.plus](#) /

› [L.O.L. Surprise!](#) /

› L.O.L. Surprise! OMG Dance Miss Royale Fashion Doll Instruction Manual

L.O.L. Surprise! 572978EUC

L.O.L. Surprise! OMG Dance Miss Royale Fashion Doll Instruction Manual

Model: 572978EUC | Brand: L.O.L. Surprise!

INTRODUCTION


This manual provides essential information for the setup, operation, and care of your L.O.L. Surprise! OMG Dance Miss Royale Fashion Doll. Please read these instructions carefully to ensure proper enjoyment and longevity of your product. The Miss Royale doll features 15 surprises, including unique fashions, accessories, and a magic black light feature.

WHAT'S INCLUDED

Your L.O.L. Surprise! OMG Dance Miss Royale Fashion Doll package contains the following items:

- 1 L.O.L. Surprise! OMG Dance Miss Royale Fashion Doll
- Fashions and Accessories (including shoes, hat box, garment bag, fan, choker, earrings)
- Magic Black Light
- Hair Brush
- Doll Stand
- Reusable TV Package Playset
- Sticker
- Hanger
- Dance Guide Magazine

Product Images

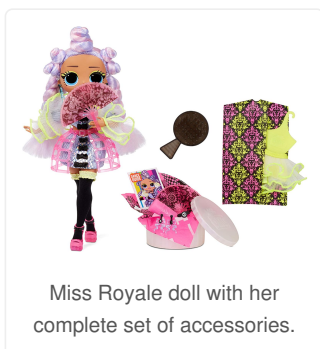



Detailed view of Miss Royale and her accessories.



The interactive TV packaging for Miss Royale.



Miss Royale's glowing features under black light.



COLLECT THEM ALL

The L.O.L. Surprise! OMG Dance Doll collection.

Official Product Videos

This video provides a detailed unboxing experience of the L.O.L. Surprise! OMG Miss Royale doll, showcasing the interactive packaging, doll's features, and accessories, including the black light surprises.

An official product video from MGA Entertainment showcasing the L.O.L. Surprise! OMG Dance Dolls, highlighting their unique styles and dance themes.

SETUP

- 1. Unboxing the Doll:** Carefully remove the outer packaging. The TV package features an interactive 'dancing' screen. Pull the tab on the side to see the doll's image move.

- 2. **Accessing Surprises:** Open the main box to reveal the Miss Royale doll and her individually wrapped surprises. The hat box and garment bag contain additional accessories and fashions.
- 3. **Assembling the Doll Stand:** Attach the doll stand base to the support pole. Place the doll onto the stand for display.
- 4. **Dressing the Doll:** The doll's hands are removable for easier dressing. Gently pull off the hands, dress the doll in her chosen outfit, and then reattach the hands.

OPERATING FEATURES

- 1. **Posing the Doll:** Miss Royale is articulated, allowing for various dance poses. Gently move her joints to achieve desired positions.
- 2. **Using the Magic Black Light:** Locate the included black light. In a darkened room, shine the black light on Miss Royale to reveal hidden glowing patterns on her face, hair, and outfit.
- 3. **Changing Outfits:** Experiment with different fashion combinations using the included garments and accessories. Remember to remove hands for easier dressing.
- 4. **Dance Guide:** Refer to the 'Dance Guide' magazine for inspiration on dance moves and styling.

MAINTENANCE

- **Hair Care:** Miss Royale's hair is made of a yarn-like material. It is not designed to be brushed with a standard doll hairbrush. Avoid excessive manipulation or attempting to unbraid the hair to prevent tangling and damage.
- **Cleaning the Doll:** Wipe the doll's body with a soft, damp cloth. For stubborn marks, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals.
- **Cleaning Accessories:** Small accessories can be cleaned with a damp cloth. Ensure all parts are dry before storing.
- **Storage:** Store the doll and accessories in a clean, dry place away from direct sunlight to prevent discoloration and damage. The reusable TV package can be used for storage.

TROUBLESHOOTING

- **Stiff Joints:** If the doll's joints are stiff, gently warm them with warm water (not hot) to increase flexibility before posing.
- **Difficulty Dressing:** Remember to remove the doll's hands when changing outfits to prevent tearing delicate fabrics or straining the doll's limbs.
- **Black Light Not Working:** Ensure the black light's battery (if applicable) is functional. The glowing effects are most visible in a completely dark environment.

SPECIFICATIONS

Feature	Detail
Brand Name	L.O.L. Surprise!
Model Name	L.O.L. Surprise OMG Dance Doll- Miss Royale
Model Number	572978EUC
GTIN / UPC	035051572978
Toy Figure Type	Doll
Character	Miss Royale
Manufacturer Minimum Age	48 Months

Material Type	Plastic
Item Dimensions (L x W x H)	8.1"L x 2.95"W x 12.2"H
Item Weight	200 Grams
Number of Pieces	15
Color	Multicolor
Are Batteries Required	No

WARRANTY AND SUPPORT

Warranty and support information for the L.O.L. Surprise! OMG Dance Miss Royale Fashion Doll is not provided in the product details. Please refer to the manufacturer's official website or contact their customer service for further assistance regarding warranty claims or product support.

© 2026 L.O.L. Surprise! All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question