

Manuals.plus /

- › DigiVolt /
- › DigiVolt UN-47 Universal Remote Control Instruction Manual

DigiVolt UN-47

DigiVolt UN-47 Universal Remote Control Instruction Manual

INTRODUCTION

Thank you for choosing the DigiVolt UN-47 Universal Remote Control. This remote is designed for broad compatibility with various television brands, including LCD, Plasma, QLED, and Smart TVs. It offers a convenient solution to control your entertainment system with ease, featuring dedicated buttons for popular streaming services like Netflix and YouTube.

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your DigiVolt UN-47 remote control.



This image displays four versions of the DigiVolt UN-47 Universal Remote Control. Each remote features a standard layout

including a power button, number pad, volume and channel controls, navigation buttons, and dedicated buttons for services like Netflix and YouTube. The remotes are shown with subtle color variations on some buttons, highlighting the product's design.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

2. Initial Programming / Pairing

The DigiVolt UN-47 Universal Remote Control is designed to work with most televisions without requiring complex initial setup. In many cases, it will function immediately after battery installation.

If your remote does not control your TV directly, a simple pairing process may be required. While specific instructions can vary by TV model, a common method involves:

- Ensuring your TV is powered on.
- Pressing and holding two specific buttons on the remote simultaneously (e.g., 'SET' and 'POWER', or 'BRAND' and 'POWER') for a few seconds until an indicator light on the remote illuminates or flashes.
- Following any on-screen prompts or releasing the buttons and testing functionality.

For detailed brand-specific codes or advanced programming, please refer to the quick start guide included with your product or consult the manufacturer's website.

OPERATING INSTRUCTIONS

The DigiVolt UN-47 remote control features a standard layout for intuitive operation of your television. Below are the primary functions:

- **Power Button:** Turns your television on or off.
- **Number Pad (0-9):** Used for direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute Button:** Silences the television audio.
- **Input/Source Button:** Cycles through available video input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right):** Used to navigate menus and on-screen selections.
- **ENTER Button:** Confirms selections in menus.
- **RETURN/BACK Button:** Returns to the previous screen or menu.
- **MENU Button:** Opens the television's main menu.
- **GUIDE Button:** Accesses the electronic program guide (if available).
- **Netflix Button:** Provides direct access to the Netflix application.
- **YouTube Button:** Provides direct access to the YouTube application.

The remote is compatible with a wide range of TV technologies, including LCD, Plasma, QLED, and Smart TV functionalities.

MAINTENANCE

Battery Replacement

When the remote's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps outlined in the Setup section to replace the two (2) AAA batteries. Always use fresh batteries and dispose of old batteries responsibly according to local regulations.

Cleaning

To clean your remote control, gently wipe its surface with a soft, dry, or slightly damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's electronics or finish.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed.
 - Check for any obstructions between the remote and the TV's infrared receiver.
 - Point the remote directly at the TV.
 - If previously programmed, try re-pairing the remote with your TV using the instructions in the Setup section.
- **Incorrect commands or limited functionality:**
 - This may indicate an incomplete or incorrect pairing. Attempt to re-program the remote for your specific TV brand.
 - Some advanced TV features may not be fully supported by all universal remotes.
- **Only volume and channel buttons light up:**
 - It is normal for some universal remotes to have LED indicators only for specific functions like volume and channel changes, rather than all buttons. This is a design feature and not a malfunction.

SPECIFICATIONS

Brand	DigiVolt
Model Name	UN-47 Universal Remote Control
Color	Black (with various accent colors available)
Connectivity Technology	Radio Frequency
Special Features	Universal Compatibility
Compatible Devices	Television (LCD, Plasma, QLED, Smart TV)
Maximum Number of Supported Devices	2
Number of Buttons	15
Maximum Range	10 Meters
Batteries Required	2 AAA batteries

WARRANTY AND SUPPORT

The DigiVolt UN-47 Universal Remote Control comes with a stated spare parts availability period of 1 year. This typically indicates the duration for which replacement components may be accessible.

For further assistance, troubleshooting beyond this manual, or inquiries regarding warranty claims, please contact DigiVolt customer support through their official website or the retailer from whom the product was purchased. Please have your product model number (UN-47) and purchase information ready when contacting support.