

## Nexus E31120

# Nexus Revo Embrace Rotating Prostate Massager User Manual

Model: E31120

## 1. PRODUCT OVERVIEW

The Nexus Revo Embrace is a rotating prostate massager designed with a double ring feature. It offers multiple stimulation options for a personalized experience. Constructed from 100% silicone, the device is rechargeable, waterproof, and includes a rechargeable, waterproof remote control.

### Key Features:

- Double ring design for secure fit.
- 6 distinct stimulation modes.
- 2 shaft rotation speeds.
- 2 rotation directions.
- Total of 34 unique pleasure combinations.
- Made from 100% body-safe silicone.
- Fully rechargeable via USB.
- Waterproof design for easy cleaning and use in various environments.
- Includes a rechargeable and waterproof remote control for convenient operation.



*Figure 1: Nexus Revo Embrace Rotating Prostate Massager.*

## **2. SETUP AND CHARGING**

### **2.1 Initial Cleaning**

Before first use and after each use, clean the device thoroughly with warm water and a mild, toy-safe soap or a specialized toy cleaner. Rinse completely and allow to air dry.

### **2.2 Charging the Device**

The Nexus Revo Embrace and its remote control are both rechargeable. Use the included USB charging cable to charge the device. The charging port is typically located at the base of the device.

1. Connect the magnetic end of the USB charging cable to the charging points on the device.
2. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer's USB port.
3. Allow the device to charge fully before first use. Charging indicators (e.g., LED light) will typically change or turn off when charging is complete.
4. The remote control also charges in a similar manner.

*Note: A full charge typically takes approximately 2.5 hours and provides an operating time of about 1 hour.*



**USB rechargeable\*.**

\*Charger included.

*Figure 2: Device showing USB charging port and cable.*

### **3. OPERATING INSTRUCTIONS**

#### **3.1 Device Controls**

The device features intuitive controls, either directly on the unit or via the remote control.



*Figure 3: Control buttons on the device.*

- **Power Button (Circle icon):** Press and hold to turn the device ON or OFF. Short press to cycle through stimulation modes.

- **Wave Button (Wave icon):** Short press to change rotation speed or direction.

## 3.2 Using the Remote Control

The remote control mirrors the functions of the device's onboard buttons, allowing for discreet and convenient operation.

- Ensure the remote control is charged and within range of the device.
- Use the corresponding buttons on the remote to power on/off, change stimulation modes, and adjust rotation settings.

## 3.3 Stimulation Modes and Rotation

The Revo Embrace offers a variety of settings:

- **Stimulation Modes:** Cycle through 6 different vibration patterns by short-pressing the Power button.
- **Rotation Speeds:** The rotating shaft has 2 speed settings.
- **Rotation Directions:** The shaft can rotate in 2 directions.
- Experiment with different combinations to find your preferred settings.

# 4. MAINTENANCE AND CARE

## 4.1 Cleaning

Proper cleaning ensures hygiene and extends the product's lifespan.

1. Always clean the device before and after each use.
2. Wash with warm water and a mild, antibacterial soap or a dedicated toy cleaner.
3. Rinse thoroughly to remove all soap residue.
4. Pat dry with a lint-free cloth or allow to air dry completely before storing.

*Note: The device is waterproof, allowing for easy cleaning under running water.*

## 4.2 Storage

Store the device in a clean, dry, and dust-free environment, away from direct sunlight and extreme temperatures. Avoid storing with other toys made of different materials to prevent material degradation.

# 5. TROUBLESHOOTING

If you encounter issues with your Nexus Revo Embrace, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on or respond.	Battery is depleted.	Ensure the device is fully charged. Connect to the USB charger and allow at least 2.5 hours for a full charge.
Remote control is not working.	Remote battery is depleted or out of range.	Charge the remote control. Ensure the remote is within close proximity to the device.
Rotation or vibration is weak.	Low battery.	Recharge the device.

Problem	Possible Cause	Solution
Device feels uncomfortable or causes irritation.	Improper lubrication or allergic reaction to material.	Ensure adequate water-based lubricant is used. Discontinue use if irritation persists and consult a healthcare professional. The device is made of 100% silicone.

If the problem persists after trying these solutions, please contact Nexus customer support for further assistance.

## 6. SPECIFICATIONS

---

- **Brand:** Nexus
- **Model Number:** E31120
- **Material:** 100% Silicone
- **Dimensions (L x W x H):** 24 x 18 x 5 cm (approximately 9.4 x 7.1 x 2 inches)
- **Weight:** 360 g (approximately 0.79 lbs)
- **Water Resistance:** Waterproof
- **Number of Settings:** 6 stimulation modes, 2 rotation speeds, 2 rotation directions
- **Charging:** USB Rechargeable
- **Charging Time:** Approximately 2.5 hours
- **Operating Time:** Approximately 1 hour
- **GTIN (Global Trade Item Number):** 05060274221384

## 7. WARRANTY AND SUPPORT

---

Specific warranty information for the Nexus Revo Embrace is not provided in the product details. For warranty claims, technical support, or any other inquiries, please contact Nexus customer service directly through their official website or the retailer from whom the product was purchased.

Always refer to the packaging for the most up-to-date contact information and warranty details.