

Manuals.plus /

- › OMAIC /
- › Universal Samsung TV Remote Control User Manual

OMAIC BN59-01260A

Universal Samsung TV Remote Control User Manual

Brand: OMAIC
Model: BN59-01260A

1. INTRODUCTION

This manual provides comprehensive instructions for the OMAIC Universal Samsung TV Remote Control, Model BN59-01260A. Designed for ease of use, this remote offers seamless control over a wide range of Samsung Smart TVs, including Curved, QLED, Frame, LED, LCD, HDTV, SUHD, UHD, 3D, and 4K models. It functions immediately out of the box without requiring any complex setup or programming.





Figure 1: Front view of the OMAIC Universal Samsung TV Remote Control.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Gently slide down the battery compartment cover located on the back of the remote control.
2. Observe the positive (+) and negative (-) terminals inside the compartment.
3. Insert two AA batteries, ensuring their positive and negative ends align correctly with the markings in the compartment.

4. Gently push the battery compartment cover upwards until it clicks securely into place.

1



Gently slide down the remote control cover.

2



Distinguish your batteries' positive and negative terminals.

3



Insert a pair of AA batteries, other models will not work.

4



Likewise, gently push the remote control cover upwards to close it.

Figure 2: Step-by-step guide for installing AA batteries into the remote control.

Once batteries are installed, the remote is ready for immediate use with compatible Samsung TVs without any further programming.

3. OPERATING INSTRUCTIONS

This universal remote control is designed for intuitive operation. It works directly out of the box with no additional setup required. The remote utilizes infrared technology, providing a reliable signal transmission distance of up to 33 feet with a quick response time of 0.1 seconds.

3.1 Basic Functions

- **Power Button:** Located at the top, press to turn your Samsung TV on or off.
- **Directional Pad (Circular):** Use the up, down, left, and right arrows to navigate menus and select options. The center button acts as an 'OK' or 'Enter' key.
- **Back Button:** Returns to the previous screen or menu.

- **Home Button:** Takes you directly to the Smart Hub or main home screen of your Samsung TV.
- **Play/Pause Button:** Controls media playback (play, pause, fast forward, rewind) within compatible applications.
- **Volume Control (VOL):** Press up or down to adjust the TV's volume.
- **Channel Control (CH):** Press up or down to change TV channels.
- **123/Extra Button:** Accesses numerical input or additional functions depending on the TV model and current screen.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons may provide quick access to specific apps or functions depending on your TV model and region.



Simple and intuitive- **Quickly access** your favorite live TV and your most used applications from the main menu.

Figure 3: Demonstrating the remote control in use with a Samsung TV.



FAST RESPONSE:

Precisely control far from **10 meters / 33 feet**. Fastest response not over **0.2 second** to your TV, It supports over **130,000 clicks** approved test.

Figure 4: Highlighting the fast response and long transmission distance of the remote.

4. COMPATIBILITY

This OMAIC Universal Remote Control is broadly compatible with a wide range of Samsung Smart TVs and various Samsung remote models. It is designed to replace your original remote control seamlessly.

4.1 Compatible Samsung TV Types:

- All Samsung Smart TV Curved
- QLED
- Frame
- LED
- LCD
- HDTV
- SUHD
- UHD

- 3D
- 4K TV models

4.2 Compatible Samsung TV Remote Models:

- BN59-01259E
- BN59-01259B
- BN59-01260A
- BN59-01241A
- BN59-01265A
- BN59-01259D
- BN59-01266A
- BN59-01242A
- BN59-01292A
- BN59-01312A
- BN59-01315A
- BN59-01385A
- BN59-01199F
- BN59-01301A
- AA59-00594A
- AA59-00666A
- AA59-00741A
- AA59-00784C
- AA59-00666A
- BN59-01178W
- And many more Samsung TV remote models.

A Remote Compatible with All Samsung TVs



It's a perfect replacement for your old Samsung TV remote, and having this one is all you get !



Figure 5: The OMAIC remote alongside several compatible Samsung remote models.

Introducing Compatible with All Samsung Smart TVs

Smart

Curved

Frame

QLED



4K

LED

LCD

QLED



Figure 6: Visual representation of the remote's compatibility with different Samsung TV technologies.

5. SPECIFICATIONS

Feature	Detail
Product Dimensions	6.5 x 1.38 x 0.39 inches
Item Weight	1.41 ounces
Batteries Required	2 x AA batteries (not included)
Transmission Technology	Infrared
Max Transmission Distance	Up to 33 feet (10 meters)
Response Time	0.1 seconds
Material	ABS Material (as per image PT05)
Model Number	BN59-01260A



ABS MATERIAL



STURDY BUTTONS



COMFORTABLE FEEL



Figure 7: Features of the remote control's construction and design.



Figure 8: Detailed dimensions of the remote control.

6. TROUBLESHOOTING

If you encounter any issues with your OMAIC Universal Samsung TV Remote Control, please refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AA batteries.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Ensure you are within the effective transmission range (up to 33 feet).
- **Buttons Not Working:**
 - Press the button firmly.
 - Clean the remote's surface and buttons with a soft, dry cloth to remove any dirt or residue.
 - If only specific buttons are not working, it might indicate internal damage; consider contacting support.
- **Intermittent Functionality:**
 - Strong light sources (like direct sunlight or bright fluorescent lights) can interfere with infrared signals. Try operating the remote in different lighting conditions.
 - Other electronic devices emitting infrared signals might cause interference.

7. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote's surface regularly with a soft, dry, or slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage and damage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Protection:** Avoid dropping the remote or subjecting it to strong impacts, as this can damage internal components.

8. WARRANTY AND SUPPORT

OMAIC provides a **100-day after-sales service** for this product. If you encounter any issues or have questions regarding the use or functionality of your remote control, please do not hesitate to contact our customer support team directly. We are committed to providing prompt assistance and will reply to your inquiries within 12 hours.

For support, please refer to the contact information provided with your purchase or visit the official OMAIC store on Amazon.

