

KVV GL307

KVV 3 Wheel Golf Push Cart GL307 User Manual

Model: GL307

[Overview](#)[Setup](#)[Operating](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. OVERVIEW

The KVV 3 Wheel Golf Push Cart GL307 is designed for ease of use and portability on the golf course. It features a lightweight yet durable aluminum frame, maintenance-free wheels with ball bearings for smooth movement, and a quick folding mechanism for compact storage. The ergonomic handle is height-adjustable to accommodate various users.

Key Features:

- **Height Adjustable Handle:** Ergonomic TPE handle designed for multiple pushing positions and users of different heights.
- **Ball Bearing Wheels:** 9.5-inch front and two 11.5-inch rear EVA cover wheels provide smooth rolling and traction.
- **Lightweight and Durable Design:** Strong aluminum frame, weighing only 13.6 lbs, ensures portability and stability.
- **Quick Foot-Brake:** Easily engage and release the brake with a foot tap.
- **Compact Folding:** Folds to a small size of 19.1"L x 14.6"W x 23.2"H for convenient storage and transport.
- **Integrated Accessories:** Includes a scorecard holder, storage compartment, and umbrella holder.



A golfer pushing the KVV 3 Wheel Golf Push Cart across a green golf course.

2. SETUP

The KVV 3 Wheel Golf Push Cart requires minimal assembly. Follow these steps to prepare your cart for use:

1. **Unpack the Cart:** Carefully remove all components from the packaging.
2. **Attach Wheels:** Insert the three wheels into their designated slots. This process typically takes only a few seconds per wheel. Ensure they click securely into place.
3. **Unfold the Cart:** Refer to the folding steps below to fully extend the cart frame.
4. **Install Umbrella Holder:** Attach the umbrella holder to the designated port on the handle console.

FOLDING STEPS



1 Fold front wheel



2 Pull folding buckle



3 Fold the frame



4 Release the buckle



5 Fold the handle



6 Ready to go

Visual guide for the folding and unfolding process of the golf push cart.

Setup Video Guide:

Your browser does not support the video tag.

This video demonstrates the unboxing and setup process for the KVV 3 Wheel Golf Push Cart.

Your browser does not support the video tag.

This video provides instructions on how to build the KVV Golf Push Cart.

3. OPERATING INSTRUCTIONS

3.1 Folding and Unfolding

The cart features a quick 3-step folding mechanism for easy storage and transport. To fold, follow the steps illustrated in the setup section. To unfold, reverse the process, ensuring all locking mechanisms are engaged for stability.



The KVV 3 Wheel Golf Push Cart shown in its compact folded state and fully extended for use.

3.2 Handle Adjustment

The handle height can be adjusted to suit users of different heights. Locate the adjusting buckle on the handle shaft. Press or release the buckle as needed to slide the handle to your desired height, then secure the buckle firmly.

HEIGHT ADJUSTABLE HANDLE

Suitable for People of Different Heights



The adjustable handle allows for comfortable pushing positions for various user heights.

3.3 Brake System

The cart is equipped with a quick foot-brake mechanism. To engage the brake, gently tap the brake pedal with your foot. To release the brake, tap the pedal again. Ensure the brake is engaged when parking the cart, especially on inclines.



Key features of the KVV golf cart, including the quick foot-brake mechanism.

3.4 Storage Features

The handle console includes a scorecard holder, a storage compartment for small items, and a detachable umbrella holder. Utilize these features to keep your essentials organized and accessible during your round.



The handle console provides convenient storage for scorecards, balls, and an umbrella.

Operating Videos:

Your browser does not support the video tag.

This video highlights the smallest folding size feature of the KVV 3 Wheel Golf Push Cart.

Your browser does not support the video tag.

This video provides an overview of the KVV 3 Wheel Golf Push Cart in use.

Your browser does not support the video tag.

This video demonstrates the foldable and lightweight aspects of the KVV 3 Wheel Golf Push Cart.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your KVV 3 Wheel Golf Push Cart.

- **Cleaning:** After each use, wipe down the cart frame and wheels with a damp cloth to remove dirt, grass, and debris. Avoid using harsh chemicals that may damage the finish.
- **Wheel Inspection:** Periodically check the wheels for any signs of wear or damage. The EVA cover wheels are maintenance-free, but ensure they spin freely and are securely attached.
- **Fastener Check:** Regularly inspect all nuts, bolts, and fasteners to ensure they are tight. Tighten any loose components to maintain the cart's stability and structural integrity.
- **Storage:** Store the cart in a dry, cool place, away from direct sunlight and extreme temperatures, to prevent material degradation.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your KVV 3 Wheel Golf Push Cart.

5.1 Cart Does Not Track Straight

If your golf cart does not track in a straight line, an adjustment may be needed. The manufacturer provides easy instructions for wheel alignment. Typically, this involves a minor adjustment to the front wheel's alignment mechanism. Consult the included quick-start guide or contact customer support for specific instructions.

5.2 Handle Falls Down or Does Not Stay in Position

If the adjustable handle does not remain securely in your desired height setting, the nut and bolt mechanism may need tightening. Locate the pivot point of the handle adjustment and use an appropriate tool to tighten the nut and bolt until the handle holds its position firmly without excessive downward pressure.

6. SPECIFICATIONS

Brand Name	KVV
Model Name	GL307
Manufacturer	KVV SPORTS
Special Features	Lightweight, Smallest Folding Size
Item Weight	13.6 Pounds (6.17 kg)
Item Dimensions (L x W x H)	43.31 x 28.35 x 51.97 inches (110 x 72 x 132 cm)
Folded Dimensions (L x W x H)	19.1 x 14.6 x 23.2 inches (48.5 x 37 x 59 cm)
Color	Charcoal
Material	Aluminum
Frame Material	Aluminum
UPC	779605528256

7. WARRANTY & SUPPORT

For warranty information and customer support regarding your KVV 3 Wheel Golf Push Cart GL307, please contact KVV SPORTS directly. Details on warranty coverage and how to submit a claim can typically be found on the manufacturer's

official website or by contacting their customer service department.
Manufacturer: KVV SPORTS
Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question