

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Tenamic](#) /

› [TENAMIC GC10 Pistol Safe User Manual - Dial Lock Black](#)

Tenamic GC10

TENAMIC Pistol Safe User Manual

Model: GC10 (Dial Lock Black)

Brand: Tenamic

1. INTRODUCTION

Thank you for choosing the TENAMIC Pistol Safe. This manual provides essential information for the safe and effective use of your new portable handgun lock box. Please read these instructions carefully before use and retain them for future reference. This safe is designed to secure a handgun and other small valuables, offering a reliable storage solution for home, travel, or vehicle use.

2. SAFETY INFORMATION

- Always store firearms unloaded and separate from ammunition.
- Keep the safe locked and the combination confidential.
- Do not store the safe in easily accessible locations where unauthorized individuals, especially children, could find it.
- Ensure the safe is securely mounted or tethered when used in a vehicle or other portable applications to prevent unauthorized removal.
- This safe is not fireproof or waterproof.

3. PACKAGE CONTENTS

- 1 x TENAMIC Pistol Safe (Dial Lock Black)
- 1 x Steel Cable

- 2 x Mounting Screws
- 1 x User Manual

INTERNAL PROTECTION



The interior foam can protect pistols and valuables from wear. You can remove the foam to increase storage space if necessary.

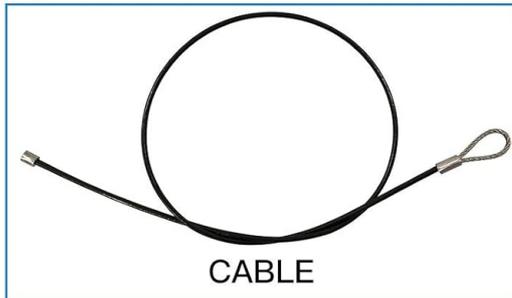


Figure 1: Internal view of the safe with included accessories (steel cable and mounting screws).

4. SETUP

4.1 Setting the Combination Lock

Your TENAMIC Pistol Safe features a resettable 3-digit combination lock. Follow these steps to set your personal code:


1. Keep the dials set to the factory default code (0-0-0) and turn the knob clockwise to open the lock box.
2. Locate the lock slot inside the safe. Move the lock slot from position "A" to position "B" to initiate the code reset process.
3. Set the dials to your desired 3-digit combination. Ensure all numbers are centered in the display.
4. Return the lock slot from position "B" to position "A" to save your new code.

Important: Remember your new combination. There is no master key or override for the combination lock once it is set. Test your new combination several times with the safe open before closing it.

HOW TO SET THE CODE?



1. Keep dials at 0-0-0 and turn the knob clockwise to open the lock box.

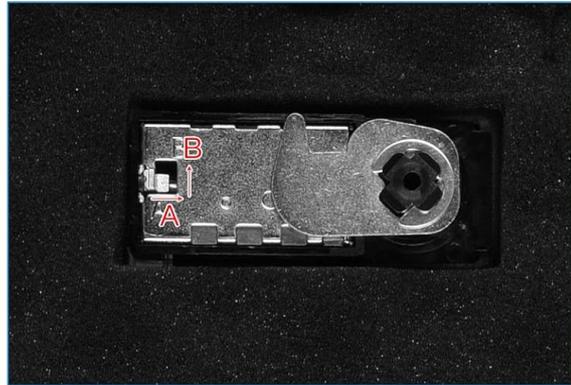

2. Move the lock slot from "A" to "B" to reset your code.



3. Set the dials you want (such as 9-9-9), make sure all numbers in the center of the dials.



4. Return the slot from "B" to "A".

Figure 2: Step-by-step guide to setting your personal 3-digit combination.

4.2 Securing the Safe with the Steel Cable

The included heavy steel cable allows you to tether the safe to a fixed object, providing additional security against theft. This is particularly useful in vehicles or when traveling.

1. Loop the steel cable around a secure, immovable object (e.g., a car seat frame, a bed frame, or a heavy piece of furniture).
2. Feed one end of the cable through the loop at the other end.
3. Insert the free end of the cable into the designated cable slot on the side of the safe.
4. Close and lock the safe. The cable will be secured once the safe is locked.

RELIABLE SECURITY

3 ft heavy steel cable can withstand huge force and fix the gun safe to anywhere you want



Figure 3: The steel cable provides an additional layer of security by tethering the safe.

4.3 Mounting the Safe

For permanent installation, the safe can be fixed to a wall or floor using the provided mounting screws. This option is suitable for home or office use.

1. Choose a suitable location for mounting.
2. Mark the drilling points using the pre-drilled holes on the back of the safe as a template.
3. Drill pilot holes into the wall or floor.
4. Align the safe with the pilot holes and secure it using the provided mounting screws.

5. OPERATING THE SAFE

5.1 Opening the Safe

1. Align the three dials to your set combination.
2. Turn the knob clockwise to release the latch.

3. Lift the lid to open the safe.

5.2 Closing and Locking the Safe

1. Ensure the contents are properly placed within the safe, utilizing the protective foam to prevent scratches or damage.
2. Close the lid firmly.
3. Scramble the dials to a random set of numbers to lock the safe.

5.3 Internal Protection and Storage

The safe includes protective foam lining to cushion your valuables and prevent movement or damage during transport. The foam can be removed if additional storage capacity is needed.



Figure 4: The safe is designed for versatile placement in various environments.

Video 1: Official product video demonstrating the TENAMIC Pistol Safe and Handgun Safe for Car and Travel, highlighting its features and portability.

6. MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Lock Mechanism:** Periodically check the combination dials and knob for smooth operation. Do not lubricate the lock mechanism unless specifically instructed by the manufacturer.
- **Internal Foam:** The protective foam can be removed and cleaned with a mild soap solution if necessary. Ensure it is completely dry before placing it back into the safe.

7. TROUBLESHOOTING

7.1 Safe Will Not Open

- **Incorrect Combination:** Double-check that you are entering the correct 3-digit combination. Ensure each number is precisely aligned in the center of the display.
- **Knob Not Turning:** After entering the correct combination, ensure the knob is turned fully clockwise. If it feels stiff, apply gentle, consistent pressure.
- **Internal Mechanism Jammed:** If the safe has been dropped or subjected to impact, the internal mechanism might be misaligned. Contact customer support if the issue persists.

7.2 Combination Forgotten

If you have forgotten your combination, unfortunately, there is no master key or reset button for this model. The safe will need to be opened by a professional locksmith or replaced. Always store your combination in a secure, memorable location separate from the safe.

8. SPECIFICATIONS

Feature	Specification
Brand	Tenamic
Model Number	GC10
Exterior Dimensions (L x W x H)	9.5" x 6.5" x 1.8"
Lock Type	3-Digit Combination Lock
Material	Alloy Steel
Color	Black

Item Weight	2.9 Pounds
Special Feature	Portable
Included Components	Steel Cable, Mounting Screws

PRODUCT SIZE



EXTERIOR DIMENSIONS

L*W*H

9.5"*6.5"*1.8"

Figure 5: Product dimensions of the TENAMIC Pistol Safe.

9. WARRANTY AND SUPPORT

TENAMIC products are designed for durability and reliability. For specific warranty information, please refer to the warranty card included in your product packaging or visit the official Tenamic website. If you encounter any issues or have questions regarding your TENAMIC Pistol Safe, please contact our customer support team:

- **Email:** [Insert Customer Support Email Here]
- **Phone:** [Insert Customer Support Phone Number Here]
- **Website:** [Tenamic Official Store](#)

Please have your model number (GC10) and purchase date ready when contacting support.

