

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Cecotec](#) /

> [Cecotec HydroSteam 2030 Active Steam Cleaner User Manual](#)

Cecotec 05516

Cecotec HydroSteam 2030 Active Steam Cleaner User Manual

Model: 05516

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Cecotec HydroSteam 2030 Active steam cleaner. Retain this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before filling with water, cleaning, or performing maintenance.
- Do not leave the steam cleaner unattended while it is plugged in or operating.
- Keep the appliance out of reach of children and pets.
- Use only clean tap water. Do not add detergents, perfumes, or other chemicals to the water tank, as this can damage the appliance and void the warranty.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Always allow the appliance to cool down completely before storing.
- Do not immerse the appliance in water or any other liquid.
- Regularly check the power cord and plug for damage. Do not operate the appliance if the cord or plug is damaged.

PRODUCT OVERVIEW

The Cecotec HydroSteam 2030 Active is a powerful 2000W steam cleaner designed for effective and hygienic cleaning of various surfaces. It comes with 15 accessories to tackle different cleaning tasks around your home.



Image: The Cecotec HydroSteam 2030 Active steam cleaner with its main body and handle.

Components and Accessories

Your steam cleaner package includes the following items:

- Main steam cleaner unit
- Flexible hose
- Extension tubes (2x)
- Floor brush with cloth
- Window cleaning tool
- Small brush
- Round brushes (various sizes)
- Concentrator nozzle
- Angled nozzle
- Upholstery tool with cloth
- Measuring cup
- Funnel
- User manual

SETUP

Follow these steps to prepare your steam cleaner for first use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble:** Attach the desired accessory (e.g., flexible hose, extension tubes, floor brush) to the main unit. Ensure all connections are secure.
3. **Fill Water Tank:** Unscrew the safety cap of the water tank. Use the provided measuring cup and funnel to fill the tank with up to 450 ml of clean tap water. Do not overfill.
4. **Secure Cap:** Screw the safety cap back on tightly.
5. **Power Connection:** Plug the power cord into a suitable grounded electrical outlet (230V AC).



Image: A user demonstrating the handheld use of the steam cleaner for kitchen surfaces.

OPERATING INSTRUCTIONS

Heating Up

Once plugged in, the indicator light will illuminate, signaling that the appliance is heating up. The heating

time is approximately 5 minutes. The indicator light will change or turn off when the steam cleaner is ready for use.

Using the Steam Cleaner

1. **Unlock Safety Button:** Press the safety button on the handle.
2. **Activate Steam:** Press and hold the steam trigger to release steam. Release the trigger to stop the steam flow.
3. **Clean Surfaces:** Move the steam cleaner slowly over the surface to be cleaned. For stubborn dirt, hold the steam over the area for a few seconds.
4. **Change Accessories:** To change an accessory, ensure the steam trigger is released and the appliance is unplugged and cooled down.



Image: Close-up of the steam cleaner being used on a kitchen stovetop, showing steam emission.

Recommended Surfaces

This steam cleaner is suitable for various surfaces, including:

- Hard floors (tiles, sealed wood, laminate)
- Carpets and rugs (with appropriate attachment)

- Upholstery and fabrics (test on an inconspicuous area first)
- Kitchen surfaces (countertops, stovetops, ovens)
- Bathroom surfaces (tiles, showers, fixtures)



Image: The steam cleaner with a brush attachment cleaning an oven rack, demonstrating its use for tough grime.



Image: The steam cleaner with a small brush attachment being used to clean a shower fixture, showing its versatility for bathroom cleaning.



Image: A user operating the steam cleaner in mop configuration on a tiled floor, illustrating its use for large floor areas.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your steam cleaner.

After Each Use

1. **Unplug and Cool Down:** Always unplug the appliance and allow it to cool completely before handling.
2. **Empty Water Tank:** Carefully unscrew the safety cap and empty any remaining water from the tank.
3. **Clean Accessories:** Wash removable accessories with water and mild soap. Allow them to air dry completely.
4. **Wipe Down:** Wipe the exterior of the main unit with a damp cloth.
5. **Store:** Store the steam cleaner and its accessories in a dry, safe place.

Descaling

Depending on water hardness and frequency of use, mineral deposits may build up inside the water tank. To descale:

- Mix a solution of water and white vinegar (1:1 ratio).

- Pour the solution into the water tank and let it sit for several hours or overnight.
- Empty the tank and rinse thoroughly with clean water multiple times.
- Run a tank of clean water through the unit to flush out any remaining vinegar.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; appliance not heated; nozzle blocked; mineral buildup.	Refill water tank; wait for heating; clean nozzle; descale appliance.
Water leaking from nozzle	Appliance not fully heated; accessory not properly attached.	Wait for indicator light; ensure accessories are securely fastened.
Appliance not turning on	Not plugged in; power outlet fault; damaged power cord.	Check power connection; test outlet; inspect cord for damage.

SPECIFICATIONS

Key technical specifications for the Cecotec HydroSteam 2030 Active steam cleaner:

- **Model:** 05516
- **Power:** 2000 Watts
- **Voltage:** 230 Volts (AC)
- **Water Tank Capacity:** 450 Milliliters
- **Heating Time:** Approximately 5 Minutes
- **Dimensions (L x W x H):** 30.2 x 18.5 x 54.5 cm
- **Weight:** 1 Kilogram
- **Included Accessories:** 15
- **Recommended Surfaces:** Floors, carpets, upholstery, kitchen, bathrooms

WARRANTY AND SUPPORT

Your Cecotec HydroSteam 2030 Active steam cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Cecotec customer support through their official website or the contact information provided with your purchase documentation. Always have your model number (05516) and purchase date ready when contacting support.