

[manuals.plus](#) /› [X Rocker](#) /› [X Rocker Nintendo Super Mario 2.1 Gaming Chair Instruction Manual](#)**X Rocker 2020108**

# X Rocker Nintendo Super Mario 2.1 Gaming Chair Instruction Manual

Model: 2020108

## INTRODUCTION

Thank you for purchasing the X Rocker Nintendo Super Mario 2.1 Gaming Chair. This chair is designed to enhance your gaming and entertainment experience with its integrated 2.1 audio system, wireless Bluetooth connectivity, and vibration feedback. This manual provides essential information for safe setup, operation, and maintenance of your gaming chair. Please read it thoroughly before use and retain it for future reference.



*Image: Front view of the X Rocker Nintendo Super Mario 2.1 Gaming Chair, showcasing its design with Super Mario branding.*

## SAFETY INFORMATION

- **Weight Limit:** Do not exceed the maximum load capacity of 100 kg (220 lbs). Exceeding this limit may cause damage to the chair and potential injury.
- **Power Source:** Use only the provided power adapter. Ensure the power outlet matches the adapter's specifications.
- **Water and Moisture:** Keep the chair away from water, moisture, and high humidity to prevent electric shock or damage.
- **Ventilation:** Ensure adequate ventilation around the chair, especially the audio components, to prevent overheating.
- **Cleaning:** Disconnect the chair from the power source before cleaning. Use a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Children:** This chair is suitable for children, but adult supervision is recommended during assembly and initial use.
- **Placement:** Place the chair on a flat, stable surface to prevent tipping.

## PACKAGE CONTENTS

Please check the box for the following items:

- X Rocker Nintendo Super Mario 2.1 Gaming Chair (main unit)
- Power Adapter
- Audio Connection Cables (e.g., 3.5mm to RCA)
- Assembly Hardware (screws, Allen key if required)
- Instruction Manual

If any items are missing or damaged, please contact customer support.

## ASSEMBLY INSTRUCTIONS

Follow these general steps to assemble your X Rocker Gaming Chair:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Base:** Securely attach the chair's base to the main seat unit using the provided hardware. Ensure all screws are tightened firmly.
3. **Connect Wiring:** If there are any internal wires for the audio system that need connecting during assembly, follow the specific diagrams provided in the physical manual (if applicable).
4. **Final Check:** Once assembled, gently test the chair's stability and ensure all connections are secure before use.

For detailed, step-by-step assembly instructions, please refer to the diagrammatic guide included with your product packaging.

## OPERATING INSTRUCTIONS

### Control Panel Overview



*Image: Close-up of the X Rocker gaming chair control panel, showing volume dial, power switch, and input/output ports.*

The control panel is located on the side of the chair and provides access to power, volume, and audio connections.

## Powering On/Off

- Connect the power adapter to the chair's power input and then to a wall outlet.
- Locate the **ON/OFF** switch on the control panel. Flip it to the **ON** position to power on the chair's audio system.
- Flip the switch to the **OFF** position when not in use.

## Wired Audio Connection

To connect your gaming console, TV, or other audio device via cable:

1. Ensure the chair is powered off.
2. Use the provided audio cables (e.g., 3.5mm to RCA) to connect the **AUDIO OUT** port of your device to the **INPUT** port on the chair's control panel.
3. Power on the chair and your audio device.
4. Adjust the volume using the dial on the control panel and your device's volume controls.

## Wireless Bluetooth Connection

To connect your device wirelessly via Bluetooth:

1. Ensure the chair is powered on.
2. Activate Bluetooth on your mobile device (smartphone, tablet, etc.).
3. On your device, search for available Bluetooth devices. You should see "X Rocker" or a similar name appear in the list.
4. Select "X Rocker" to pair your device. A confirmation sound may play from the chair.
5. Once paired, audio from your device will play through the chair's 2.1 sound system.

## Volume and Vibration Control

- **Volume:** Use the large dial on the control panel to adjust the overall volume of the chair's audio system.
- **Vibration:** The chair's vibration feature is linked to the bass output of the audio system. Ensure your audio source has sufficient bass for optimal vibration feedback.



*Image: Rear view of the X Rocker gaming chair, highlighting the integrated speaker in the backrest, part of the 2.1 audio system.*

## MAINTENANCE

## Cleaning

- Always disconnect the chair from the power source before cleaning.
- Wipe the synthetic leather surface with a soft, damp cloth.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the material.
- For stubborn stains, use a mild soap solution and wipe immediately with a clean, damp cloth.

## Storage

The X Rocker gaming chair can be folded for more compact storage when not in use.



*Image: The X Rocker gaming chair shown in a folded position, demonstrating its compact storage capability.*

## General Care

- Avoid exposing the chair to direct sunlight or extreme temperatures for prolonged periods.
- Regularly check all connections and hardware to ensure they remain secure.

## TROUBLESHOOTING

If you encounter issues with your X Rocker Gaming Chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from chair speakers	<ul style="list-style-type: none"> <li>Chair not powered on.</li> <li>Volume too low.</li> <li>Audio cables not connected properly.</li> <li>Bluetooth not paired or out of range.</li> <li>Device audio output settings incorrect.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure power switch is ON.</li> <li>Increase volume on chair and connected device.</li> <li>Check all audio cable connections.</li> <li>Re-pair Bluetooth device; ensure it's within 10 meters.</li> <li>Verify device's audio output is set to the correct source.</li> </ul>
No vibration feedback	<ul style="list-style-type: none"> <li>Audio volume too low.</li> <li>Audio source lacks sufficient bass.</li> </ul>	<ul style="list-style-type: none"> <li>Increase chair and device volume.</li> <li>Adjust bass settings on your audio device if available.</li> </ul>
Chair feels unstable	<ul style="list-style-type: none"> <li>Loose assembly hardware.</li> <li>Chair on uneven surface.</li> </ul>	<ul style="list-style-type: none"> <li>Check and tighten all assembly screws.</li> <li>Place chair on a flat, stable surface.</li> </ul>

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

- Model Number:** 2020108
- Product Dimensions (L x W x H):** 71 x 55.5 x 94.5 cm (27.95 x 21.85 x 37.2 inches)
- Product Weight:** 15 kg (33 lbs)
- Maximum Load Capacity:** 100 kg (220 lbs)
- Audio System:** 2.1 (2 integrated speakers in headrest, 1 subwoofer in backrest)
- Connectivity:** Wired audio input, Wireless Bluetooth
- Surface Material:** Synthetic Leather
- Language:** Multilingual support (for physical manual)
- Spare Parts Availability:** Information unavailable



*Image: A diagram illustrating the key dimensions (length, width, height) of the X Rocker gaming chair.*

## WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official X Rocker website. If you require technical support, have questions about assembly, or need assistance with troubleshooting, please contact X Rocker customer service through their official channels. Keep your proof of purchase handy when contacting support.

© 2024 X Rocker. All rights reserved. Nintendo and Super Mario are trademarks of Nintendo.