

Gemmy 225113

Gemmy Disney Hanging Mickey Mouse as Bat Airblown Inflatable Instruction Manual

Model: 225113

PRODUCT OVERVIEW

The Gemmy Disney Hanging Mickey Mouse as Bat Airblown Inflatable is designed for both indoor and outdoor seasonal decoration. This inflatable features an internal low voltage fan for quick inflation and internal LED lights for nighttime display. It comes equipped with ropes and stakes for secure placement.

- Dimensions: Approximately 4.5 feet wide x 21 inches tall x 16 inches deep.
- Features: Internal low voltage fan, internal LED lights for night display, ropes, and stakes.
- Usage: Suitable for indoor or outdoor use.

SAFETY INFORMATION

Please read and understand all safety instructions before operating this product.

- Always keep the power cord away from heat sources and high traffic areas.
- Ensure the inflatable is securely anchored to prevent it from becoming a projectile in high winds.
- Do not operate in thunderstorms or lightning conditions.
- Keep away from open flames and other heat sources.
- Do not allow children to play with the product unsupervised.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable and all accessories (fan, stakes, tethers) from the packaging.
2. **Position:** Choose a flat, clear area for placement. For hanging, ensure a sturdy support structure like a roof or eaves.
3. **Inflate:** Plug the low voltage fan into a standard electrical outlet. The inflatable will begin to inflate automatically. Ensure the fan intake is clear of obstructions.
4. **Secure:** Once fully inflated, use the provided ropes and stakes to anchor the inflatable to the ground or secure it to your hanging point. For ground placement, insert stakes through the loops at the base of the inflatable and into the ground. For hanging, attach ropes to the designated loops and tie them securely to your chosen support.



Image: The Mickey Mouse as Bat inflatable hanging from a porch, demonstrating typical outdoor setup.

OPERATING INSTRUCTIONS

1. **Power On:** Connect the power adapter to the inflatable's fan and then plug it into a suitable electrical outlet. The fan will activate, and the inflatable will begin to inflate.
2. **Lighting:** The internal LED lights will illuminate automatically when the unit is powered on, providing a glowing display.
3. **Power Off:** To deflate the inflatable, simply unplug the power adapter from the electrical outlet. The fan will stop, and the inflatable will slowly deflate.

MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the unit is completely dry before storing.
- **Storage:** When not in use, deflate the inflatable completely. Fold it neatly and store it in its original packaging or a suitable storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the power cord, fan, and fabric for any signs of damage. Do not use the product if any part is damaged.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	Power not connected, fan obstructed, or fabric tear.	Check power connection. Ensure fan intake is clear. Inspect fabric for tears and repair if necessary.
Lights are not working.	Power issue or LED malfunction.	Ensure the unit is powered on. If lights still do not work, contact customer support.
Inflatable does not stand upright or sways excessively.	Insufficient anchoring or strong winds.	Ensure all ropes and stakes are securely fastened. Re-position in a less windy area if possible.

SPECIFICATIONS

- **Brand:** Gemmy
- **Model Number:** 225113
- **UPC:** 191245251132
- **Theme:** Halloween Disney
- **Character:** Mickey Mouse as Bat
- **Color:** Purple
- **Material:** Nylon
- **Dimensions (L x W x H):** 16 x 56 x 21 inches
- **Item Weight:** 15.2 ounces
- **Special Feature:** Lighted (Purple LED)



LENGTH

54"

LONGUER



HEIGHT

37"

HAUTEUR

**BLOW
UP**

**SOUFFLER
HAUT**

Image: The Mickey Mouse as Bat inflatable with its approximate length and height dimensions indicated.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For warranty details, technical support, or replacement parts, please contact Gemmy customer service directly. Refer to the product packaging for contact information or visit the official Gemmy website.