

[Manuals.plus](#) /

> [EasyKeys](#) /

> Tenssco C575 Replacement Key User Manual

## EasyKeys C575

# Tenssco C575 Replacement Key User Manual

Model: C575 | Brand: EasyKeys

## INTRODUCTION

---

This manual provides essential information for the proper use and care of your Tenssco C575 Replacement Keys. These keys are genuine Original Equipment Manufacturer (OEM) parts, designed for compatibility with Tenssco locking mechanisms requiring the C575 key code. Each purchase includes two keys.



Image: A single Tenssco C575 replacement key, made of brass, showing the engraved model number and "MADE IN U.S.A."

## SETUP

---

The Tennsco C575 replacement keys require no complex setup. They are ready for immediate use upon receipt.

- **Verification:** Before use, confirm that the key is stamped with "C575" to ensure it matches your lock's requirement.
- **Storage:** Keep the spare key in a secure, easily accessible location, separate from the primary key.

## OPERATING INSTRUCTIONS

---

Using the Tennsco C575 replacement key is straightforward:

1. **Insert Key:** Gently insert the key into the lock's keyway. Do not force the key.
2. **Turn Key:** Rotate the key clockwise or counter-clockwise, depending on the lock mechanism, to engage or disengage the lock.
3. **Remove Key:** Once the lock is operated, return the key to its original insertion position (usually vertical) before carefully withdrawing it.



Image: An example of various keys, illustrating the general form factor of a key.

## MAINTENANCE

---

Proper maintenance ensures the longevity and smooth operation of your keys:

- **Cleaning:** If the key becomes dirty, wipe it with a soft, dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Lubrication:** If the lock mechanism feels stiff, apply a small amount of graphite lubricant or a silicone-based spray specifically designed for locks into the keyway, not directly onto the key.
- **Avoid Bending:** Do not apply excessive force or attempt to bend the key, as this can damage it and render it unusable.
- **Storage:** Store keys in a dry environment to prevent corrosion.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Key does not insert fully.	Obstruction in keyway; incorrect key.	Check for debris in the lock. Ensure it is the correct C575 key. Do not force.

Problem	Possible Cause	Solution
Key turns but lock does not open/close.	Internal lock mechanism issue; worn key.	Try lubricating the lock. If issue persists, the lock mechanism may need professional attention.
Key is stiff or difficult to turn.	Lack of lubrication; minor misalignment.	Apply a small amount of lock lubricant into the keyway. Wiggle gently while turning.

## SPECIFICATIONS

---

**Model:** C575

**Brand:** EasyKeys

**Manufacturer:** Tenssco (Alternate: Wind Danbury Ct)

**Material:** Brass

**Quantity:** 2 Keys per pack

**Compatibility:** Designed for Tenssco locking mechanisms requiring C575 key code.

## WARRANTY AND SUPPORT

---

EasyKeys is committed to providing high-quality replacement keys. For any issues or inquiries regarding your Tenssco C575 Replacement Keys, please contact EasyKeys customer support.

- **Returns:** This product has a 30-day return policy for refund or replacement.
- **Contact Support:** For assistance, visit the [EasyKeys Store on Amazon](#) or refer to your purchase documentation for direct contact information.



Image: EasyKeys brand logo.



© 2024 EasyKeys. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.