

Poolcandy PC4000EU-MU

PoolCandy Splash Runner Motorized Pool Lounger Instruction Manual

Model: PC4000EU-MU

Brand: Poolcandy

1. INTRODUCTION

The PoolCandy Splash Runner Motorized Pool Lounger is designed to provide a unique and relaxing experience in the water. Featuring motorized propulsion, this lounger allows for effortless movement and maneuverability in pools or calm lake environments.

Key Features:

- Motorized pool lounger allows you to drive, spin & turn in the pool using dual 66-watt motors activated at the touch of a button.
- Newly designed propellers supply more torque for 20% increase in speed with superior maneuverability.
- Made with durable 0.35mm PVC material that holds up to 300 pounds.
- Assembles in minutes without tools.
- Fully enclosed propellers provide safety.
- Includes deluxe repair patch kit.

2. SAFETY INFORMATION

For safe operation of the PoolCandy Splash Runner, please adhere to the following guidelines:

- Youngsters should use the product under an adult's supervision.
- Do not use in rough waters or strong currents.
- Ensure all battery compartments are securely sealed before entering water.
- Do not exceed the maximum weight limit of 300 pounds.
- Keep hair, loose clothing, and other objects away from propellers during operation.

3. SETUP

Unboxing and Initial Inspection

Carefully remove all components from the packaging. Inspect the lounger and all parts for any signs of

damage. Ensure all listed components are present.

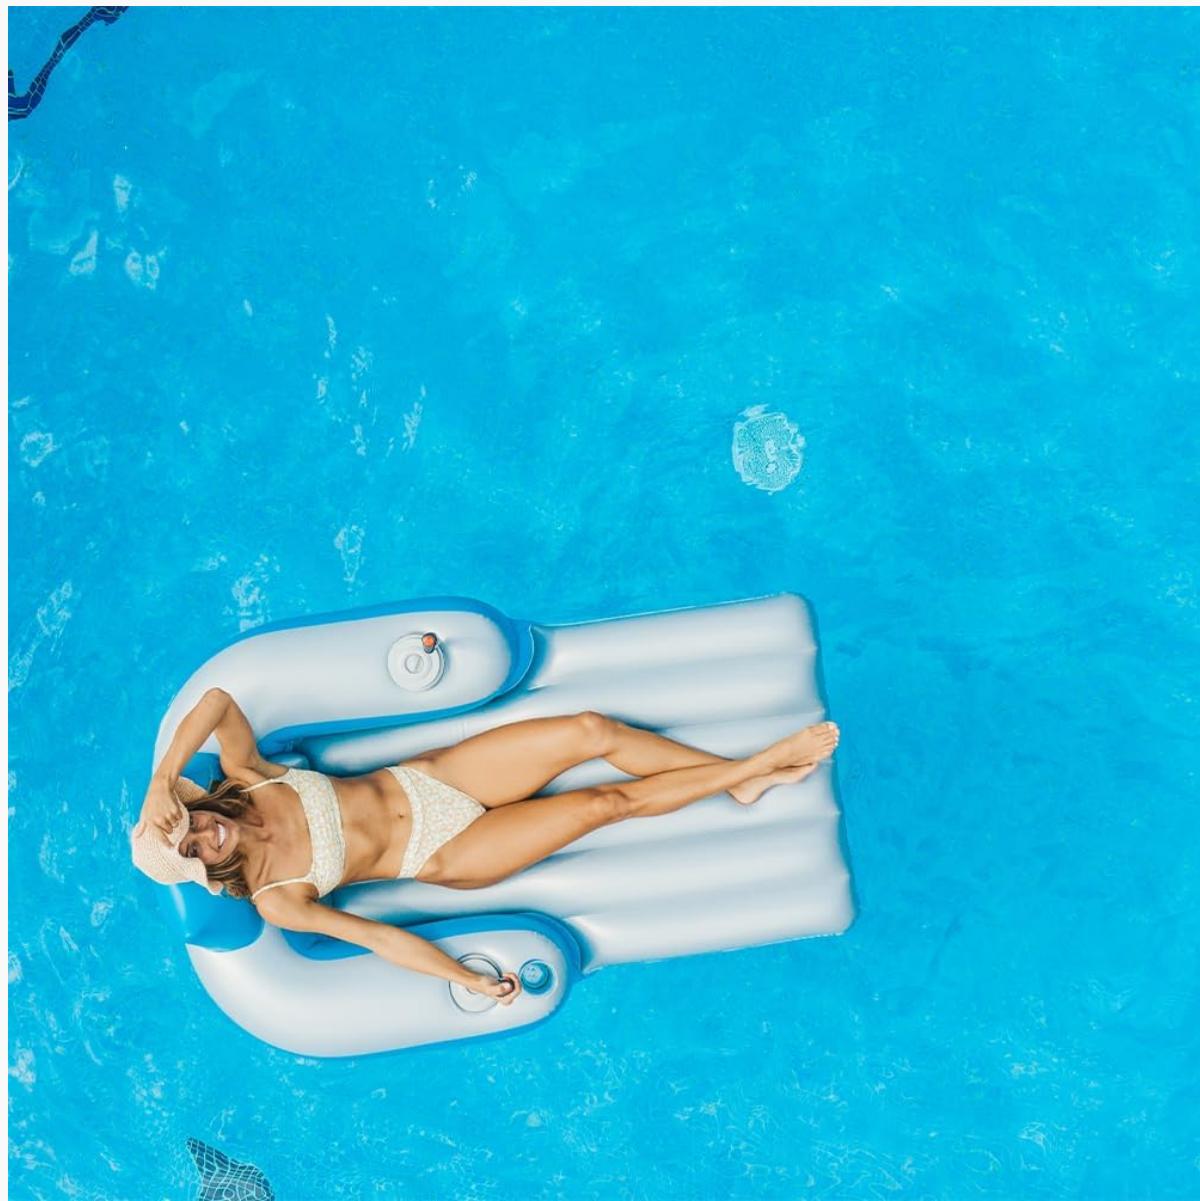


Image: Unboxed components of the Splash Runner.

Battery Installation

The Splash Runner requires 6 D-Cell batteries (not included). Locate the battery compartments on each motor unit. Insert 3 D-Cell batteries into each compartment, ensuring correct polarity. Securely close the battery compartment covers to ensure a watertight seal.



Image: Battery installation into the motor unit.

Inflation

Inflate the lounger using an air pump (not included). The lounger is made with durable 0.35mm PVC material. Ensure the lounger is fully inflated until firm, but do not over-inflate. Securely close all air valves.

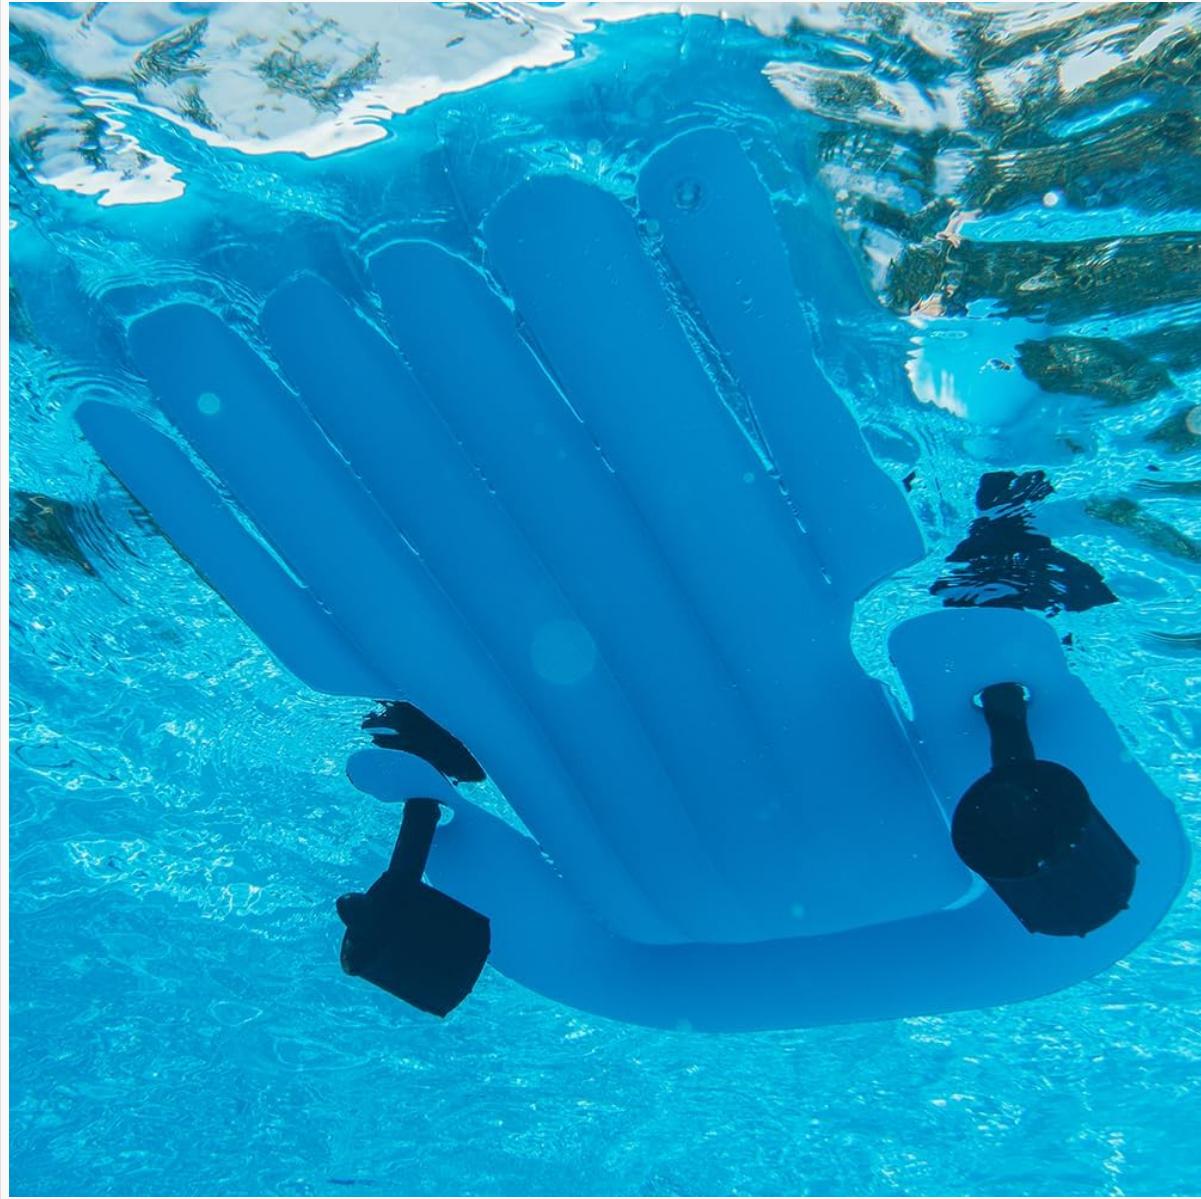


Image: Inflated lounger ready for use.

4. OPERATING INSTRUCTIONS

Controls

The Splash Runner features dual 66-watt motors, each controlled by an independent joystick located on the armrests. Push the joystick forward for forward motion, and pull backward for reverse. The red button on top of the joystick activates the motor.



Image: Detail of the control joysticks.

Movement and Maneuvering

To move forward, push both joysticks forward. To move backward, pull both joysticks backward. For 360-degree turns, push one joystick forward and pull the other backward. The newly designed propellers offer superior maneuverability and a 20% increase in speed.



Image: Operating the lounger in the pool.

Official Product Video

Your browser does not support the video tag.

Video: Demonstrates the setup and operation of the PoolCandy Splash Runner Motorized Pool Lounger, showcasing its features and ease of use in a pool environment.

5. MAINTENANCE

Cleaning and Storage

After each use, rinse the lounger with fresh water and allow it to air dry completely before deflating. Store the lounger in a cool, dry place away from direct sunlight and sharp objects. The durable PVC material allows for easy cleaning and compact storage.

Repair

A deluxe repair patch kit is included with your Splash Runner. In case of a small puncture, clean the affected area, apply the patch according to the kit instructions, and allow sufficient time for it to cure before re-inflating.

6. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------|---|--|
| Motor not operating | Low or dead batteries; Incorrect battery installation; Loose electrical connection. | Replace batteries; Ensure correct polarity; Check and secure all electrical connections. |
| Lounger deflating | Air valve not securely closed; Puncture in PVC material. | Ensure all air valves are tightly sealed; Locate puncture and use the included repair patch kit. |
| Reduced speed or power | Low batteries; Obstruction in propellers. | Replace batteries; Check propellers for any debris and safely remove. |

7. SPECIFICATIONS

| Feature | Detail |
|---------------------|---|
| Dimensions (L x W) | 66 inches x 43 inches (167.6 cm x 109.2 cm) |
| Item Weight | 14 Pounds (6.35 kg) |
| Material | 0.35mm PVC |
| Weight Limit | 300 Pounds (136 kg) |
| Motor Power | Dual 66-watt motors |
| Battery Requirement | 6 D-Cell batteries (not included) |
| Age Range | Teen, Adult |

8. WARRANTY AND SUPPORT

Warranty Information

Dive into worry-free poolside bliss with the Splash Runner Motorized Pool Lounger with a worry-free one-year warranty, delivering unrivaled confidence in your purchase by B&D Group.

Customer Support

For any questions, concerns, or warranty claims, please contact Poolcandy customer support through their official website or the retailer where the product was purchased. Please have your model number and purchase date available for faster service.