

[Manuals.plus](#) /

> [eKids](#) /

> eKids Super Mario Walkie Talkies Instruction Manual (Model MO-207.FXV0)

eKids MO-207.FXV0

eKids Super Mario Walkie Talkies Instruction Manual

Model: MO-207.FXV0

1. PRODUCT OVERVIEW

The eKids Super Mario Walkie Talkies provide two-way radio communication for children, featuring designs inspired by Mario and Luigi. These devices are designed for ease of use and portability, suitable for both indoor and outdoor play.



Image: Front view of the eKids Super Mario and Luigi Walkie Talkies.

2. PACKAGE CONTENTS

Your eKids Super Mario Walkie Talkies package includes:

- 2 x Walkie Talkie Radios (Mario and Luigi themed)
- Wrist Straps (attached)
- Belt Clips (attached)
- 4 x AAA Batteries (included for initial use)



Image: Rear view of an eKids Super Mario Walkie Talkie, highlighting the integrated belt clip and wrist strap for portability.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of each walkie talkie.
2. Using a small Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 x AAA batteries into each walkie talkie, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Note: 4 x AAA batteries are required in total (2 per walkie talkie). Batteries are included for initial use.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Locate the Power switch, typically on the back or side of the unit. Slide the switch to the 'ON' position to power on the walkie talkie. Slide to 'OFF' when not in use to conserve battery life.

4.2 Communication (Push-to-Talk)

1. Ensure both walkie talkies are powered on.
2. To speak, press and hold the large 'Push-to-Talk' (PTT) button, usually located on the side of the unit.
3. Speak clearly into the microphone.
4. Release the PTT button to listen for a response. Only one person can speak at a time.

4.3 Range and Performance

These walkie talkies offer an extended range of up to 500 feet under ideal conditions. Performance may vary based on terrain, weather, electromagnetic interference, and obstructions. The devices are designed for static-free communication.



Image: A child using an eKids Super Mario Walkie Talkie, illustrating its extended range and static-free features.

Video: A demonstration of the eKids Super Mario Bros Walkie Talkies in use, showcasing their features and functionality.

5. MAINTENANCE

5.1 Cleaning

Wipe the walkie talkies with a soft, dry cloth. Do not use abrasive cleaners or immerse the units in water.

5.2 Battery Care

Always turn off the walkie talkies when not in use. If the devices will not be used for an extended period, remove the batteries to prevent leakage and damage.

5.3 Storage

Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

6.1 No Power

- Ensure the Power switch is in the 'ON' position.
- Check if the batteries are correctly installed with the proper polarity.
- Replace with fresh AAA batteries if current batteries are depleted.

6.2 Poor Sound Quality or Range

- Ensure both walkie talkies are within the effective range (up to 500 feet under ideal conditions).
- Reduce obstructions between the two units (e.g., walls, large structures).
- Check battery levels; low batteries can affect performance.
- Ensure the PTT button is fully pressed when speaking and fully released when listening.

7. SPECIFICATIONS

Feature	Detail
Model Number	MO-207.FXV0
Item Weight	8.1 ounces
Product Dimensions	2.93 x 1.68 x 5.45 inches
Batteries Required	4 x AAA batteries (2 per unit)
Number of Channels	1
Talking Range Maximum	750 Feet (under ideal conditions)
Water Resistance Level	Not Water Resistant
Included Components	2 walkie talkie radios



**FITS PERFECTLY IN
KIDS HANDS**



**DON'T FORGET
THE BATTERIES!**



4 x "AAA" BATTERIES
INCLUDED



Image: Detailed dimensions of the eKids Super Mario Walkie Talkies.

8. WARRANTY INFORMATION

This product comes with a **1-year limited warranty**. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the product packaging or contact customer support.

9. SUPPORT

For further assistance, troubleshooting, or to inquire about warranty services, please visit the eKids official website or contact their customer support directly. Contact information can typically be found on the product packaging or their official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08FRS2SV7>

More documents and user manuals: <https://manuals.plus/>