

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio MWD100H Series Digital Watch User Manual](#)

Casio MWD-100H-2AVCF

Casio MWD100H Series Digital Watch User Manual

Model: MWD-100H-2AVCF

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Casio MWD100H Series Digital Watch. Designed for durability and functionality, this watch features a 10-year battery life, 100-meter water resistance, and multiple useful functions including a stopwatch, countdown timer, LED light, multi-function alarm, auto calendar, and dual time. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.



Front view of the Casio MWD100H Series Digital Watch, showcasing its digital display and button layout.

KEY FEATURES

- **10-Year Battery Life:** Enjoy extended use without frequent battery changes.
- **100-Meter Water Resistance:** Suitable for swimming and snorkeling, but not diving.
- **LED Light:** Illuminates the display for easy reading in low light conditions.
- **1/100 Second Stopwatch:** Precise time measurement for various activities.
- **Countdown Timer:** Set a timer for specific durations.
- **Multi-Function Alarm:** Multiple alarms with customizable settings.
- **Auto Calendar:** Automatically adjusts for different month lengths and leap years.
- **Dual Time:** Display time in two different time zones simultaneously.

- **Module 3487:** Refers to the internal module number for this watch series.



Extended Battery Life



Water Resistant



Stopwatch Function



LED Illumination

SETUP

Initial Setup and Time Setting

1. **Unboxing:** Carefully remove the watch from its packaging. Ensure all protective films are removed from the watch face and case back.
2. **Adjusting the Band:** The resin band can be adjusted to fit your wrist comfortably. Use the buckle to secure the watch.



The Casio MWD100H Series Digital Watch worn on a wrist, demonstrating its size and fit.

3. Setting Time and Date:

- In Timekeeping Mode, press and hold the **ADJUST** button until the seconds start flashing.
- Press the **MODE** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
- Use the **START/STOP** button to increase the flashing value, or the **LIGHT** button to decrease it (where applicable).
- Once all settings are correct, press the **ADJUST** button to exit the setting mode.

OPERATING INSTRUCTIONS

Mode Navigation

Press the **MODE** button to cycle through the watch's different modes:

- Timekeeping Mode (current time, date)
- Stopwatch Mode
- Countdown Timer Mode
- Alarm Mode
- Dual Time Mode

Using the Stopwatch

In Stopwatch Mode:

- Press **START/STOP** to start/stop the stopwatch.
- Press **ADJUST** to reset the stopwatch to zero.

Using the Countdown Timer

In Countdown Timer Mode:

- Press and hold **ADJUST** to enter setting mode.
- Use **MODE** to select hours, minutes, or seconds.
- Use **START/STOP** to increase the value.
- Press **ADJUST** to exit setting mode.
- Press **START/STOP** to start/stop the countdown.

Setting Alarms

In Alarm Mode:

- Press **MODE** to select the desired alarm (AL1, AL2, etc.).
- Press and hold **ADJUST** to enter alarm time setting mode.
- Use **MODE** to select hours or minutes.
- Use **START/STOP** to increase the value.
- Press **ADJUST** to exit setting mode.
- Press **START/STOP** to toggle the alarm ON/OFF.

Using the LED Light

Press the **LIGHT** button to illuminate the display. The illumination duration is preset.

Product Video Overview

Your browser does not support the video tag.

Official product video showcasing the features and design of the Casio MWD100H Series Digital Watch.

MAINTENANCE

Water Resistance

The watch is water resistant up to 100 meters. This means it is suitable for everyday use, swimming, and snorkeling. Do not operate buttons while the watch is wet or submerged. Avoid exposing the watch to hot water or steam, as this can

compromise the water resistance.

Battery Life

The watch is equipped with a 10-year battery. When the display becomes dim or functions become erratic, it may indicate a low battery. Battery replacement should be performed by a qualified technician to maintain water resistance.

Cleaning and Care

- Wipe the watch with a soft, dry cloth to remove dirt and moisture.
- For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry.
- Avoid using volatile agents like thinner, gasoline, alcohol, or chemical sprays, as they may damage the resin components.
- Store the watch in a dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery. Contact a qualified service center.
Time is incorrect.	Time settings are incorrect.	Refer to the "Setting Time and Date" section to adjust the time.
Buttons are unresponsive.	Watch may be wet or in a locked mode.	Ensure the watch is dry. If still unresponsive, a reset may be required (refer to advanced manual or contact support).
Water inside the display.	Compromised water resistance.	Stop using the watch immediately and take it to a qualified service center for inspection and repair.

SPECIFICATIONS

- **Model Number:** MWD-100H-2AVCF
- **Module:** 3487
- **Case Material:** Resin
- **Band Material:** Resin
- **Water Resistance:** 100 Meters (330 Feet)
- **Battery Life:** Approximately 10 years
- **Functions:** 1/100-second stopwatch, countdown timer, multi-function alarms, dual time, auto calendar, LED backlight.
- **Dimensions:** 4.37 x 3.31 x 2.83 inches (Package Dimensions)
- **Weight:** 5.61 ounces (Package Weight)

WARRANTY AND SUPPORT

Casio watches are manufactured to high standards and come with a limited warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Casio website. For technical support, repairs, or replacement parts, please contact Casio customer service or an authorized service center.

Official Casio Website: www.casio.com



The official Casio brand logo, representing quality and innovation.

© 2025 Casio. All rights reserved. Information in this manual is subject to change without notice.