

[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Party Tent 4x9m Blue Instruction Manual

vidaXL 48505

vidaXL Party Tent 4x9m Blue Instruction Manual

Model: 48505

INTRODUCTION

This manual provides essential instructions for the assembly, operation, maintenance, and safety of your vidaXL Party Tent (Model 48505, 4x9m Blue). Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product.

The vidaXL Party Tent is designed to provide a sheltered space for outdoor parties and gatherings. It features a UV and water-resistant polyethylene (PE) cover and a sturdy iron frame, ensuring stability and durability for outdoor use.



Image: The vidaXL Party Tent (4x9m, blue) fully assembled, providing a large sheltered area.

SAFETY INFORMATION

- **Waterproof Treatment:** This tent must be treated with a waterproof spray if it is exposed to heavy rain. This is crucial for maintaining its water-resistant properties.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent material degradation.
- **Assembly:** Always follow the assembly instructions carefully and ensure the tent is properly secured before

use. Improper assembly can lead to instability and potential hazards.

- **Cleaning and Storage:** Keep the tent clean and dry to preserve its water and UV resistance.
- **Intended Use:** This product is **not suitable** for use as a carport or permanent structure. It is intended for temporary outdoor events.
- **Weather Conditions:** Do not use the tent in strong winds, heavy rain, or snow. Disassemble and store the tent during adverse weather conditions to prevent damage or injury.

Failure to follow these safety guidelines may result in product damage, personal injury, or voiding of the warranty.

SETUP INSTRUCTIONS

Assembly of the vidaXL Party Tent is required. It is recommended that at least two adults perform the assembly. Ensure you have all components before starting.

Components Checklist:

Before beginning, verify that all parts are present. Refer to the included assembly diagram for specific part identification.

1. Iron frame poles (various lengths)
2. Connectors (plastic or metal)
3. PE cover/canopy
4. Ropes and stakes for securing
5. Assembly materials (e.g., screws, clips if applicable)

Assembly Steps:

1. **Unpack and Organize:** Carefully unpack all components and lay them out on a clean, flat surface. Group similar parts together.
2. **Assemble the Roof Frame:** Begin by connecting the shorter iron poles with the appropriate connectors to form the rectangular sections of the roof. Pay attention to the orientation of the connectors.



Image: Detail of a frame corner connection, showing how poles fit into the connector.

3. **Attach Legs:** Once the roof frame is partially assembled, attach the longer iron poles (legs) to the corner and intermediate connectors. Ensure all connections are secure.



Image: A tent leg with multiple holes, likely for height adjustment or securing the canopy.

4. **Raise the Frame:** With assistance, carefully lift the assembled frame into an upright position.
5. **Install the Canopy:** Drape the PE cover over the assembled frame. Ensure it is centered and evenly distributed. Secure the canopy to the frame using any provided ties, straps, or clips.
6. **Secure the Tent:** Use the provided ropes and stakes to firmly anchor the tent to the ground. This is critical for stability, especially in light winds. Ensure all anchor points are taut.
7. **Final Check:** Double-check all connections, frame stability, and canopy tension before use.

For detailed visual guidance, refer to the assembly diagram included in your packaging.

OPERATING INSTRUCTIONS

The vidaXL Party Tent is designed for temporary outdoor use to provide shade and shelter during events.

- **Usage Environment:** Use the tent on a flat, stable surface. Avoid sloped or uneven ground.
- **Weather Monitoring:** Continuously monitor weather conditions. In case of strong winds, heavy rain, or snow, the tent must be disassembled and stored to prevent damage.
- **Ventilation:** Ensure adequate ventilation, especially if using heating or cooking equipment nearby (though not recommended inside the tent).
- **Entry/Exit:** Use designated entry and exit points. Avoid leaning on the frame or canopy.

MAINTENANCE

- **Cleaning:** Clean the PE cover with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material's UV and water-resistant coating. Rinse thoroughly and allow to air dry completely before storage.
- **Waterproof Treatment:** As mentioned in the safety section, regularly treat the canopy with a suitable waterproof spray, especially if the tent is frequently exposed to rain. This will help maintain its water-repellent properties.
- **Frame Inspection:** Periodically inspect the iron frame for any signs of rust, bending, or damage. Replace any damaged parts immediately.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the canopy is completely dry before folding and storing to prevent mold and mildew.
- **Component Check:** Before each assembly, check all poles, connectors, and the canopy for wear and tear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable or wobbly.	Improper assembly; insufficient anchoring; uneven ground; strong winds.	Ensure all frame connections are secure. Verify ropes and stakes are firmly anchored and taut. Move to a flat surface. Disassemble in strong winds.
Water leakage through the canopy.	Canopy not properly treated with waterproof spray; damage to canopy material; heavy rain exceeding material's resistance.	Apply a waterproof spray to the canopy. Inspect for tears or holes and repair if possible. Disassemble in heavy rain.
Difficulty fitting canopy onto frame.	Frame not fully extended or correctly assembled; canopy misaligned.	Double-check frame assembly against the diagram. Ensure the canopy is centered and stretched evenly over the frame.
Poles do not connect properly.	Incorrect pole or connector used; debris in connection points; bent pole.	Refer to the assembly diagram to ensure correct parts are used. Clear any debris. Inspect poles for damage and replace if bent.

SPECIFICATIONS

Brand: vidaXL

Model: 48505

Color: Blue

Material: PE (Polyethylene) canopy, Iron frame

Dimensions (L x W x H): 9 x 4 x 2.7 m (29.5 x 13.1 x 8.9 ft)

Entrance Height from Ground: 2 m (6.6 ft)

Floor Area: 36 square meters

Item Weight: 15.56 Kilograms

UV Protection: Yes

Water Resistance Level: Water-resistant (requires additional treatment for heavy rain)

Assembly Required: Yes

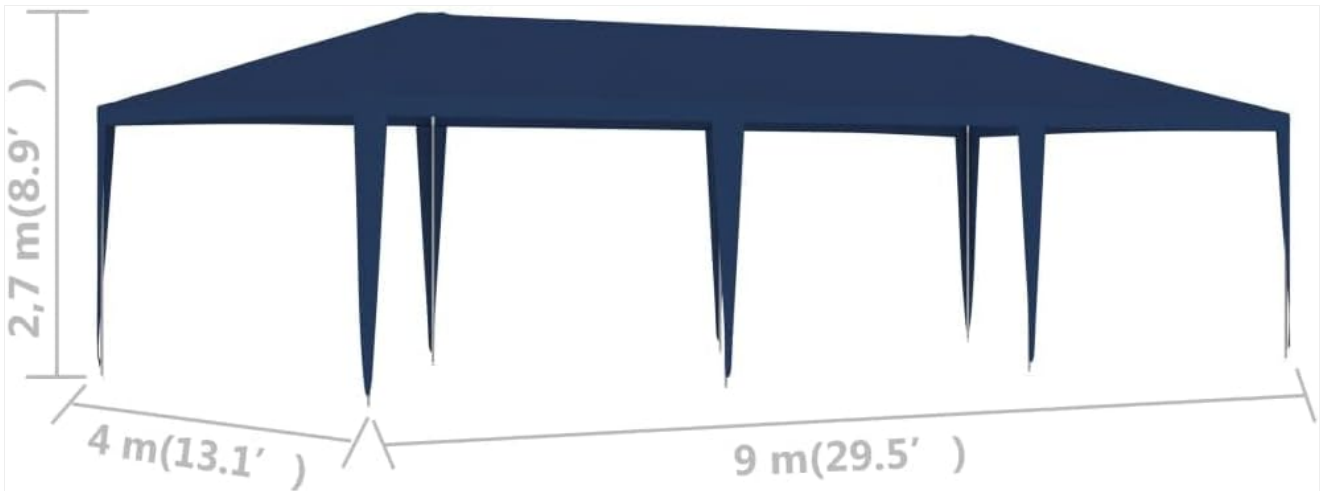


Image: A diagram illustrating the dimensions of the party tent: 9m length, 4m width, and 2.7m height.

WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation provided with your purchase or visit the official vidaXL website. Specific warranty terms may vary by region and retailer.

For direct assistance, please contact vidaXL customer service through their official channels. Keep your purchase receipt and model number (48505) handy when contacting support.

You can find more information about vidaXL products and support at: [vidaXL Store on Amazon](#)