

HADEN CORECOFFEE

HADEN 12-Cup Programmable Drip Coffee Maker Instruction Manual

Model: CORECOFFEE | Brand: HADEN

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your HADEN 12-Cup Programmable Drip Coffee Maker. Designed with a blend of classic style and modern engineering, this appliance offers convenience and quality for your daily coffee brewing needs. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

PRODUCT OVERVIEW

Familiarize yourself with the components of your HADEN 12-Cup Programmable Drip Coffee Maker.



Overall view of the HADEN 12-Cup Programmable Drip Coffee Maker in Putty color, showcasing its sleek design and control panel.

HADEN
ESTD. ENGLAND 1958



Pause dispensing with the 30-second anti-drip function.



Keep-warm function for extended periods, ensuring it stays fresh and hot.



Removable filter for convenient cleaning and maintenance.



Convenient programmable clock and delay-brew allows you to schedule brewing time in advance.

Key features highlighted: 12-cup capacity, customizable brew strength, non-slip rubberized feet for stability, and auto shut-off after 120 minutes for safety.

HADEN
ESTD. ENGLAND 1958



Product dimensions: 14 inches (H), 9.5 inches (W), 7.5 inches (D), providing a compact footprint for countertops.



The removable glass carafe, designed for easy pouring and cleaning.



Clear water level indicator on the side of the unit, showing markings up to 12 cups for precise filling.



Detailed view of the control panel, featuring intuitive buttons for various functions including On/Off, Strength, Delay Brew, Program, Hour, and Minute settings.

SETUP

Before First Use

1. Unpack the coffee maker and remove all packaging materials.
2. Wash the carafe, lid, and reusable filter in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. For the first use, fill the water reservoir to the 12-cup mark with clean water. Do not add coffee grounds. Run a full brewing cycle to clean the internal components. Discard the water. Repeat this process once more.

Setting the Clock

1. Plug the coffee maker into a standard electrical outlet. The display will flash "12:00".
2. Press the **HOUR** button to set the hour. The time will advance. Note the small dot on the display for PM indication.
3. Press the **MINUTE** button to set the minutes.
4. Once the desired time is set, stop pressing the buttons. The clock will set automatically after a few seconds.

OPERATING INSTRUCTIONS

Brewing Coffee

1. Open the top lid of the coffee maker.
2. Fill the water reservoir with fresh, cold water to the desired number of cups, using the water level indicator on the side. Do not exceed the "MAX 12" line.
3. Place the reusable filter into the filter basket.
4. Add the desired amount of ground coffee to the reusable filter. A general guideline is one level tablespoon of coffee grounds per cup, but adjust to your personal taste.
5. Close the top lid securely.
6. Ensure the glass carafe with its lid is properly placed on the warming plate.
7. Press the **ON/OFF** button to start brewing. The indicator light will illuminate.

8. The coffee maker features a 30-second anti-drip function, allowing you to briefly remove the carafe to pour a cup before brewing is complete. Return the carafe within 30 seconds to prevent overflow.
9. Once brewing is complete, the coffee maker will automatically switch to the "keep warm" function. The appliance will automatically shut off after 120 minutes.

Setting Brew Strength

- Before pressing the **ON/OFF** button, press the **STRENGTH** button.
- Each press will cycle through available strength options (e.g., Regular, Strong). Select your preferred strength.
- Proceed with pressing **ON/OFF** to start brewing with the selected strength.

Using the Delay Brew Function

The Delay Brew function allows you to program the coffee maker to start brewing at a specific time.

1. Prepare the coffee maker for brewing as described in "Brewing Coffee" (water, grounds, filter, carafe in place).
2. Press the **PROGRAM** button. The display will flash the current time.
3. Use the **HOUR** and **MINUTE** buttons to set the desired delayed brew time.
4. After setting the time, press the **PROGRAM** button again to confirm. The indicator light for Delay Brew will illuminate.
5. The coffee maker will now automatically start brewing at the programmed time.

MAINTENANCE

Daily Cleaning

1. Always unplug the coffee maker before cleaning and allow it to cool completely.
2. Remove the reusable filter and discard used coffee grounds. Wash the reusable filter, filter basket, and carafe in warm, soapy water. These parts are also top-rack dishwasher safe.
3. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. Wipe the warming plate with a clean, damp cloth. Do not use abrasive materials.

Descaling (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker and affect its performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Mix 4 cups of white vinegar with 8 cups of cold water in the carafe.
2. Pour the mixture into the water reservoir.
3. Place the empty reusable filter and carafe back into position.
4. Press the **ON/OFF** button to start a brewing cycle.
5. After about 1 minute, turn the coffee maker off. Let the mixture soak for at least 30 minutes to an hour.
6. Turn the coffee maker back on to complete the brewing cycle.
7. Discard the vinegar solution.
8. Fill the water reservoir with fresh, cold water and run two full brewing cycles with only water to rinse out any remaining vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Coffee does not brew.	Not plugged in; Power outage; Water reservoir empty; Carafe not in place.	Ensure unit is plugged in; Check power supply; Fill water reservoir; Ensure carafe is correctly positioned.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio; Brew strength setting.	Adjust coffee grounds amount; Select desired brew strength (Regular/Strong).
Coffee overflows from filter basket.	Too much coffee grounds; Filter not seated correctly; Clogged filter; Carafe removed for too long.	Reduce coffee grounds; Ensure filter is properly seated; Clean reusable filter; Return carafe within 30 seconds.
Brewing takes too long.	Mineral buildup in the coffee maker.	Perform descaling procedure as outlined in the Maintenance section.
Coffee tastes bad.	Old coffee grounds; Unclean coffee maker; Poor water quality.	Use fresh coffee grounds; Clean coffee maker regularly; Use filtered water.

SPECIFICATIONS

Feature	Detail
Brand	HADEN
Model Name	HADEN 12-Cup Countertop Coffee Machine for Home with Glass Coffee Carafe
Model Number	CORECOFFEE
Color	Putty
Product Dimensions	9"D x 7.25"W x 13.5"H
Item Weight	3.8 pounds
Special Feature	Auto Shut-Off
Coffee Maker Type	Drip Coffee Machine
Filter Type	Reusable
Style	Retro
Operation Mode	Fully Automatic
Included Components	Filter, Carafe
Manufacturer	Haden
UPC	017342750289
Date First Available	August 12, 2020

WARRANTY & SUPPORT

For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official HADEN website. For customer support, troubleshooting assistance, or to inquire about replacement parts, please contact HADEN customer service.

You can also visit the official HADEN Store for more information and product registration [HADEN Official Store](#)

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller are available for embedding in this manual. Please refer to the product page for any user-generated content or additional media.



© 2025 HADEN. All rights reserved.