



Manuals.plus /

- › ReplacementScrews /
- › ReplacementScrews Stand/Legs Screw Set for ONN 100005842 Televisions

## ReplacementScrews RSAZN536868

# Instruction Manual: ReplacementScrews Stand/Legs Screw Set

Compatible with ONN 100005842 Televisions

## 1. INTRODUCTION

---

This manual provides detailed instructions for the installation and care of your ReplacementScrews Stand/Legs Screw Set, model RSAZN536868. This screw set is specifically designed to secure the original factory stand or legs to your ONN 100005842 television. Please read all instructions carefully before proceeding with installation.

## 2. COMPATIBILITY

---

This screw set is compatible exclusively with the **ONN 100005842** television model. It is crucial to verify the model number located on the back label of your television to ensure proper fit and function. These screws are intended for use with the original factory stand/legs only and are not suitable for universal stands or wall mounting applications, which typically require different screw types and sizes.

## 3. PACKAGE CONTENTS

---

Your package should contain the following items:

- Four (4) Black Self-Tapping Screws



Image 3.1: Overview of the four black self-tapping screws included in the set.

## 4. INSTALLATION INSTRUCTIONS

---

Follow these steps to securely attach the stand/legs to your ONN 100005842 television:

1. **Prepare the TV:** Carefully place your television screen-down on a soft, clean, and stable surface (e.g., a blanket on a table) to prevent scratches or damage. Ensure the surface is large enough to support the TV safely.
2. **Identify TV Model:** Locate the model number on the back label of your television. Confirm it is **ONN 100005842**.
3. **Position the Stand/Legs:** Align the original factory stand or legs with the designated mounting holes on the bottom or back of the television. Ensure the stand is oriented correctly according to your TV's original manual.
4. **Insert Screws:** Take one of the provided black self-tapping screws. Insert it into a mounting hole, passing through the stand/leg and into the television's screw receiver.
5. **Tighten Screws:** Using a Phillips head screwdriver, gently turn the screw clockwise to tighten it. The

coarse self-tapping threads are designed to create a secure fit in plastic holes or receivers with minimal torque. Avoid overtightening, as this can strip the threads or damage the TV casing.

6. **Repeat for Remaining Screws:** Repeat steps 4 and 5 for all remaining screws and stand/leg attachment points. Ensure all four screws are securely fastened.
7. **Verify Stability:** Once all screws are installed, carefully lift the television and place it upright on a flat, stable surface. Gently test the stability of the stand to ensure it is firm and secure before use.





Image 4.1: Detailed views of a single screw, showing the pan head and the self-tapping thread design.

**Important Note:**

- These screws are specifically designed for the original factory stand/legs of the ONN 100005842 TV. Do not use them for wall mounts or other universal stands.
- The black oxide plating provides corrosion resistance and matches the original aesthetic.
- Always use appropriate tools and avoid excessive force to prevent damage to the screws or your television.

## 5. PRODUCT SPECIFICATIONS

---

Feature	Detail
Item Model Number	RSAZN536868
Product Dimensions	6.5 x 3.75 x 0.5 inches (packaging); 0.2 ounces (total weight)
Material	Carbon Steel
Head Style	Pan Head
Exterior Finish	Black Oxide
Thread Type	Self-Tapping (Coarse)
Quantity	4 Screws per set

## 6. TROUBLESHOOTING

---

- **Screws do not fit or are too small/large:**

Ensure your television model is precisely ONN 100005842. These screws are designed for this specific model's original factory stand. If your TV is a different model, these screws may not be compatible. Verify the model number on the back of your TV.

- **Screws are stripping:**

Avoid overtightening. The screws are self-tapping and require minimal torque to secure. If a screw head is stripping, stop immediately and ensure you are using the correct size Phillips head screwdriver.

- **Stand feels unstable after installation:**

Double-check that all four screws are fully inserted and tightened. Ensure the stand/legs are correctly aligned with the TV's mounting points. If the issue persists, re-examine the TV's original stand for any damage or misalignment.

## 7. CARE AND MAINTENANCE

---

These screws are designed for durability. To maintain their condition and ensure long-term performance:

- Keep screws dry and away from corrosive substances.
- If removed, store them in a dry, secure place to prevent loss or damage.
- Periodically check the tightness of the screws to ensure the TV stand remains secure.

## 8. SUPPORT INFORMATION

---

For further assistance or inquiries regarding your ReplacementScrews product, please refer to the seller's contact information on the platform where the purchase was made. Ensure you have your product model number (RSAZN536868) and your television's model number (ONN 100005842) available when contacting support.

