



[Manuals.plus](#) /

- › [Simba](#) /
- › Simba 105893453 Chichi Love Little Cat Interactive Plush Toy User Manual

Simba 105893453

**Simba 105893453 Chichi Love Little Cat Interactive Plush Toy
User Manual**

Model: 105893453

INTRODUCTION

Welcome to the user manual for your Simba Chichi Love Little Cat. This interactive plush toy is designed to provide engaging play with its ability to run, wiggle its tail, and make sounds. Please read this manual carefully to ensure proper setup, operation, and maintenance of your toy.



Image: The Simba Chichi Love Little Cat, a grey and white plush toy, demonstrating its tail-wiggling action.

SAFETY INFORMATION

This product is suitable for children aged 3 years and older. Adult supervision is recommended during play.

- **Battery Safety:** Use only the specified battery type (2 x AA). Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity (+/-). Remove exhausted batteries promptly. Do not recharge non-rechargeable batteries. Remove batteries if the toy will not be used for an extended period.
- **Choking Hazard:** This toy contains small parts (batteries). Keep away from very young children who may put objects in their mouths.
- **General Use:** Do not immerse the toy in water. Keep away from heat sources.

PACKAGE CONTENTS

The package includes the following items:

- 1 x Simba Chichi Love Little Cat Plush Toy
- 2 x AA Batteries (pre-installed or included separately)

SETUP: BATTERY INSTALLATION

Your Chichi Love Little Cat requires 2 AA batteries for operation. These batteries are typically included.

1. Locate the battery compartment on the underside of the plush toy.
2. Using a small screwdriver (not included), carefully open the battery compartment cover.
3. Insert 2 AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.



Image: The interactive features of the Chichi Love Little Cat, including tail movement and sound production.

OPERATING INSTRUCTIONS

The Chichi Love Little Cat is designed for simple, interactive play.

Activating the Toy

- Locate the ON/OFF switch, usually near the battery compartment or on the toy's body.
- Slide the switch to the "ON" position to activate the toy.

Functions

Once activated, the Little Cat will perform the following actions:

- **Running:** The cat can move forward on its own.
- **Tail Wiggling:** The tail will move from side to side as it runs.
- **Sounds:** The cat will emit various cat-like sounds during operation.

The toy is capable of running at two different speeds. The speed may change automatically or be activated by interaction.



Image: The Chichi Love Little Cat showcasing its ability to run at varying speeds.

MAINTENANCE

Cleaning

To clean your Chichi Love Little Cat:

- Ensure the toy is switched "OFF" and batteries are removed before cleaning.
- Wipe the surface gently with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Do not submerge the toy in water, as this can damage the electronic components.
- Allow the toy to air dry completely before reinserting batteries or resuming play.

Storage

When storing the toy for extended periods, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not turn on or operate.	Batteries are inserted incorrectly.	Check battery polarity and reinsert correctly.
	Batteries are exhausted.	Replace with new AA batteries.
	ON/OFF switch is in the "OFF" position.	Slide the ON/OFF switch to "ON".
Toy moves slowly or sounds are weak.	Batteries are low.	Replace with new AA batteries.
Toy stops moving unexpectedly.	Obstruction or low battery.	Check for any obstructions blocking movement. Replace batteries if necessary.

SPECIFICATIONS

Model Name	Chi Chi Love Little Cat / runs and wiggles its tail / with sounds
Model Number	105893453
Brand	Simba
Toy Figure Type	Stuffed Toy
Animal Theme	Cat
Color	White, Grey
Outer Material	Plush
Inner Material	Polyester
Power Source	Battery
Battery Type	2 x AA (included)
Operation Mode	Automatic
Item Dimensions (L x W x H)	6.89" x 3.94" x 6.69" (17.5 cm x 10 cm x 17 cm)
Item Weight	248 Grams
Recommended Age	36 Months (3 years) and up

WARRANTY AND SUPPORT

Manufacturer's Warranty

This Simba Chichi Love Little Cat comes with a **2-Year Manufacturer Guarantee**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For any questions, concerns, or warranty claims regarding your product, please contact Simba customer support. Refer to the packaging or the official Simba website for the most current contact information.

