Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Westinghouse /
- > Westinghouse WKGL2456 220V Family Size Electric Griddle Instruction Manual

Westinghouse WKGL2456

Westinghouse WKGL2456 220V Family Size Electric Griddle Instruction Manual

Model: WKGL2456
Brand: Westinghouse

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation and maintenance of your Westinghouse WKGL2456 220V Family Size Electric Griddle. Please read all instructions carefully before first use and retain for future reference.

IMPORTANT: This appliance is designed for use in 220V/240V countries only and is NOT FOR USE IN NORTH AMERICA (USA, CANADA).



Image: The Westinghouse WKGL2456 Electric Griddle, shown with its packaging, highlighting its large cooking surface and 220V compatibility.

SAFETY INFORMATION

- Always ensure the griddle is placed on a stable, heat-resistant surface.
- Do not immerse the temperature control probe or electrical cord in water or other liquids.
- · Keep out of reach of children.
- Always unplug the appliance from the power outlet when not in use and before cleaning.
- Allow the griddle to cool completely before cleaning or storing.
- Do not operate the appliance with a damaged cord or plug.
- Use only with the provided temperature control unit.
- The griddle surface becomes hot during operation. Use oven mitts or heat-resistant gloves when handling.

SETUP

- 1. Unpacking: Carefully remove all packaging materials and inspect the griddle for any damage.
- 2. **Initial Cleaning:** Before first use, wipe the cooking surface with a damp cloth and mild detergent. Rinse thoroughly and dry completely.
- 3. Attach Temperature Control: Insert the detachable temperature control probe firmly into the

receptacle on the side of the griddle. Ensure it is fully seated.

4. **Placement:** Place the griddle on a flat, stable, heat-resistant surface away from walls or cabinets that could be damaged by heat.



Image: Close-up of the Westinghouse Electric Griddle showing the detachable temperature control unit being inserted into the griddle's side receptacle.

OPERATING INSTRUCTIONS

- 1. **Power Connection:** Plug the temperature control unit into a suitable 220V/240V electrical outlet.
- 2. **Temperature Setting:** Turn the variable temperature control dial to your desired heat setting. The pilot indicator light will illuminate, indicating the griddle is heating.
- 3. **Preheating:** Allow the griddle to preheat for approximately 5-10 minutes, or until the pilot light turns off, indicating the set temperature has been reached. The pilot light will cycle on and off during cooking to maintain the temperature.
- 4. **Cooking:** Place food directly onto the large non-stick cooking surface (48 x 25 CM). The 2000 Watts ensure fast warm-up and efficient cooking.
- 5. **Cool-Touch Handles:** The griddle features cool-touch handles for safe handling during and after cooking.
- 6. **Grease Collection:** Excess grease will drain into the slide-out grease tray located beneath the cooking surface.
- 7. **After Use:** Once cooking is complete, turn the temperature control dial to the 'OFF' position and unplug the unit from the electrical outlet.

UPTO 2000 WATTS OF POWER SLIDE OUT TRAY FOR

Image: The Westinghouse Electric Griddle in use, demonstrating its large non-stick cooking surface with various foods such as shrimp, asparagus, and fried chicken.

GREASE COLLECTION

MAINTENANCE AND CLEANING

- 1. **Cool Down:** Always allow the griddle to cool completely before attempting to clean.
- 2. **Remove Temperature Control:** Detach the temperature control unit from the griddle. This unit is**not** dishwasher safe and should only be wiped clean with a damp cloth.
- 3. **Empty Grease Tray:** Slide out the grease tray and dispose of collected grease. The grease tray is dishwasher safe.
- 4. **Griddle Plate Cleaning:** The griddle plate is dishwasher safe. For best results, wash with warm, soapy water using a non-abrasive sponge or cloth. The premium non-stick surface ensures easy cleaning.
- 5. **Drying:** Ensure all parts are thoroughly dry before reassembling or storing.

NON STICK SURFACE



EASY TO CLEAN

Image: A close-up view of the Westinghouse Electric Griddle's non-stick cooking surface, emphasizing its easy-to-clean properties.



Image: The Westinghouse Electric Griddle with its slide-out grease tray partially removed, illustrating the ease of grease collection and disposal.

TROUBLESHOOTING

- **Griddle not heating:** Ensure the temperature control probe is fully inserted and the unit is plugged into a working 220V/240V outlet. Check the temperature dial is set above 'OFF'.
- Uneven heating: Allow sufficient preheating time. Ensure the griddle is placed on a flat, even surface
- **Food sticking:** Although the griddle has a non-stick surface, a small amount of cooking oil or butter can be used for certain foods or for enhanced flavor. Ensure the griddle is properly preheated.
- Pilot light not illuminating: Check power connection and temperature dial setting. If issues persist,

SPECIFICATIONS

Model: WKGL2456
Brand: Westinghouse
Voltage: 220V / 240V
Wattage: 2000 Watts

• Cooking Surface Dimensions: 48 x 25 CM (approximately 19 x 10 inches)

• Material: Non-stick coated surface

• Special Features: Cool Touch Handles, Detachable Thermostat Control, Slide Out Grease Tray, Pilot Indicator Light, Dishwasher Safe (griddle plate and drip tray)

• **Item Weight:** 0.1 Kilograms (3.52 ounces) - *Note: This weight may refer to a component, not the full unit.*

• Package Dimensions: 25.25 x 13.25 x 4.5 inches

WARRANTY AND SUPPORT

This Westinghouse Electric Griddle comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, replacement parts, or warranty claims, please contact Westinghouse customer service through their official website or the contact information provided in your product documentation.

Always ensure you have your model number (WKGL2456) and proof of purchase available when contacting support.

Related Documents - WKGL2456



Westinghouse WFG612 Oven Series Quick Start Guide

A quick start guide for the Westinghouse WFG612 oven series, covering initial setup, registration, and basic operation of the cooktop, oven, and grill.



Westinghouse WVE6516 Electric Built-In Oven User Manual

Comprehensive user manual for the Westinghouse WVE6516 electric built-in oven, covering installation, operation, safety instructions, troubleshooting, and warranty information.



Westinghouse Dual Fuel Pizza Oven with Rotating Stone User Manual WBGLGBG012AR

Comprehensive user manual for the Westinghouse Dual Fuel Pizza Oven with Rotating Stone (WBGLGBG012AR), covering intended use, safety information, preparation, assembly, operation, troubleshooting, care, and disposal.



Westinghouse WSHUJ2158B Digital Cool Mist Ultrasonic Tower Humidifier Instruction Manual

This manual provides instructions for the Westinghouse WSHUJ2158B Digital Cool Mist Ultrasonic Tower Humidifier, covering safety information, setup, operation, cleaning, and troubleshooting.



Westinghouse WHIHWD04SS Instant Hot Water Dispenser Instruction Manual

Official instruction manual for the Westinghouse WHIHWD04SS Instant Hot Water Dispenser. Provides essential safety information, setup guides, operating instructions, cleaning and maintenance procedures, troubleshooting tips, calibration steps, and warranty details.



Westinghouse WST7503 Cool Mist Humidifier User Manual and Warranty Information

This document provides comprehensive operating instructions, maintenance guidelines, troubleshooting tips, safety precautions, and warranty details for the Westinghouse WST7503 Cool Mist Humidifier.