

[Manuals.plus](#) /

› [KitchenAid](#) /

› KitchenAid Digital Air Fry Countertop Oven Instruction Manual

KitchenAid KCO124BM

KitchenAid Digital Air Fry Countertop Oven Instruction Manual

Model: KCO124BM

PRODUCT OVERVIEW

The KitchenAid Digital Countertop Oven with Air Fry (Model KCO124BM) is designed to offer versatile cooking possibilities in a convenient countertop size. It features a No-Flip Air Fry Basket and a 360° Air Fry System for even cooking. This appliance can accommodate a 9x13-inch baking pan, a 12-inch pizza, or up to two 3.4 lbs chickens, providing the same possibilities as a full-size oven with quality results.



Figure 1: KitchenAid Digital Air Fry Countertop Oven with Air Fry Basket and cooked shrimp.

WHAT'S INCLUDED

Your KitchenAid Digital Air Fry Countertop Oven package includes the following components:

- (1) KitchenAid Digital Air Fry Countertop Oven (Model KCO124BM)
- (1) Air Fry Basket
- (1) 9x13-inch Baking Pan with Grill Rack
- (1) Removable Metal Drip and Crumb Tray
- (1) Removable Metal Rack

KitchenAid Even-Heat™ Convection Technology



Figure 2: Included accessories: Air Fry Basket, 9x13-inch Baking Pan with Grill Rack, removable metal drip and crumb tray, and removable metal rack.

SETUP

Before first use, ensure all packaging materials are removed from the oven and accessories. Place the oven on a stable, heat-resistant surface with adequate clearance from walls and other appliances for proper ventilation. It is recommended to leave several inches of space on all sides and above the unit.

1. Unpack the oven and all accessories.

2. Wash the Air Fry Basket, Baking Pan, Grill Rack, and Drip/Crumb Tray with warm, soapy water. Rinse thoroughly and dry completely.
3. Insert the Drip/Crumb Tray into the lowest slot of the oven.
4. Place the Removable Metal Rack or Air Fry Basket into the desired rack position based on your cooking needs.
5. Plug the power cord into a grounded 110V electrical outlet.

OPERATING MODES AND FUNCTIONS

The KitchenAid Digital Air Fry Countertop Oven offers 9 essential cooking settings, easily selected via the control knob on the front panel. The digital display shows temperature and time settings.



Figure 3: Control panel with mode selection knob and digital display.

- **Air Fry:** Utilizes the 360° Air Fry System for crispy results without flipping. Ideal for french fries, chicken, and more.
- **Toast:** For perfectly toasted bread and bagels. Adjust shade and number of slices.
- **Bagel:** Specifically designed for toasting bagels, typically toasting the cut side more intensely.
- **Proof:** Provides a low, consistent temperature environment for dough to rise, speeding up the bread-making process.
- **Dehydrate:** Dries food at a low temperature, suitable for making fruit chips or jerky.
- **Bake:** Standard oven function for baking cakes, cookies, and casseroles.
- **Broil:** Uses top heating elements for grilling and browning food.
- **Reheat:** Warms up leftovers while maintaining texture.
- **Keep Warm:** Maintains food at a serving temperature without overcooking.

The oven features Even-Heat Convection Technology with top and bottom heating elements and a convection fan to

ensure consistent temperature and even cooking throughout the cavity. It also boasts a Fast Preheat function, ready to bake in under 4 minutes.



Figure 4: Even-Heat Convection Technology ensures uniform heat distribution.

OFFICIAL PRODUCT VIDEOS

Below are official product videos from the seller demonstrating key features and usage of the KitchenAid Digital Air Fry Countertop Oven.

Your browser does not support the video tag.

Video 1: "KitchenAid Digital Countertop Oven with Air Fry 1800 Watts" - This video provides an overview of the oven's features and capabilities, including its 1800-watt power and various cooking functions.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your KitchenAid Countertop Oven. Always unplug the oven and allow it to cool completely before cleaning.

- **Interior:** Wipe the interior with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used.
- **Removable Drip/Crumb Tray:** This tray is designed for easy removal and cleaning. Simply slide it out and wash with warm, soapy water. This helps catch crumbs and drips, preventing buildup on the oven floor.
- **Air Fry Basket & Racks:** These accessories can be washed by hand with warm, soapy water or placed in the dishwasher if dishwasher-safe (refer to product manual for specific instructions).
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or scouring pads that could scratch the finish.



No-Flip Air Fry Basket: evenly air fry foods, like chicken tenders, without flipping

Figure 5: The removable drip and crumb tray simplifies cleaning.

TROUBLESHOOTING

If you encounter issues with your KitchenAid Digital Air Fry Countertop Oven, refer to the common troubleshooting tips below:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure oven is securely plugged into a working outlet. Check household circuit breaker.
Food not cooking evenly.	Improper rack position; overcrowding; uneven food placement.	Refer to recipe for recommended rack position. Avoid overcrowding the basket/pan. Arrange food in a single layer for best results.
Excessive smoke.	Food residue on heating elements; high-fat food; dirty drip tray.	Clean heating elements and drip tray regularly. Use a baking pan under the air fry basket for fatty foods.
Oven is too loud.	Convection fan operation.	The convection fan produces a normal operating sound. If the sound is unusually loud or persistent, contact customer support.

SPECIFICATIONS

- **Brand:** KitchenAid
- **Model Name:** KCO124BM
- **Color:** Black Matte
- **Product Dimensions:** 16"D x 17"W x 11.3"H
- **Item Weight:** 15.9 pounds
- **Power Source:** Electric
- **Voltage:** 110 Volts
- **Control Type:** Knob Control
- **Door Style:** Dropdown Door
- **Material:** Glass (Door)
- **Capacity:** Fits 9x13-inch baking pan, 12" pizza, or up to two 3.4 lbs chickens.

WARRANTY AND SUPPORT

The KitchenAid Digital Air Fry Countertop Oven (Model KCO124BM) comes with a **1-Year Limited Warranty** from the manufacturer.

For detailed warranty information, product support, or to purchase replacement parts, please visit the official KitchenAid website or contact their customer service. You can also refer to the full product manual included in your packaging for comprehensive instructions and support details.

For additional support, you may visit the [KitchenAid Store on Amazon](#).

© 2024 KitchenAid. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08FVWKK7T>

More documents and user manuals: <https://manuals.plus/>