



Manuals.plus /

› Washers /

› Manual Portable Washing Machine User Manual

## Washers Manual Portable Washing Machine

# Manual Portable Washing Machine User Manual

Model: Manual Portable Washing Machine (Manufacturer Reference: Wmarking UK)

## 1. INTRODUCTION

---

Thank you for choosing the Manual Portable Washing Machine. This compact and efficient device is designed for convenient, hand-powered laundry, perfect for small loads, delicate items, and situations where electricity or space is limited. Its robust design ensures effective cleaning and quick dehydration for your everyday needs.

This manual provides essential information on how to set up, operate, and maintain your washing machine to ensure optimal performance and longevity. Please read it thoroughly before first use.

## 2. PRODUCT OVERVIEW

---

The Manual Portable Washing Machine is engineered for simplicity and effectiveness. It features a durable polypropylene construction, a rotary handle for manual operation, and a removable dehydration basket.





**Figure 2.1:** Manual Portable Washing Machine. This image shows the overall design of the washing machine, highlighting its compact and portable nature.

# Product display and size



**Figure 2.2:** Product Display and Size. This diagram illustrates the key components including the handle, lid, dehydration basket, and transparent outer bucket, along with its dimensions (40 cm / 15.7 in width, 27 cm / 10.6 in height).



### Detachable water basket,

easy to clean,

To avoid secondary pollution of clothing

### Suction cup feet

Adopt four suction cup foot pad design

More stable in use

Won't skid

Note: When moving, do not lift the product forcibly, just move it



**Figure 2.3:** Detachable Water Basket and Suction Cup Feet. This image highlights the removable inner basket for easy cleaning and the four anti-slip suction cup feet at the base, ensuring stability during operation.



Special handle for washing,  
easy to use, labor-saving and durable  
Fast dehydration,  
the speed can reach 1200 revolutions per minute



**Figure 2.4:** Special Handle for Washing. This close-up shows the ergonomic rotary handle designed for labor-saving and durable use, capable of reaching speeds up to 1200 revolutions per minute for fast dehydration.

The machine is designed to be safe, sturdy, and stable, featuring four anti-slip pads at the bottom to prevent movement during use. Its compact size makes it suitable for various environments, including homes, travel, camping, and small living spaces.



**Figure 2.5:** Mini Washing Machine in Various Settings. This image demonstrates the machine's versatility, showing it used in a kitchen, bathroom, and outdoor camping environment, emphasizing its small size and portability.

### 3. SAFETY INSTRUCTIONS

---

- Always place the washing machine on a flat, stable, and non-slip surface before use.
- Do not overload the machine beyond its 2 kg capacity. Overloading can damage the mechanism and reduce cleaning efficiency.
- Ensure the lid is securely closed before operating the handle to prevent water splashing.
- Keep hands and loose clothing away from the rotating parts during operation.
- This machine is designed for washing small, light garments. Do not attempt to wash large, heavy items like jeans, jackets, or bedding, as this can damage the unit.
- Do not use harsh chemicals or abrasive cleaners on the machine.
- When moving the machine, do not lift it forcibly by the handle or lid. Instead, gently slide or lift the entire unit from its base.
- Keep out of reach of children when not in use. Adult supervision is recommended if children are present during operation.

### 4. SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check for any damage during transit. If any parts are damaged or missing, do not proceed with setup and contact customer support.
3. **Placement:** Place the washing machine on a flat, stable countertop or floor. Ensure the four anti-slip pads at the bottom are firmly gripping the surface.

4. **Assemble (if necessary):** The dehydration basket is typically pre-installed. Ensure it is properly seated inside the main bucket.

## 5. OPERATING INSTRUCTIONS

Follow these steps for effective washing and dehydration:



**Figure 5.1:** Step-by-Step Washing Instructions. This visual guide illustrates the entire process from setup to dehydration.

1. **Prepare the Machine:** Place the machine on a flat surface. Open the lid by lifting it.
2. **Load Laundry:** Put your dirty clothes into the dehydration basket inside the machine. Do not exceed the 2 kg capacity.
3. **Add Water and Detergent:** Pour in the appropriate amount of water, ensuring clothes are submerged. Add your preferred laundry detergent.
4. **Close the Lid:** Securely close the lid of the washing machine.

5. **Wash:** Hold the rotary handle and turn it to wash the clothes. Refer to the 'Washing Handle Speed Reference' table below for recommended turning speeds and washing times based on clothing quantity.
6. **Drain Water (First Drain):** After washing, drain the dirty water. The machine has a drainage hole for this purpose.
7. **Rinse (Optional):** For a thorough rinse, you may add fresh water and repeat step 5 for a shorter duration.
8. **Dehydrate:** Insert the handle into the dehydration hole (usually a separate slot on the lid for spinning). Turn the handle vigorously to spin and dehydrate the clothes. The machine can reach up to 1200 RPM for quick drying.
9. **Remove Laundry:** Once dehydration is complete, open the lid and easily remove the dehydrated clothes.

## Washing Handle Speed Reference

Wash small pieces of clothing easily  
Simple operation, quick dehydration,  
can wash small clothes, underwear, socks, towels, etc.



Washing handle speed reference			
Clothing quantity (pieces)	Add water	Handle speed	Washing time
1-2	1/4 barrel	1 seconds/1 circle	2 minute
2-3	1/3 barrel	1 seconds/1 circle	2-3 minutes
3-4	1/2 barrel	2 seconds/1 circle	3-5 minutes

**Figure 5.2:** Washing Handle Speed Reference. This table provides guidelines for water levels, handle speed, and washing times based on the quantity of clothing.

Clothing Quantity (pieces)	Add Water	Handle Speed	Washing Time
1-2	1/4 barrel	1 second/1 circle	2 minutes
2-3	1/3 barrel	1 second/1 circle	2-3 minutes
3-4	1/2 barrel	2 seconds/1 circle	3-5 minutes

## 6. MAINTENANCE

- **Cleaning After Each Use:** After each wash, drain all water from the machine. Remove the detachable dehydration basket and rinse both the basket and the main bucket thoroughly with clean water. This prevents residue buildup and secondary contamination.
- **Drying:** Allow all components to air dry completely before reassembling or storing the machine to prevent mold or

mildew growth.

- **Handle Care:** Keep the rotary handle clean and free of debris. If it becomes stiff, ensure no foreign objects are obstructing its movement.
- **Storage:** Store the washing machine in a cool, dry place away from direct sunlight and extreme temperatures.
- **Suction Cup Feet:** Periodically check the anti-slip suction cup feet for wear and tear. Ensure they are clean to maintain optimal grip.

## 7. TROUBLESHOOTING

---

- **Machine is unstable or slides during operation:**

*Solution:* Ensure the machine is placed on a flat, dry, and clean surface. Check if the anti-slip suction cup feet are clean and firmly pressed onto the surface.

- **Handle is difficult to turn or stuck:**

*Solution:* Check for any clothing or foreign objects obstructing the rotation mechanism. Ensure the machine is not overloaded. If the handle is inserted for dehydration, ensure it is correctly aligned with the dehydration hole.

- **Clothes are not getting clean enough:**

*Solution:* Ensure you are using enough detergent and the correct amount of water for the load size. Increase washing time or handle speed as per the reference table. Avoid overloading the machine.

- **Clothes are still too wet after dehydration:**

*Solution:* Ensure you are turning the handle vigorously enough during the dehydration cycle. You may need to spin for a longer duration or perform a second dehydration cycle. Ensure the dehydration basket is properly seated.

- **Water is leaking from the machine:**

*Solution:* Check if the lid is securely closed. Inspect the main bucket for any cracks or damage. Ensure the drainage plug (if applicable) is properly sealed.

## 8. SPECIFICATIONS

---

Feature	Specification
Product Name	Manual Portable Washing Machine
Brand	Washers
Manufacturer Reference	Wmarking UK
Color	Blue
Material	Polypropylene
Product Dimensions	40 cm x 27 cm (15.7 in x 10.6 in)
Washing Capacity	2 Kilograms
Washing Method	Manual
Dehydration Effect	Medium
Spin Speed (Max)	1200 RPM
Loading Type	Top-loading
Cycle Options	Rinse
ASIN	B08FWRZ5NW

## 9. WARRANTY AND SUPPORT

---

Specific warranty information for this product is not provided in the available data. For any warranty claims, technical support, or spare parts inquiries, please contact the seller or manufacturer directly through your purchase platform.

Manufacturer: Wmarking UK

Please retain your proof of purchase for any support requests.