

ANGELLOONG B08FWXTVP9

ANGELLOONG Coffee Bean Roaster Machine User Manual

Model: B08FWXTVP9

1. INTRODUCTION

Thank you for choosing the ANGELLOONG Coffee Bean Roaster Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use the appliance for other than intended use.
- Ensure adequate ventilation during operation to dissipate heat and smoke.

3. PRODUCT OVERVIEW

The ANGELLOONG Coffee Bean Roaster Machine is designed for home use, featuring adjustable temperature and timing functions for various roasting needs.

Components

- **Roasting Pan:** Non-stick, food-grade Teflon layer for even heating and easy cleaning.
- **Transparent Lid:** Heat-resistant with a standing handle for easy placement and a four-hole ventilation system. Allows visual monitoring of the roasting process.
- **Agitator:** Internal rotating arms ensure even roasting of beans.
- **Control Panel:** Includes temperature dial, timer dial, and power switch.
- **Heat-Resistant Handles:** Thickened and widened for safe handling.



Image 3.1: The ANGELLOONG Coffee Bean Roaster Machine with its transparent lid open, revealing coffee beans in the roasting pan.

Ingenious design

Food-grade layer non-stick pot, safe,
non-toxic, healthy and delicious



Image 3.2: A close-up of the roaster's interior, highlighting the food-grade non-stick pan and the agitator arms designed for even roasting.



Standing handle for easy placement of the lid

Image 3.3: Side view of the roaster, illustrating the transparent lid and its standing handle for convenient placement.

Control Panel

The control panel features two rotary dials and a power switch for precise control over the roasting process.

- **Temperature Dial:** Adjusts heating from 100-240°C (212-464°F).
- **Timer Dial:** Sets roasting duration from 0-60 minutes.
- **ON/OFF Switch:** Powers the unit on or off.
- **LAMP Indicator:** Illuminates when the heating element is active.

DETAILS



Visual Operation



Heat resistance handle



Temperature 0-240°C adjustable

0-60 minutes timer function

Image 3.4: Detailed view of the control panel, showing the temperature dial (left), power switch (center), and timer dial (right).

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the roaster for any damage.
2. **Placement:** Place the roaster on a stable, flat, heat-resistant surface. Ensure there is adequate clearance around the unit for ventilation. Avoid placing it near flammable materials.
3. **Initial Cleaning:** Before first use, wipe the interior of the roasting pan and the lid with a damp cloth. Ensure all parts are dry before plugging in the unit.
4. **Power Connection:** Plug the power cord into a standard 110V electrical outlet.

5. OPERATING INSTRUCTIONS

Coffee Bean Roasting

1. **Preheat (Optional but Recommended):** Turn the temperature dial to your desired setting (e.g., 200°C for coffee beans) and the timer to 5-10 minutes. Turn the power switch to 'ON'. Allow the unit to preheat.

2. **Add Beans:** Once preheated, carefully lift the lid using the standing handle and add up to 750 grams (1.65 lbs) of green coffee beans into the roasting pan. Close the lid securely.
3. **Set Temperature and Time:** Adjust the temperature dial to your desired roasting temperature (typically between 180-240°C for coffee). Set the timer dial for the desired roasting duration (e.g., 24-40 minutes for coffee).
4. **Monitor Roasting:** Observe the beans through the transparent lid. Listen for the 'first crack' and 'second crack' which indicate different stages of roast. Adjust temperature or time as needed based on your preferred roast level.
5. **End Roasting:** When the desired roast level is achieved, turn the power switch to 'OFF' and unplug the unit.
6. **Cool Beans:** Immediately transfer the hot roasted beans to a colander or cooling tray to stop the roasting process. Agitate the beans to cool them quickly.

Multi-functional Roasting

This appliance can also be used to roast other items. Refer to the table below for recommended capacities, temperatures, and times.

Multifunction and Integration.



Popcorn



peanuts



soybeans.



Coix



Black Bean



Chestnut.

Baking Name	Maximum Capacity	Reference Temperature	Reference Time
coffee bean	750G	180–240 °C	24–40 minutes
Soybeans/ red beans	1200G	180–220°C	10–20/minutes
Peanut	500G	160–180°C	8–16/ minutes
Melon seeds	400G	180–200°C	6–15 minutes

Image 5.1: Reference table for roasting different types of beans and grains.

Table 5.1: Roasting Reference Guide

Baking Name	Maximum Capacity	Reference Temperature	Reference Time
Coffee Bean	750g	180-240 °C	24-40 minutes
Soybeans/Red Beans	1200g	180-220 °C	10-20 minutes
Peanut	500g	160-180 °C	8-16 minutes
Melon Seeds	400g	180-200 °C	6-15 minutes
Popcorn	Refer to specific popcorn instructions	High (e.g., 240°C)	Until popping stops

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your roaster.

- Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Roasting Pan:** The non-stick roasting pan can be wiped clean with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- Lid:** The transparent lid can be washed with warm, soapy water. Rinse thoroughly and dry completely.
- Exterior:** Wipe the exterior of the unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Storage:** Store the cleaned and dried roaster in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your roaster, refer to the following common problems and solutions:

- Unit does not power on:**
 - Ensure the power cord is securely plugged into a working 110V outlet.
 - Check if the ON/OFF switch is in the 'ON' position.
- Beans are not roasting evenly:**
 - Ensure the agitator arms are rotating freely. If they stop, check for jammed beans and clear them.
 - Do not overload the roasting pan. Adhere to the maximum capacity guidelines (e.g., 750g for coffee beans).
 - Verify the temperature setting is appropriate for the type of bean being roasted.
- Agitator arms stop rotating:**
 - This can occur if a bean becomes jammed. Turn the unit off, carefully lift the lid, and remove any obstructions.
 - If the issue persists after clearing obstructions, contact customer support.
- Excessive smoke during roasting:**
 - Ensure adequate ventilation in your roasting area.
 - Darker roasts naturally produce more smoke. Monitor the roast closely to prevent burning.

8. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Model	B08FWXTVP9
Brand	ANGELLOONG
Voltage	110V
Power	1200W
Capacity (Coffee Beans)	Up to 750 grams (1.65 lbs / 26.45 oz)
Temperature Range	100-240°C (212-464°F)
Timer Range	0-60 minutes
Product Dimensions (L x W x H)	13.39" x 13.39" x 8.27"
Item Weight	1.65 pounds



Image 8.1: Product dimensions and capacity details.

9. WARRANTY AND SUPPORT

The ANGELLOONG Coffee Bean Roaster Machine is manufactured with quality and durability in mind. For specific warranty details or technical support, please refer to the warranty card included with your purchase or contact ANGELLOONG customer service through the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question