

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Beeasy](#) /

› [Beeasy Digital Waterproof Watch User Manual](#)

Beeasy AW02

Beeasy Digital Waterproof Watch User Manual

Model: AW02

INTRODUCTION

This manual provides detailed instructions for the Beeasy Digital Waterproof Watch, Model AW02. Please read this manual carefully to understand the watch's functions and ensure proper use and maintenance.



Image: Front view of the Beeasy Digital Waterproof Watch, displaying time, day, and date.

KEY FEATURES

The Beeasy Digital Waterproof Watch offers a range of features designed for daily wear and active lifestyles.

- Ultra-thin design (6.6 mm case thickness)
- Backlight for low-light conditions
- Dual time zone display
- 12/24 hour format switch
- Automatic calendar
- Daily alarm and hourly chime
- 1/100 second stopwatch
- Countdown timer (max 23 hours, 59 minutes, 59 seconds)
- 50M (5ATM) water resistance

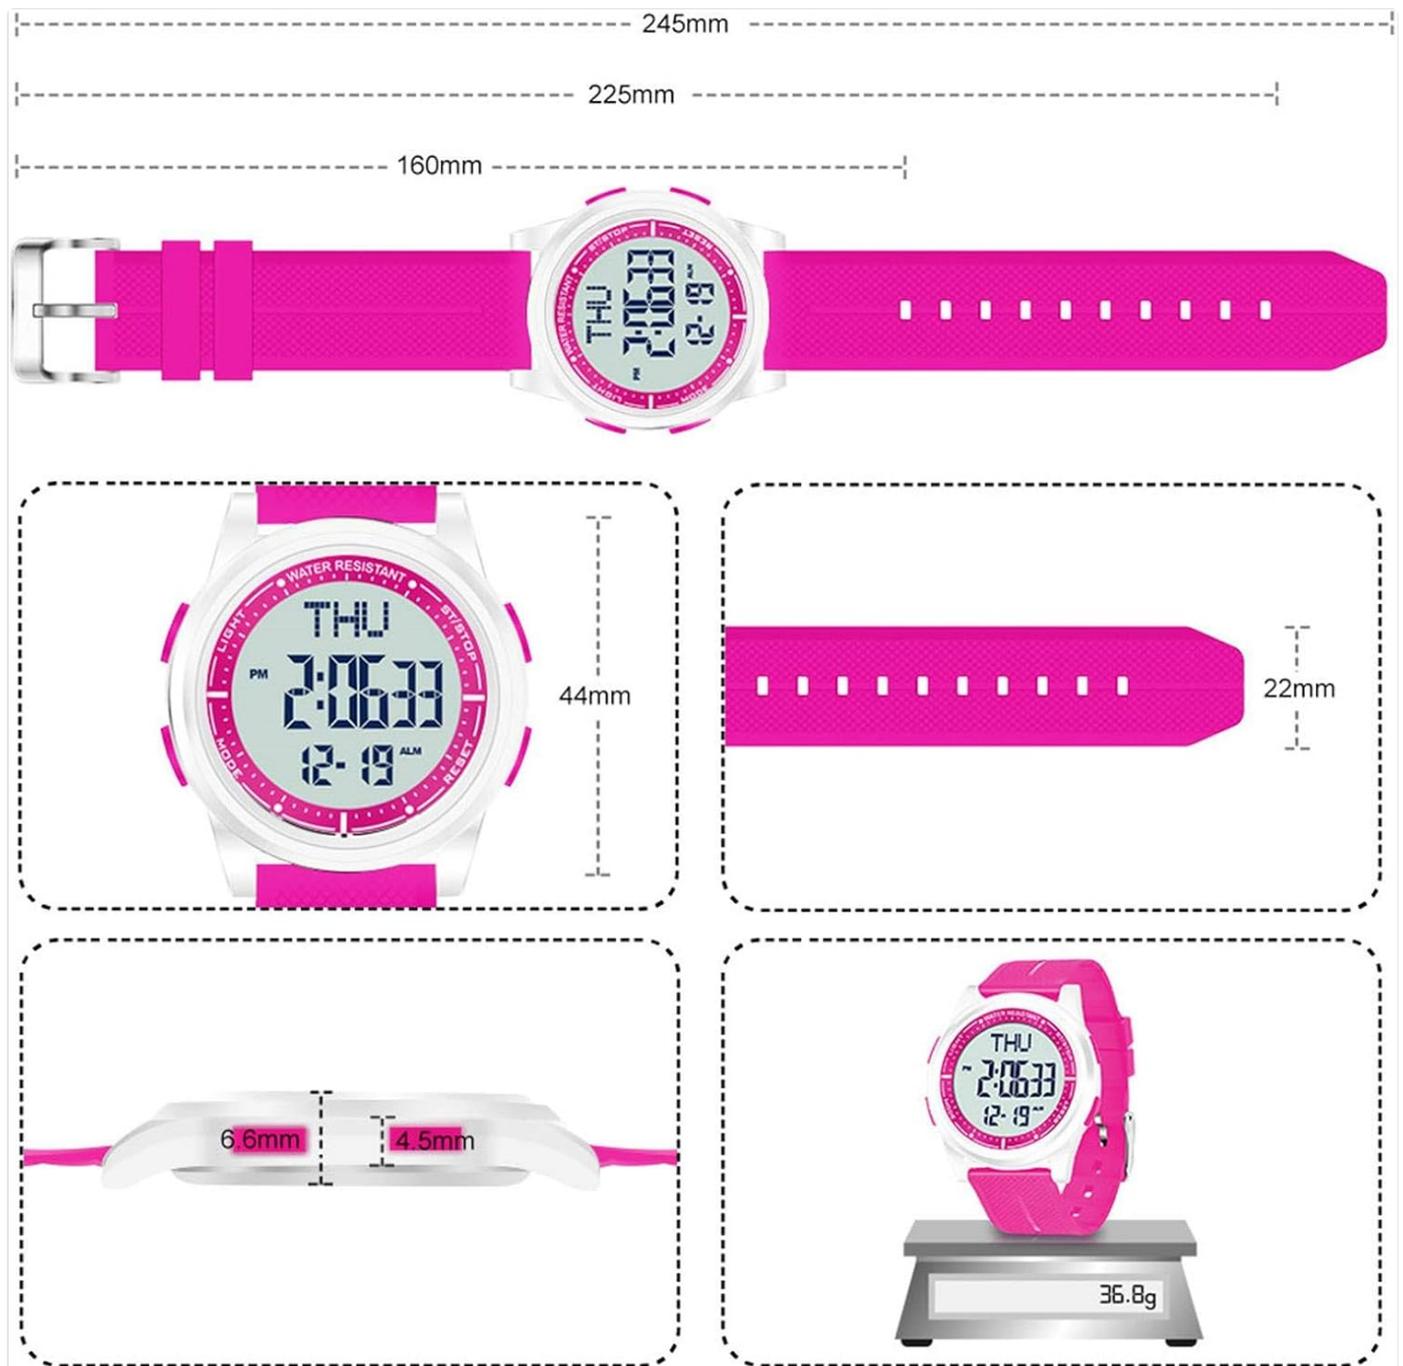


Image: Diagram illustrating various features of the Beeasy Digital Watch, including 12/24H, auto calendar, backlight, dual time, alarm mode, stopwatch, countdown, and split time.

SETUP

Initial Power On

The watch comes with a pre-installed battery. If the display is blank, press any button to activate it.

Button Functions

The watch typically has four buttons:

- **LIGHT:** Activates the backlight.
- **MODE:** Cycles through different modes (Time, Alarm, Stopwatch, Countdown, Dual Time).
- **ST/STOP:** Starts/stops functions in Stopwatch/Countdown mode, adjusts settings.
- **RESET:** Resets functions, adjusts settings.



Image: Close-up of the watch face, highlighting the "LIGHT", "MODE", "ST/STOP", and "RESET" button labels around the bezel.

OPERATING INSTRUCTIONS

Setting Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the seconds start flashing.
2. Press **RESET** to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use **ST/STOP** to adjust the flashing value.
4. Once all settings are correct, press **MODE** to return to the normal time display.

12/24 Hour Format

In the normal time display, press **ST/STOP** to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

Dual Time Setting

This feature allows you to track a second time zone.

1. Press **MODE** until you reach the Dual Time mode (often indicated by "DT" or a second time display).
2. Press and hold **RESET** until the hour flashes.
3. Use **ST/STOP** to adjust the hour, then **RESET** to move to minutes.
4. Use **ST/STOP** to adjust the minutes.
5. Press **MODE** to save and exit.

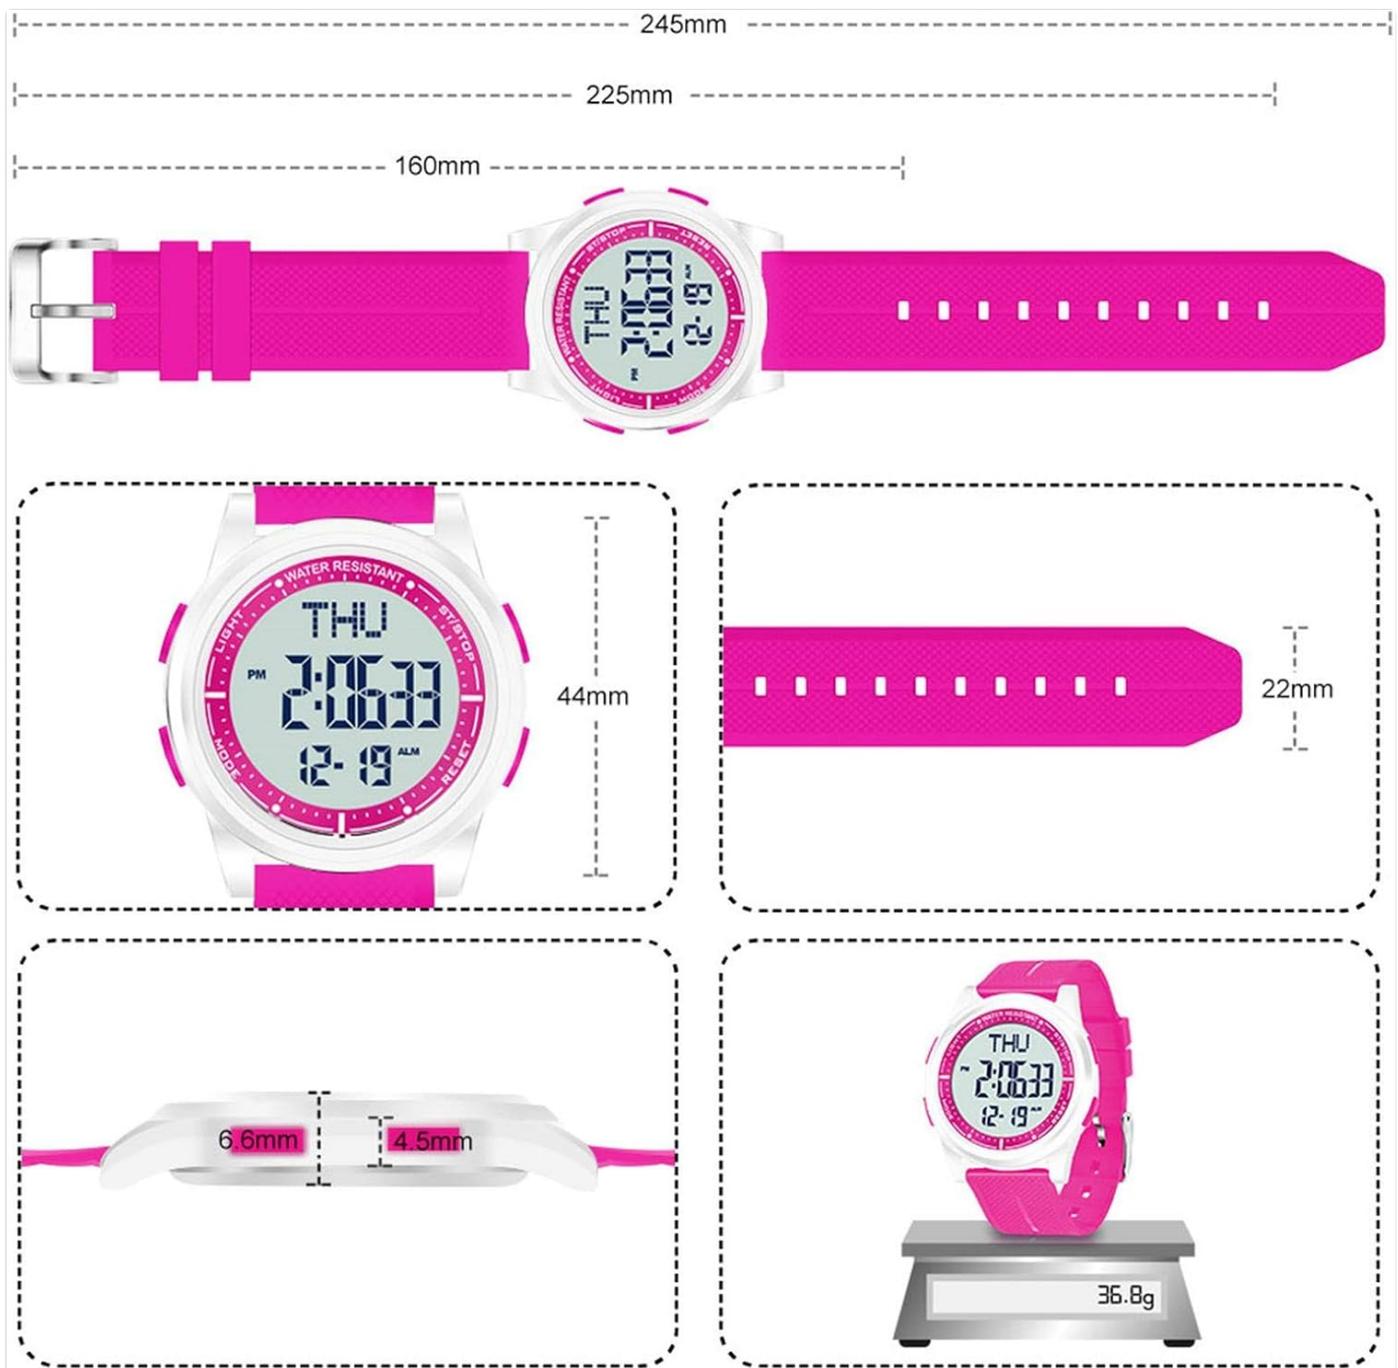


Image: Diagram illustrating the dual time feature, showing two different time zones (e.g., London and New York) on the watch display.

Alarm Function

1. Press **MODE** until you reach the Alarm mode (indicated by "AL" or an alarm icon).
2. Press **RESET** to select the hour or minute to set.
3. Use **ST/STOP** to adjust the flashing value.
4. Press **MODE** to save the alarm time.
5. To turn the alarm ON/OFF, press **ST/STOP** in Alarm mode. An alarm icon will appear when active.
6. To activate/deactivate the hourly chime, press **RESET** in Alarm mode (while not setting the alarm time).

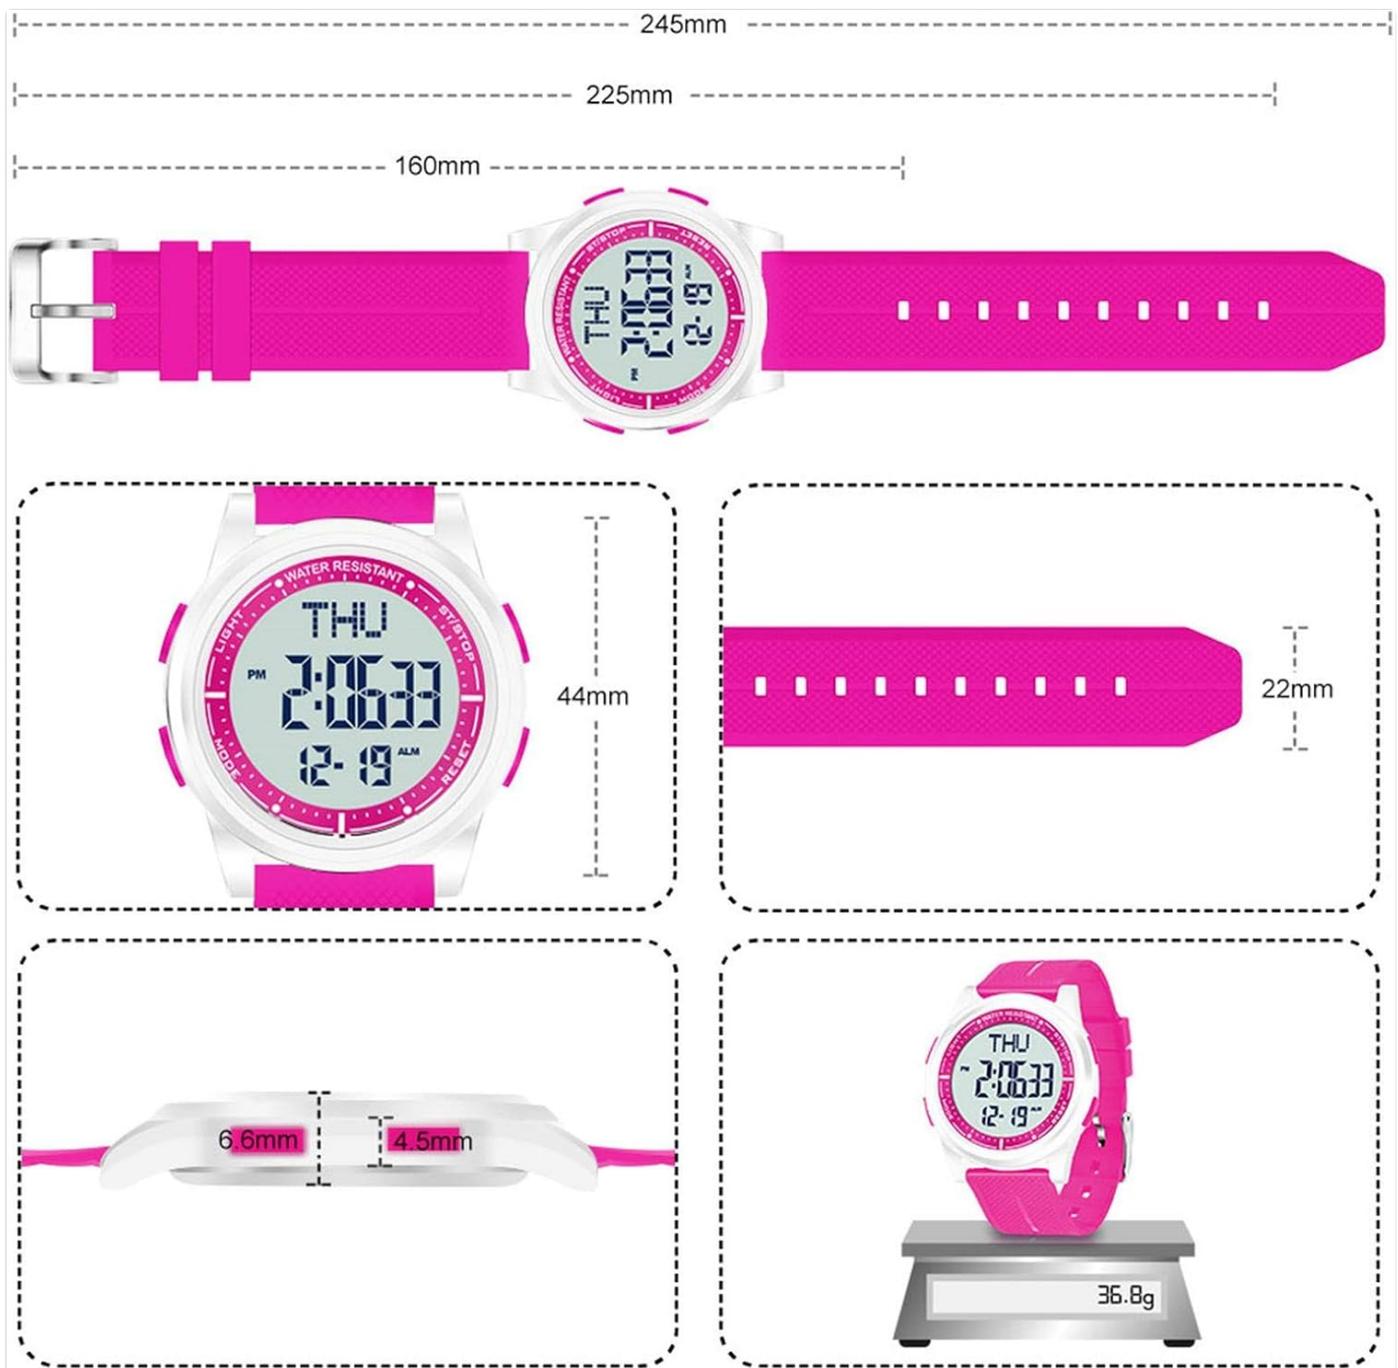


Image: Diagram illustrating the alarm mode, showing an alarm clock icon and a person sleeping, indicating the watch's alarm function.

Stopwatch Function

1. Press **MODE** until you reach the Stopwatch mode (indicated by "ST" or "CH").
2. Press **ST/STOP** to start the stopwatch.
3. Press **ST/STOP** again to stop it.
4. Press **RESET** to reset the stopwatch to zero.
5. To record split times, press **RESET** while the stopwatch is running. The display will freeze, but the stopwatch continues to run in the background. Press **RESET** again to return to the running time.

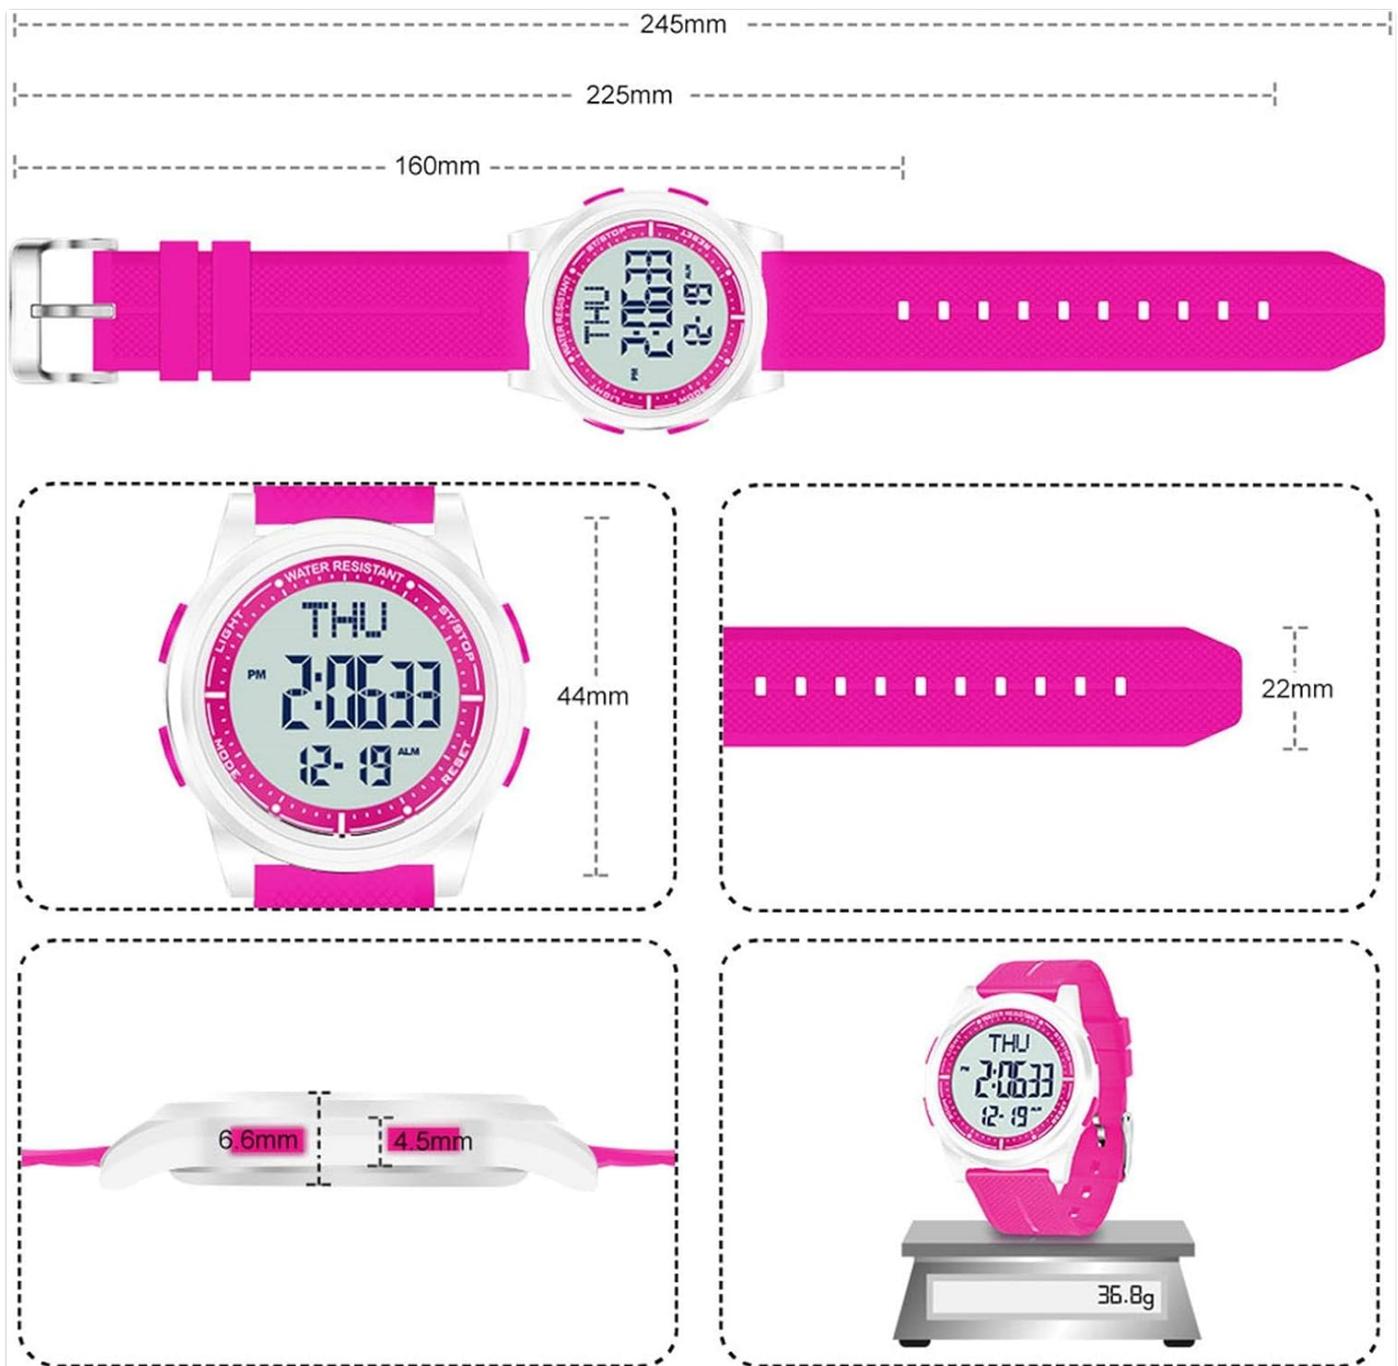


Image: Diagram illustrating the stopwatch and countdown functions, showing a stopwatch icon and a person exercising, indicating the watch's timing capabilities.

Countdown Timer Function

1. Press **MODE** until you reach the Countdown Timer mode (indicated by "TR" or "CD").
2. Press **RESET** to select the hour, minute, or second to set.
3. Use **ST/STOP** to adjust the flashing value.
4. Press **MODE** to save the countdown time.
5. Press **ST/STOP** to start the countdown.
6. Press **ST/STOP** again to pause/resume.
7. Press **RESET** to reset the countdown to the initial set time.

Backlight

Press the **LIGHT** button to illuminate the display for a few seconds.

MAINTENANCE

Cleaning

Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by drying. Avoid harsh chemicals or abrasive cleaners.

Water Resistance

The watch is water-resistant up to 50 meters (5ATM). This means it is suitable for swimming and cold showers.

Important: Avoid contact with hot water or steam, as this can compromise the watch's water resistance seals.



5ATM Life Waterproof
Support swimming and cold shower,
avoid hot water/diving.

Image: The Beeasy Digital Watch worn by a person swimming, illustrating its 5ATM water resistance. Text on image states "5ATM Life Waterproof, Support swimming and cold shower, avoid hot water/diving."

Battery Replacement

The watch uses a Lithium metal battery. When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing all buttons to see if it responds. If not, replace battery.
Time is incorrect.	Time not set correctly or battery is low.	Refer to "Setting Time and Date" section. Replace battery if issue persists.
Water inside the watch.	Exposure to hot water/steam or damaged seal.	Stop using the watch immediately. Seek professional repair. Avoid hot water/steam.

SPECIFICATIONS

- **Model Number:** AW02
- **Dimensions (L x W x H):** 24.5 x 4.4 x 0.66 cm (9.65 x 1.73 x 0.26 inches)
- **Weight:** 36.8 grams (1.3 ounces)
- **Case Thickness:** 6.6 mm
- **Water Resistance:** 50 meters (5 ATM)
- **Battery Type:** 1 Lithium metal battery (required)
- **Display Type:** Digital
- **Functions:** Time (12/24H), Date, Day, Alarm, Hourly Chime, Stopwatch (1/100s), Countdown Timer, Dual Time, Backlight

Wide viewing angle display & Ultra-thin case thickness

Ultra-thin case thickness is only 6.6 mm



Image: Diagram showing the precise dimensions of the Beeasy Digital Watch, including strap length, case width, and ultra-thin case thickness (6.6mm).

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Beeasy customer service. Refer to your purchase documentation for specific warranty terms.

For more information, you may visit the official Beeasy store on Amazon: [Beeasy Store](#)