



[Manuals.plus](#) /

> [ZENY](#) /

> ZENY 4-Shelf Adjustable Heavy Duty Storage Shelving Unit Instruction Manual

ZENY B08FXCBDFN

ZENY 4-Shelf Adjustable Heavy Duty Storage Shelving Unit Instruction Manual

Model: B08FXCBDFN

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your ZENY 4-Shelf Adjustable Heavy Duty Storage Shelving Unit. This versatile steel wire rack is designed for use in various environments such as kitchens, offices, and garages, offering significant storage capacity and durability. Please read these instructions carefully before assembly and use to ensure safe and proper operation.

SAFETY INFORMATION

- Do not exceed the maximum total weight capacity of **265 lbs** (evenly distributed).
- Each individual shelf has a maximum weight capacity of **66 lbs**.
- Ensure the shelving unit is placed on a flat, stable surface to prevent tipping.
- Always distribute weight evenly across shelves to maintain stability.
- Keep children and pets away from the unit during assembly.
- Do not climb on the shelving unit.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

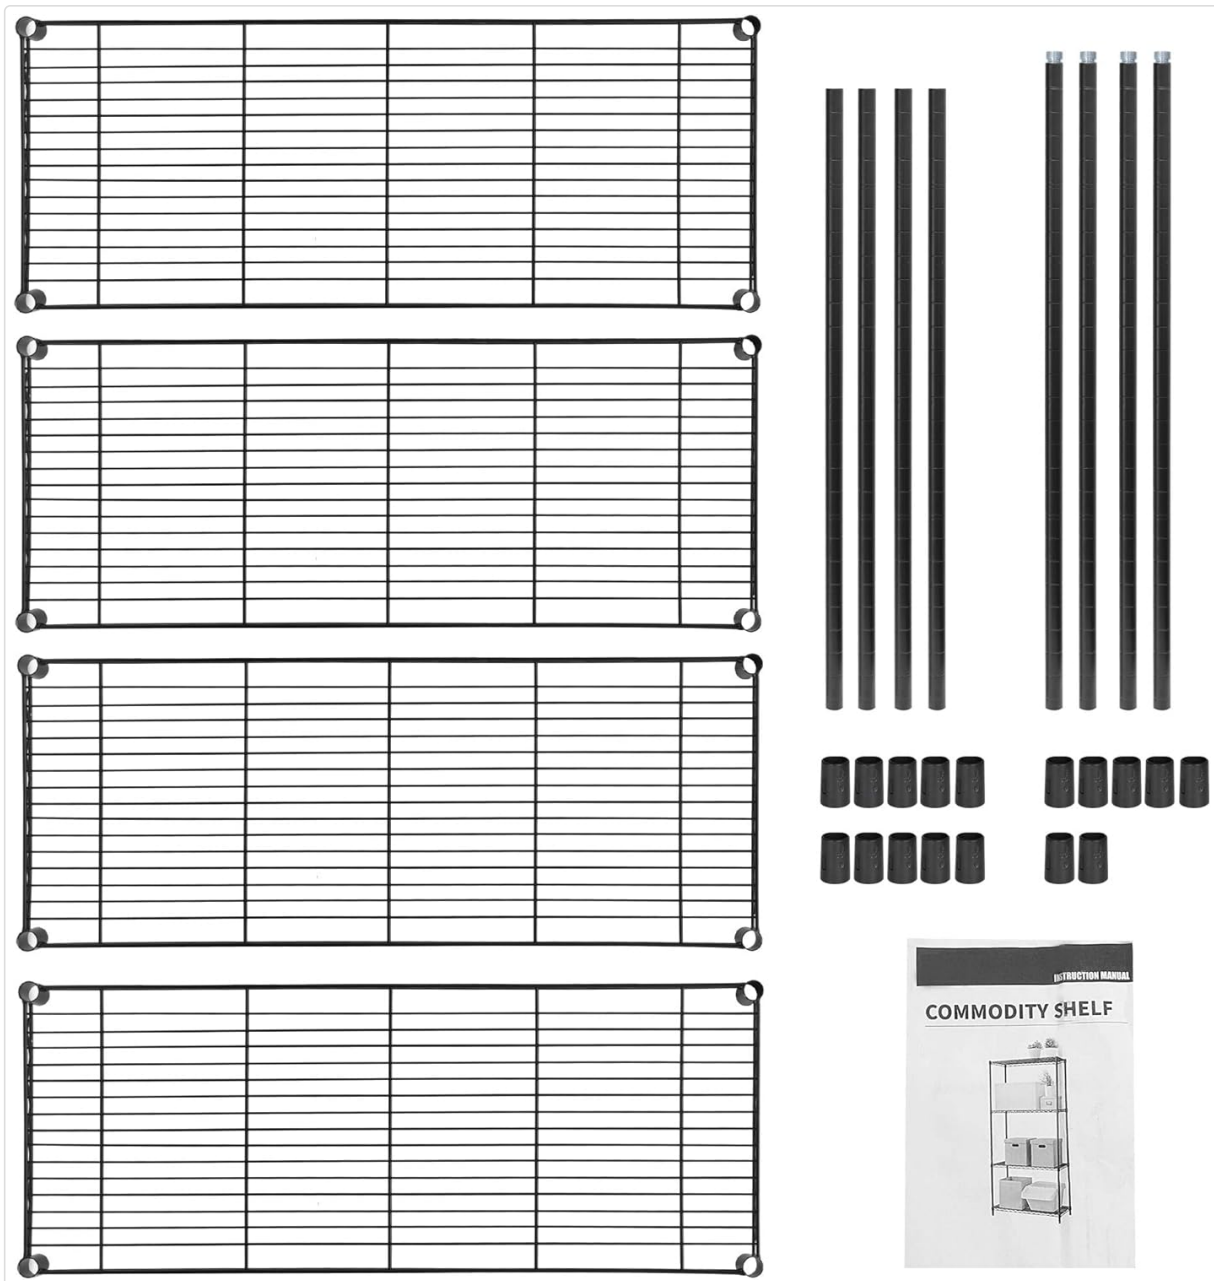


Image: All components of the ZENY 4-Shelf Adjustable Heavy Duty Storage Shelving Unit, including four wire shelves, eight pole sections, plastic sleeves, and leveling feet.

- Wire Shelves (4)
- Upper Pole Sections (8)
- Lower Pole Sections (8)
- Plastic Sleeves (32 + spares)
- Leveling Feet (4)

SETUP AND ASSEMBLY

No tools are required for the assembly of this shelving unit. Follow these steps carefully:

1. **Attach Leveling Feet:** Screw the four leveling feet into the threaded inserts at the bottom of the lower pole sections.
2. **Connect Pole Sections:** Connect one upper pole section to one lower pole section by screwing them together. Repeat for all four sets of poles.

3. **Position Plastic Sleeves:** On each of the four assembled poles, snap two plastic sleeves into the grooves at the desired height for your bottom shelf. Ensure the arrow on each plastic sleeve points **UPWARDS**. These sleeves are tapered and must be oriented correctly for the shelf to seat properly.



Image: A person's hands demonstrating how to snap the plastic sleeves onto the pole at the desired height.



Image: A close-up view of the plastic sleeves securely attached to a pole, highlighting the upward arrow for correct orientation.

- 4. Install Bottom Shelf:** Carefully slide one wire shelf down over the four poles, ensuring that the corner collars of the shelf fit snugly over the plastic sleeves. Apply even pressure to all four corners until the shelf is fully seated and stable.



Image: A wire shelf being lowered onto the four vertical poles, aligning with the plastic sleeves.



Image: A wire shelf fully seated and stable on the poles, with the corner collars resting on the plastic sleeves.

5. **Install Remaining Shelves:** Repeat step 3 and 4 for the remaining three shelves, adjusting the height of the plastic sleeves as desired for each shelf.
6. **Final Check:** Once all shelves are installed, gently push down on each shelf to ensure it is securely locked onto the plastic sleeves. Check the overall stability of the unit.



Image: A fully assembled ZENY 4-Shelf Adjustable Heavy Duty Storage Shelving Unit, ready for use.

OPERATING INSTRUCTIONS

Adjusting Shelf Height

The wire shelves are adjustable in 1-inch increments, allowing you to customize the spacing to fit your storage needs.

1. Remove all items from the shelf you wish to adjust.
2. Lift the shelf slightly to disengage it from the plastic sleeves.
3. Remove the plastic sleeves from the poles.
4. Re-position the plastic sleeves at the desired new height, ensuring the arrows point upwards and they are at the same level on all four poles.
5. Carefully lower the shelf back onto the re-positioned plastic sleeves, ensuring it locks securely into place.



Image: A diagram illustrating the process of adjusting the height of a wire shelf by repositioning the plastic sleeves on the poles.

Leveling the Unit

The shelving unit is equipped with four leveling feet to ensure stability on uneven surfaces.

- Once the unit is assembled and placed in its desired location, check for any wobbling.
- Identify the corner(s) that need adjustment.
- Turn the leveling foot clockwise to lower that corner or counter-clockwise to raise it until the unit is stable and level.

MAINTENANCE

- **Cleaning:** Wipe the shelving unit with a dry cloth to remove dust and dirt. Avoid using abrasive cleaners or harsh chemicals, as these may damage the finish.
- **Regular Inspection:** Periodically check all connections and ensure shelves are securely seated on the plastic sleeves. Verify that the leveling feet are properly adjusted and the unit remains stable.
- **Weight Distribution:** Always ensure weight is distributed evenly across the shelves and does not exceed the stated weight capacities.

TROUBLESHOOTING

Issue: Unit is wobbly or unstable.

Solution:

- Ensure the leveling feet are properly adjusted to compensate for uneven flooring.
- Verify that all shelves are fully seated and locked onto the plastic sleeves. Apply downward pressure on each corner of the shelf to ensure it clicks into place.
- Check that the plastic sleeves are installed with the arrow pointing upwards, as incorrect orientation can prevent proper seating.

Issue: Difficulty installing shelves or plastic sleeves.

Solution:

- Ensure the plastic sleeves are snapped firmly into the grooves on the poles.
- Confirm the plastic sleeves are oriented correctly with the arrow pointing upwards. The tapered design requires this for the shelf collars to slide over them.
- When installing a shelf, ensure all four corner collars are aligned with the poles and sleeves before applying even downward pressure.

SPECIFICATIONS

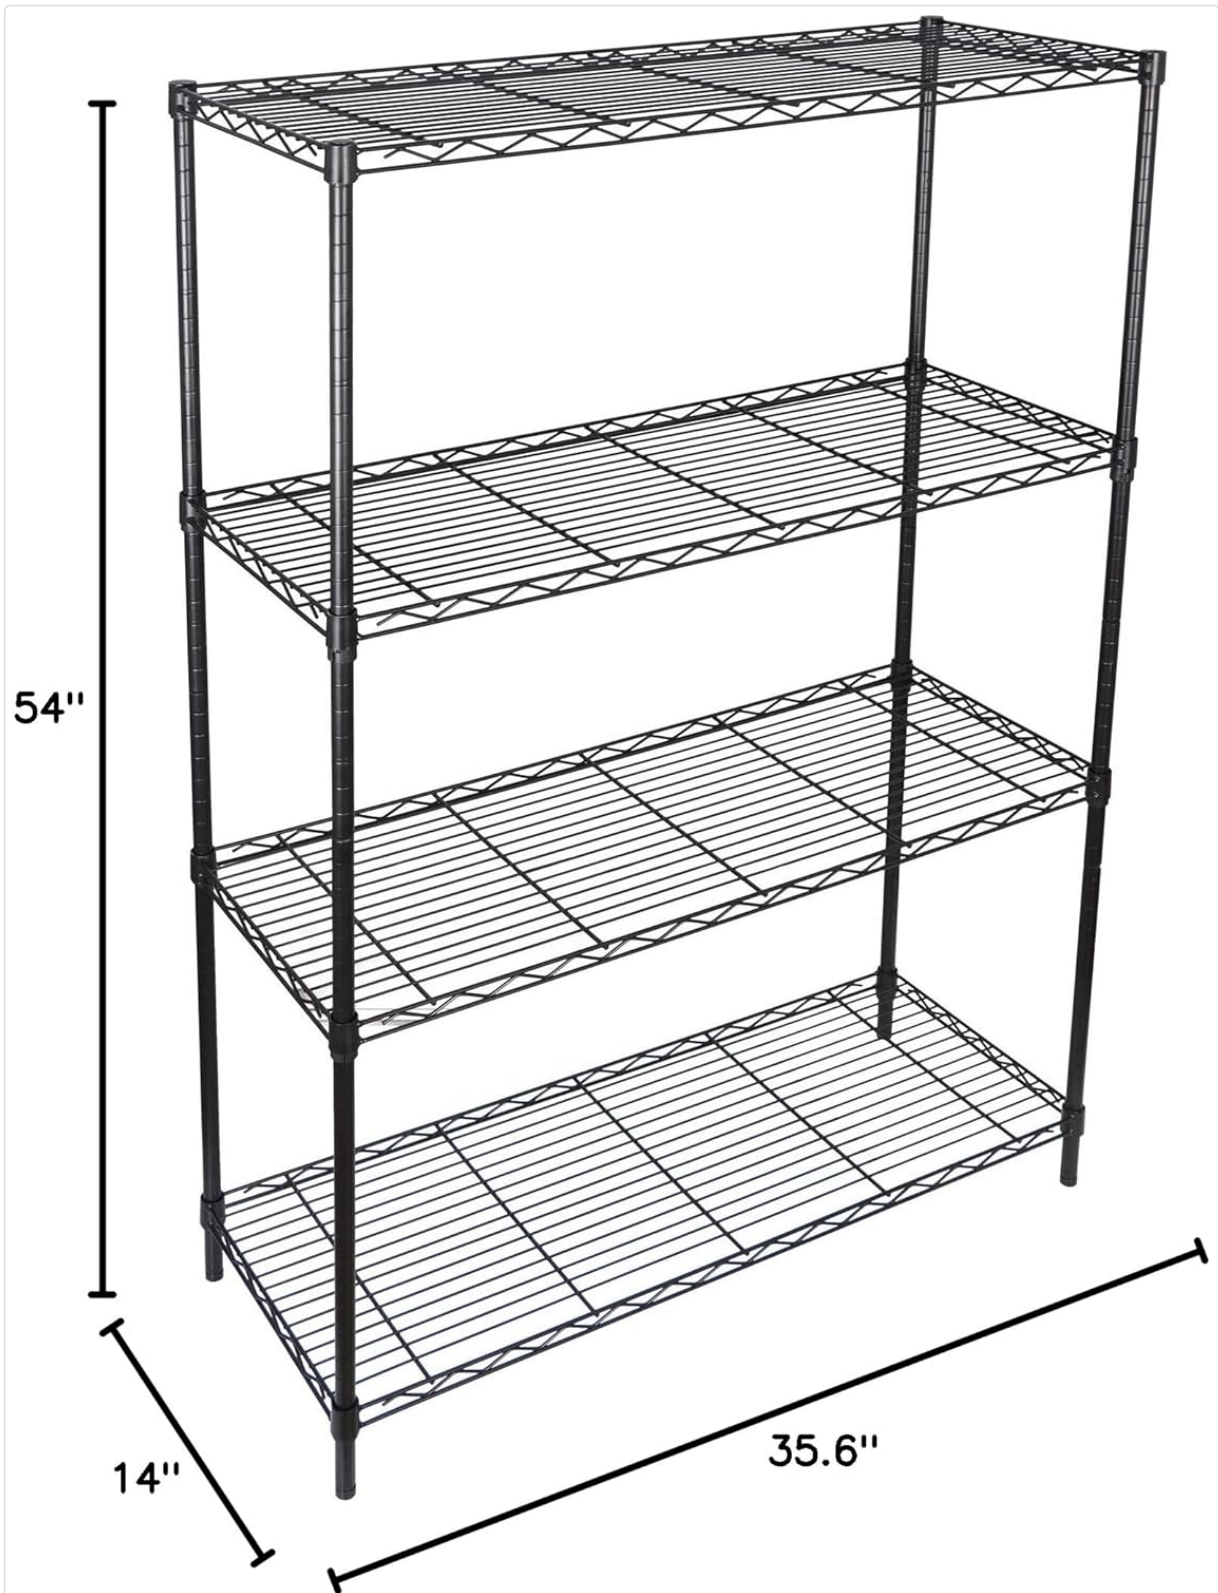


Image: The ZENY 4-Shelf Adjustable Heavy Duty Storage Shelving Unit with its overall dimensions (35.6" L x 14" W x 54" H) clearly indicated.

Model	B08FXCBDFN
Overall Dimensions	35.6" L x 14" W x 54" H
Number of Shelves	4
Material	Alloy Steel, Metal
Finish	Black-coated chrome, Powder Coated
Total Weight Capacity	265 lbs (evenly distributed)
Per Shelf Weight Capacity	66 lbs
Shelf Adjustment	1-inch increments
Assembly Required	Yes (Tool-free)
Special Features	Adjustable shelves, Leveling feet

WARRANTY INFORMATION

No specific warranty information is provided in the product details. For inquiries regarding warranty coverage, please contact the manufacturer directly.

SUPPORT

For further assistance, questions, or to report missing/damaged parts, please contact ZENY customer support. Refer to your purchase documentation or the ZENY official website for contact details.