

[manuals.plus](#) /› [VINABTY](#) /› [VINABTY CT-90405 Replacement Remote Control User Manual for Toshiba TVs](#)

VINABTY CT-90405

VINABTY CT-90405 Replacement Remote Control User Manual

Model: CT-90405 | Brand: VINABTY

INTRODUCTION

This manual provides instructions for the VINABTY CT-90405 replacement remote control, designed for use with various Toshiba television models. This remote control offers a direct replacement solution, requiring no complex programming or setup. Simply insert batteries to begin operation.

SETUP

1. Installing Batteries

The VINABTY CT-90405 remote control operates on two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once the batteries are installed, the remote control is ready for immediate use with compatible Toshiba TV models. No additional programming is required.





Image: Angled view of the VINABTY CT-90405 remote control, showing its ergonomic design and the battery compartment on the underside.

OPERATING INSTRUCTIONS

The VINABTY CT-90405 remote control features an ergonomic design for comfortable handling and provides a stable, long-distance transmission for reliable operation. Below is a guide to its primary functions:



Image: Front view of the VINABTY CT-90405 remote control, displaying all buttons and their labels.

Button Functions:

- **Power (Red Button):** Turns the television on or off.
- **3D:** Activates or deactivates 3D mode (if supported by TV).
- **CD/II:** Switches between audio languages or sound modes.
- **Subtitle:** Displays or hides subtitles.
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **AD (Audio Description):** Toggles audio description for visually impaired viewers.
- **Quick:** Accesses a quick menu or frequently used settings.
- **Volume (+/-):** Increases or decreases the volume level.
- **Channel (P^/P^):** Changes the television channel up or down.

- **Mute (Speaker with cross):** Mutes or unmutes the television audio.
- **Text:** Opens or closes teletext.
- **List:** Displays a list of channels or recorded programs.
- **Menu:** Opens the main menu of the television.
- **Guide:** Accesses the electronic program guide (EPG).
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menus and options.
- **OK:** Confirms selections in menus.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Closes the current menu or application.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback functions.
- **Colored Buttons (Red, Green, Yellow, Blue):** Access specific functions within menus or applications, often indicated on-screen.
- **REC (Record):** Initiates recording (if supported by TV and connected device).

MAINTENANCE

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or inconsistent. Always use new AAA batteries and ensure correct polarity. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the remote.

TROUBLESHOOTING

- **Remote Control Not Responding:**
 - Check if the batteries are correctly inserted with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Remove any obstructions.
 - Confirm that the remote control is pointed directly at the TV.
- **Limited Operating Range:**
 - This usually indicates low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.
- **Certain Functions Not Working:**
 - Verify that your Toshiba TV model is listed as compatible with the CT-90405 remote control.
 - Some advanced functions may be specific to the original TV remote or require TV menu navigation.

SPECIFICATIONS

Brand	VINABTY
Model Number	CT-90405
Color	Black
Connectivity Technology	Infrared (IR)
Special Features	No programming required, Ergonomic design
Controller Type	Button Control
Number of Buttons	Approximately 50
Maximum Range	10 Meters
Compatible Devices	Toshiba TV models including: 32TL933, 32TL963G, 32UL975G, 40TL933F, 40TL933G, 40TL938, 40TL938F, 40TL938G, 40TL939, 40TL963G, 40TL966, 40TL968, 40TL968G, 40UL975G, 42VL963G, 42XL975, 42XL975G, 46TL933F, 46TL933G, 46TL938F, 46TL938G, 46TL966G, 46TL968G, 46UL975G, 47VL963G, 47WL968B, 47WL968F, 47XL975G, 47YL985G, 55VL963, 55XL975G, and many other Toshiba TV models.

WARRANTY INFORMATION

This VINABTY CT-90405 remote control comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects and ensures excellent return service. Please retain your proof of purchase for warranty claims.

SUPPORT

If you encounter any issues or require assistance with your VINABTY CT-90405 remote control, please do not hesitate to contact our customer support. For the quickest resolution, please provide your purchase details and a description of the issue.

You can typically find contact information for the seller or manufacturer on your purchase receipt or the platform where the product was acquired.